



Montaažiskeem / Mounting Instructions / Монтажная схема

Peugeot Partner / Citroën Berlingo 2011-

Art. 826292


Põhjakaitsse

Skid plate

Защита



- | | |
|--|---|
| 1. Põhjakaitsse / skid plate / защита | 1 |
| 2. Kronstein / bracket / кронштейн | 1 |
| 3. Põlt / bolt / болт M8x30 mm | 1 |
| 4. Mutter / nut / гайка M6 DIN 934 | 1 |
| 5. Mutter / nut / гайка M8 DIN 985 | 1 |
| 6. Seib / washer / шайба 6,4x18x1,6 mm | 1 |
| 7. Seib / washer / шайба 8,4x16x1,6 mm | 2 |

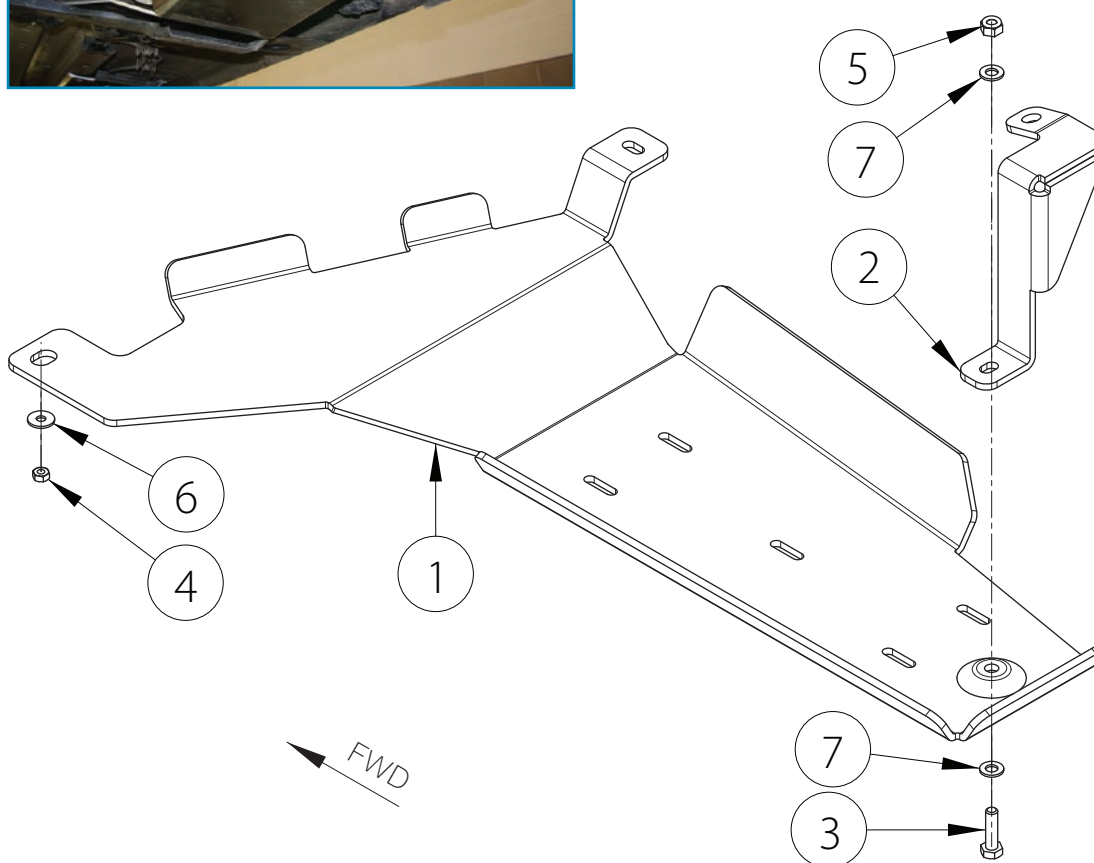

Vajalikud tööriistad / Required Tools / Необходимые инструменты






Pilt 1 / Pic. 1 / Рис. 1



Pilt 2 / Pic. 2 / Рис. 2



Pilt 3 / Pic. 3 / Рис. 3

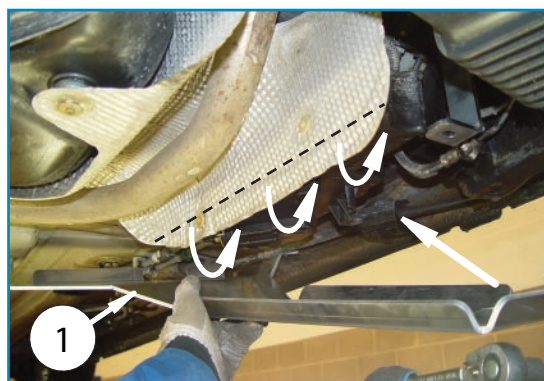

Pilt 4 / Pic. 4 / Рис. 4



Pilt 5 / Pic. 5 / Рис. 5



Pilt 6 / Pic. 6 / Рис. 6





Pilt 7 / Pic. 7 / Рис. 7



Pilt 8 / Pic. 8 / Рис. 8

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 80x735x445 mm.
- Kaal / Weight / Масса: 2,9 kg.
- Paigaldusaeg / Time of mounting / Время установки: 30 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:

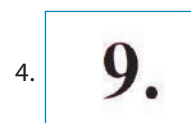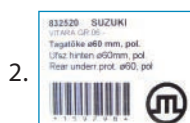

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества