


Peugeot Boxer/Citroen Jumper/Fiat Ducato 07-

Mounting instructions

Art. 826310

Skid plate

Scan the QR code
for translated
instructions or visit
metec.ee/instructions

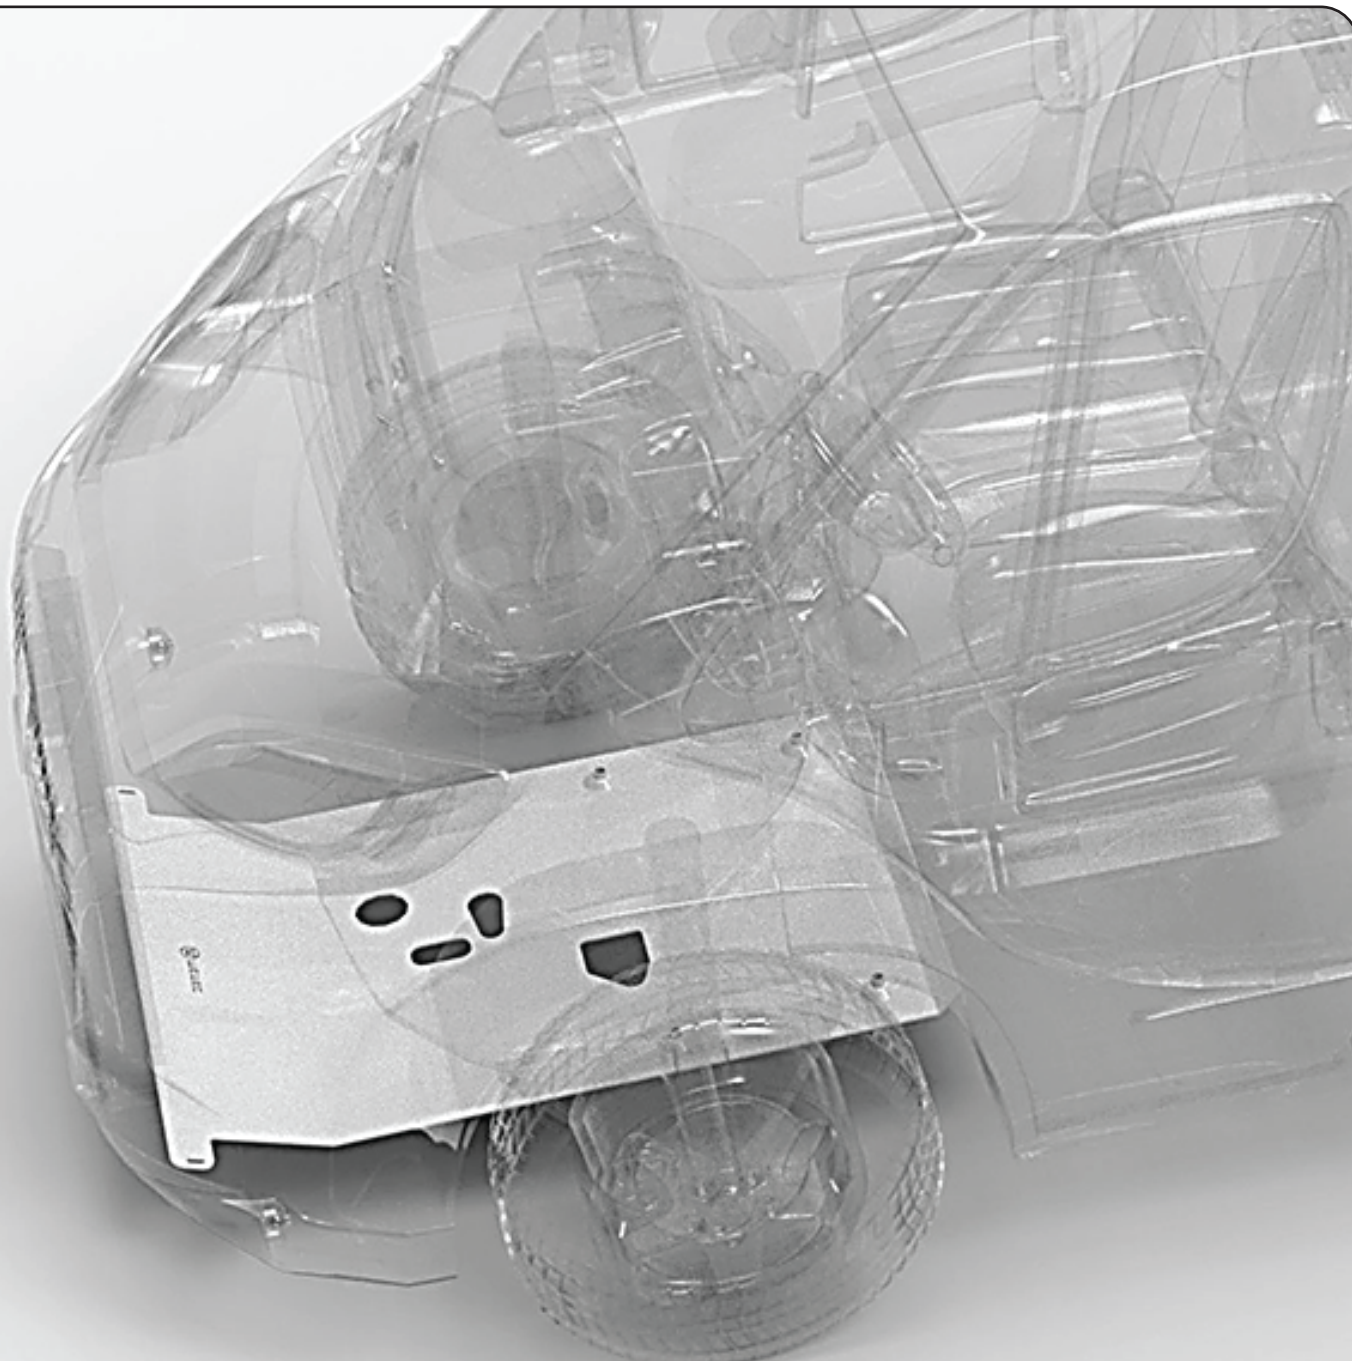

Weight: 17,1 kg

Time of mounting w/o wiring: 45 min

Required tools:



A2 / A4	Zn
M8 - 17 Nm	M8 - 24 Nm M10 - 47 Nm

Skid plate



Pos	Description	QTY
11.	Rivet nut M10x12 0.5-3.0Zn	1
12.	Flat Washer 8,4x16x1,6	8
13.	Flat Washer 8,4x24x2	6
14.	Flat Washer 10,5x30x2,5	2
15.	Spring washer A8	2
16.	Spring washer A10	2





NB!



To prevent cold welding, use cold weld grease or engine oil







Installation of the lights must be carried out by a qualified electrician only

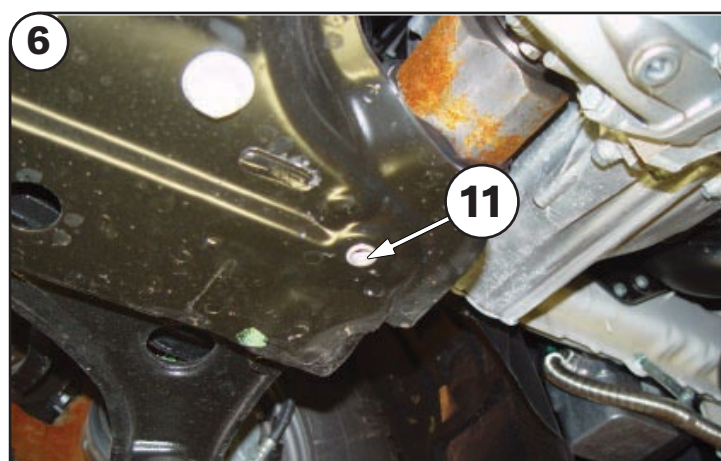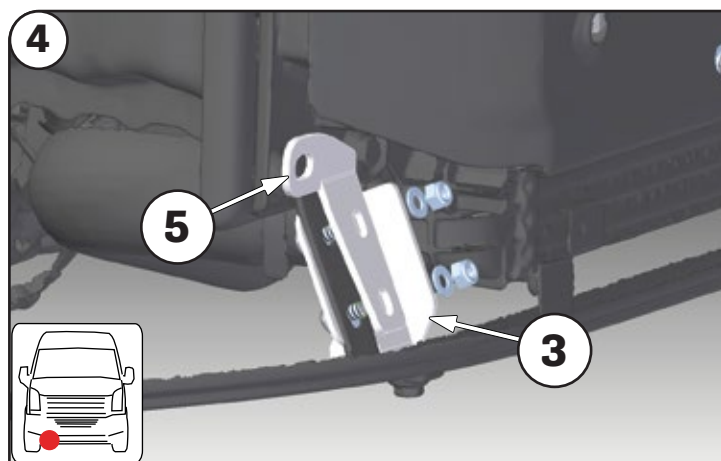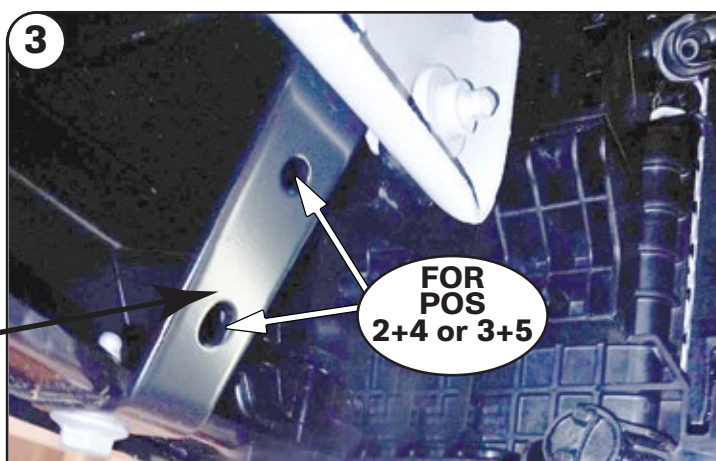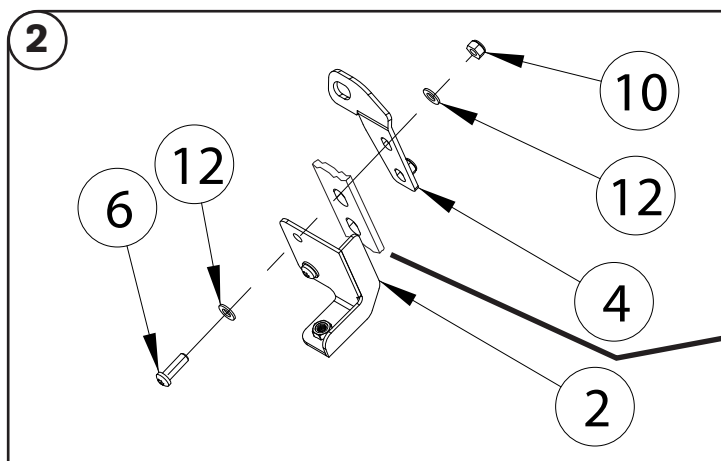

Peugeot Boxer/Citroen Jumper/Fiat Ducato 07-

Art. 826310

Skid plate

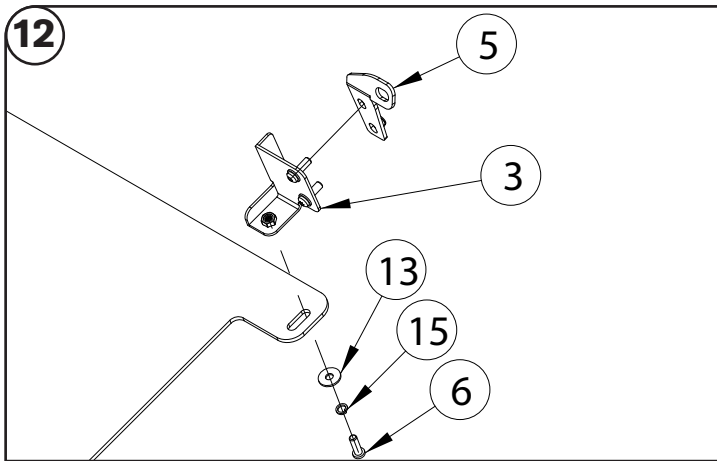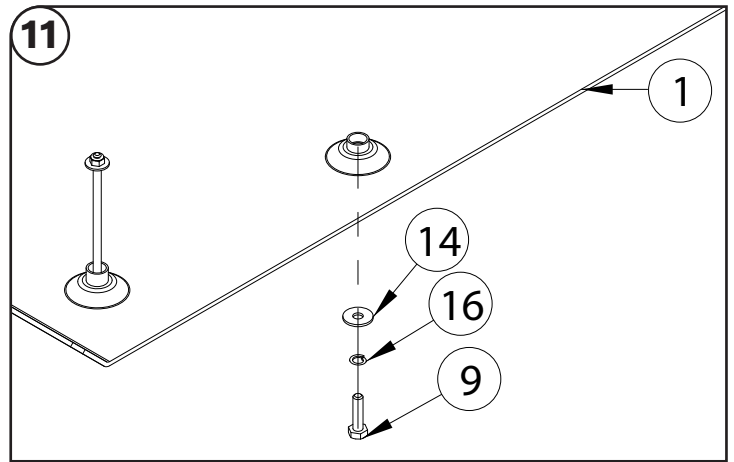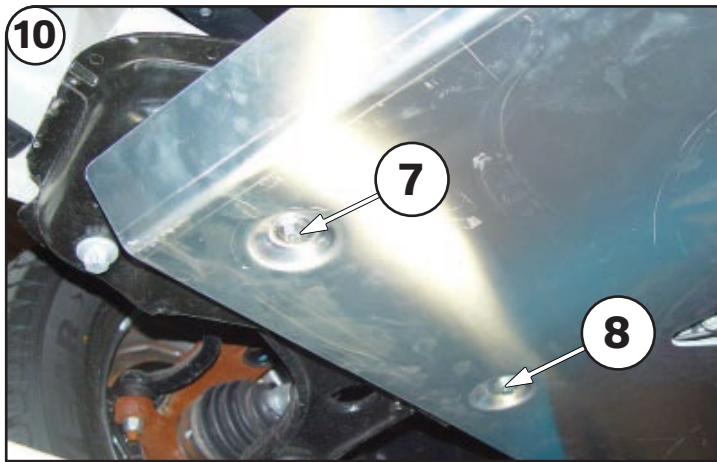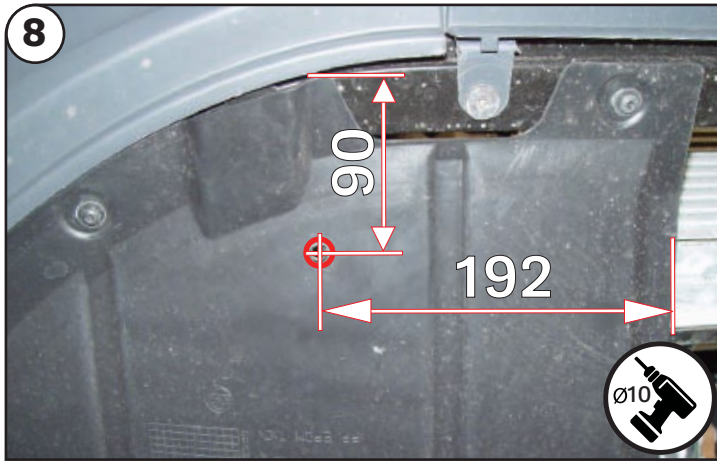

Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours



Clean the product twice a month to remove
dirt, salt, and debris that may cause surface
discoloration or rust spots

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resolution