




Citroen Berlingo 2018- / Opel Combo 2018- / Peugeot Rifter 2018- / Toyota Proace City 2020-

Mounting instructions

Art. 826470

Skid plate

Scan the QR code
for translated
instructions or visit
metec.ee/instructions

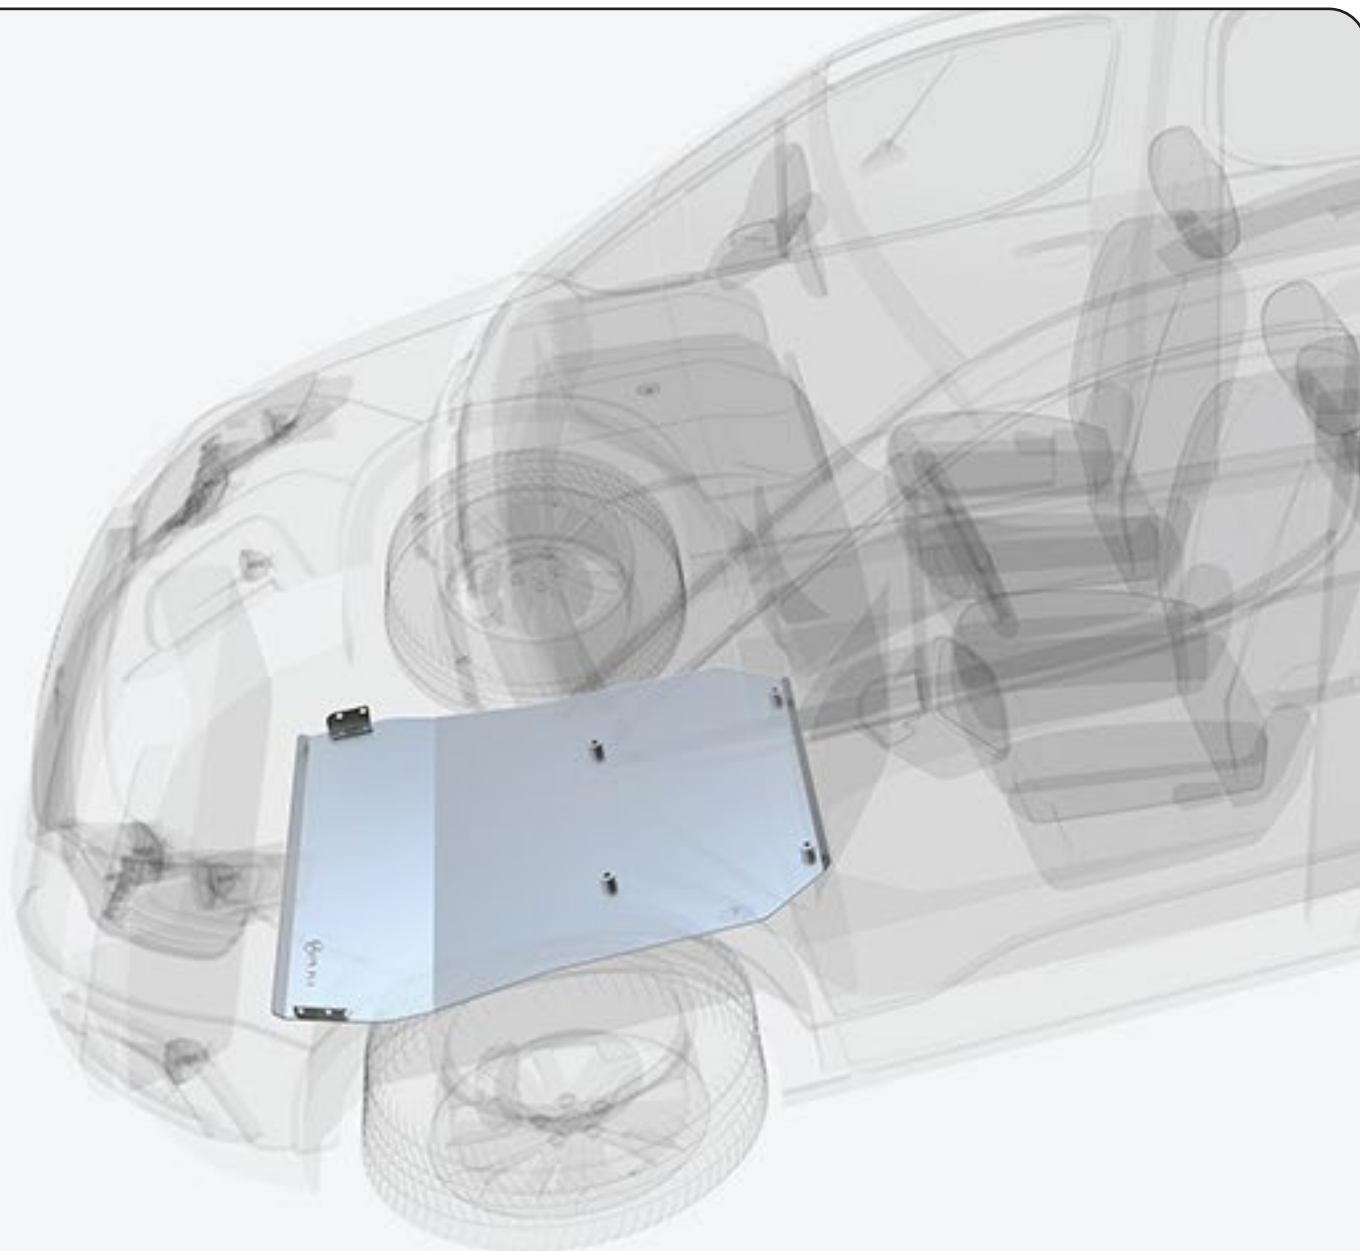

Weight: 15,5 kg (MPV); 15,9 kg (Cargo)

Time of mounting w/o wiring: 60 min


Required tools:



Zn		Zn 10.9
M6	- 9,8 Nm	M10 - 65 Nm
M8	- 24 Nm	
M10	- 47 Nm	

Art. 825470
Skid plate

Cargo models

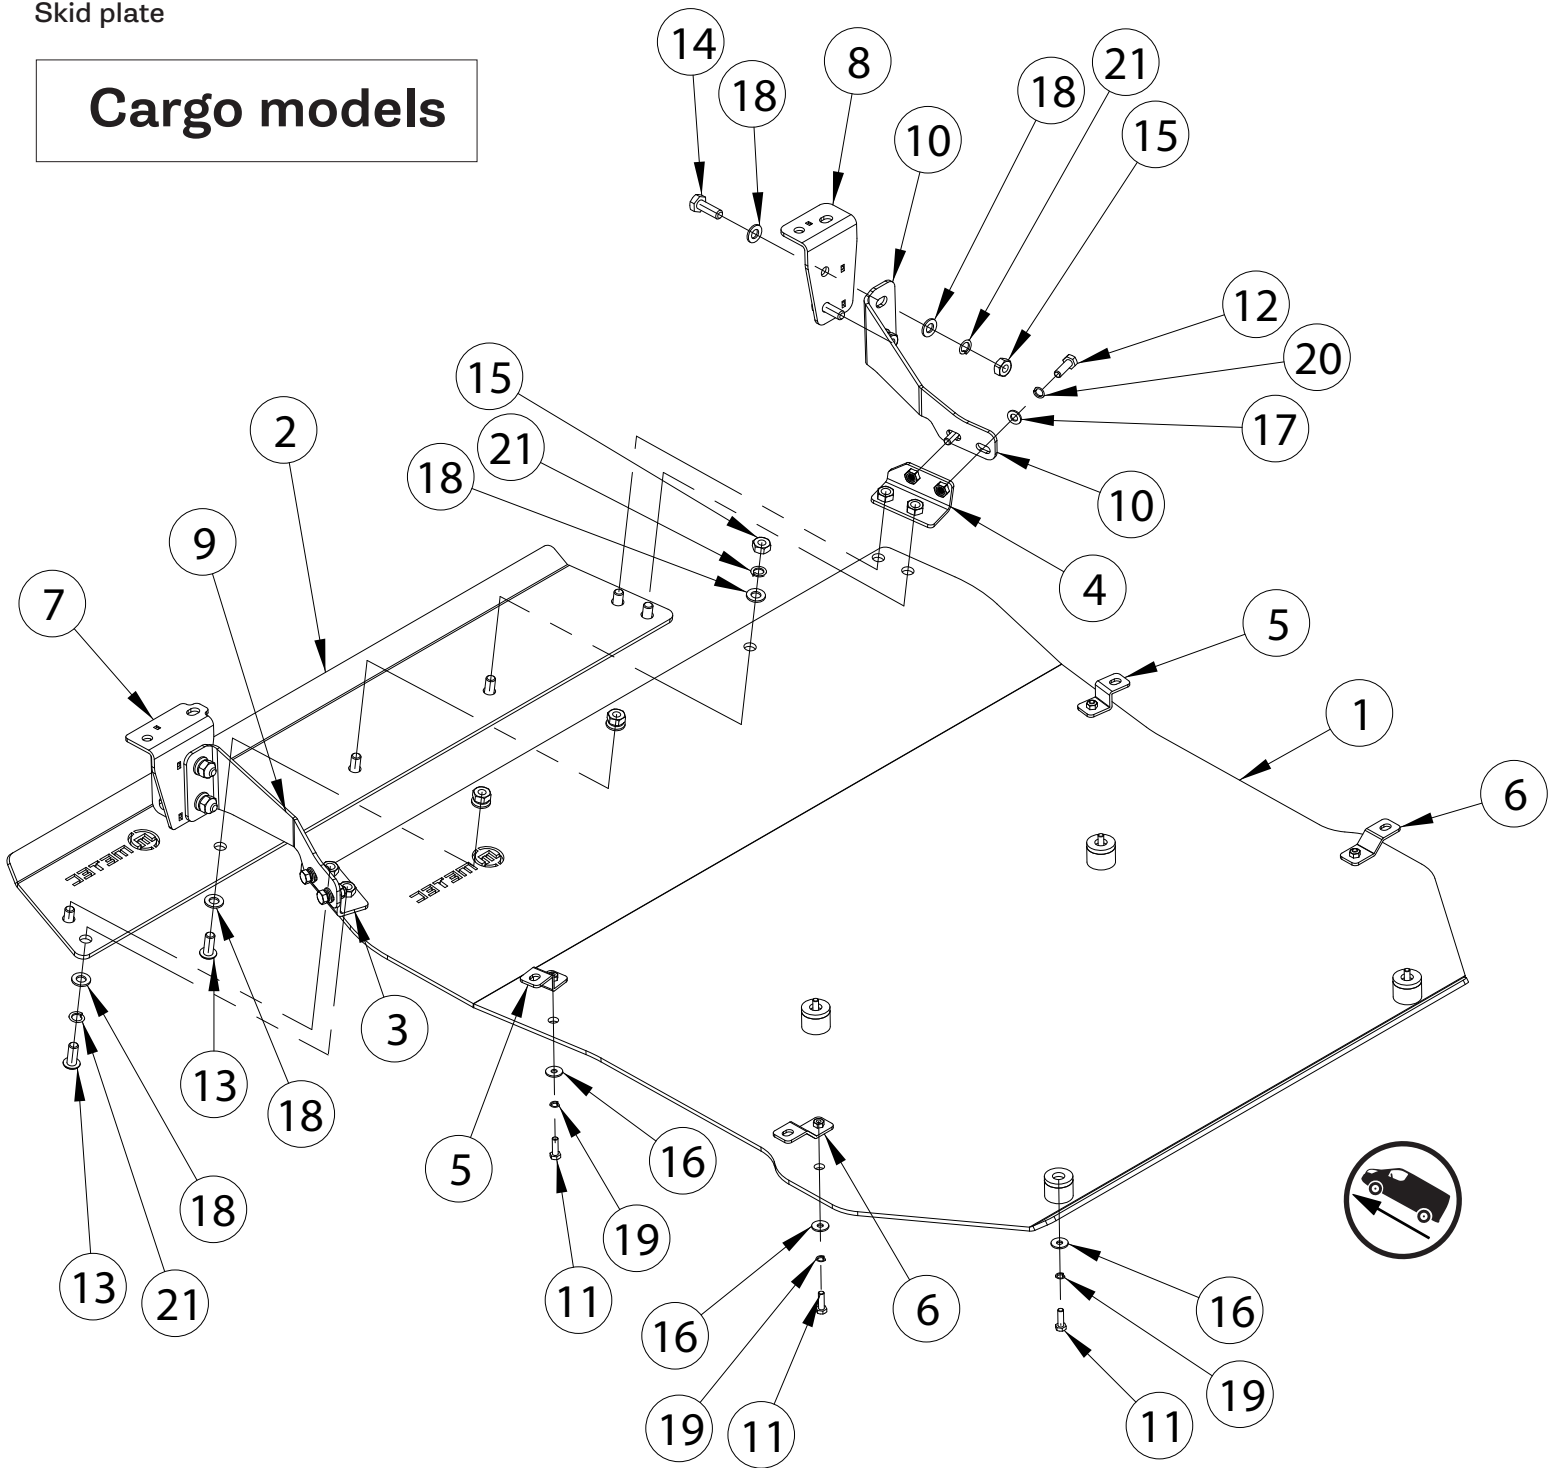


Pos	Description	QTY
1.	Skid plate	1
2.	Skid plate	1
3.	Bracket	1
4.	Bracket	1
5.	Angeled plate	2
6.	Angeled plate	2
7.	Bracket	1
8.	Bracket	1
9.	Bracket	1
10.	Bracket	1
11.	Bolt M6x20 DIN933-galZn	8

Pos	Description	QTY
12.	Bolt M8x25 DIN933-galZn	4
13.	Bolt M10x25 DIN933-galZn 10.9	7
14.	Bolt M10x30 DIN7380-galZn	4
15.	Nut M10 DIN934-galZn	7
16.	Flat Washer 6,4x18x1,6	8
17.	Flat Washer 8,4x16x1,6	4
18.	Flat Washer 10,5x20x2	18
19.	Spring washer A6	8
20.	Spring washer A8	4
21.	Spring washer A10	11

Art. 826470
Skid plate

MPV models

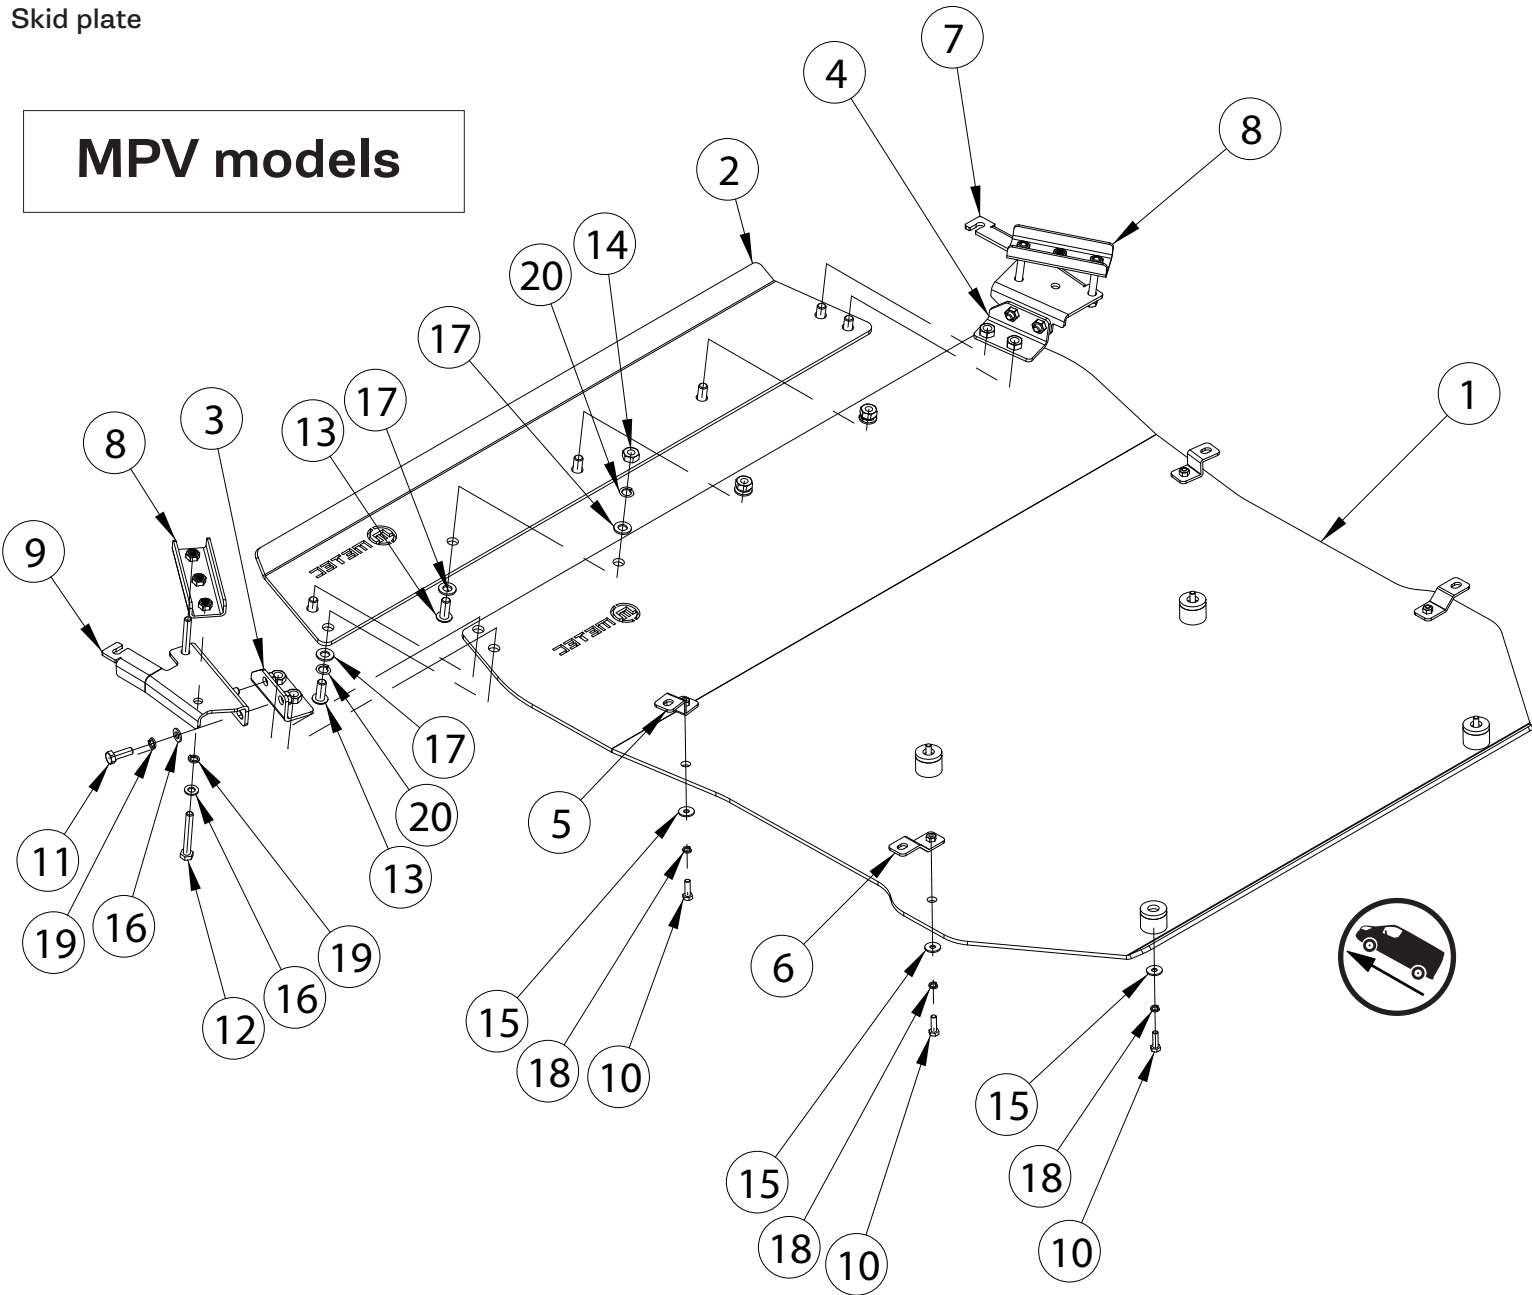

Pos	Description	QTY
1.	Skid plate	1
2.	Skid plate	1
3.	Bracket	1
4.	Bracket	1
5.	Angeled plate	2
6.	Angeled plate	2
7.	Bracket	1
8.	Angeled plate	2
9.	Bracket	1
10.	Bolt M6x20 DIN933-galZn	8

Pos	Description	QTY
11.	Bolt M8x25 DIN933-galZn	4
12.	Bolt M8x60 DIN933-galZn	4
13.	Bolt M10x25 DIN7380-galZn 10.9	7
14.	Nut M10 DIN934-galZn	3
15.	Flat Washer 6,4x18x1,6	8
16.	Flat Washer 8,4x16x1,6	8
17.	Flat Washer 10,5x20x2	10
18.	Spring washer A6	8
19.	Spring washer A8	8
20.	Spring washer A10	7

NB!



To prevent cold welding, use cold weld grease or engine oil



Installation of the lights must be carried out by a qualified electrician only

