



VW T5 L1&L2 2003-2015, T6 2016-


Art. 840312

Küljetorude BRACE - IT montaažikomplekt | Sidebars BRACE - IT, mounting kit | Боковая труба BRACE – IT, монтажный комплект | Flankenschutz BRACE - IT, Montagesatz



1. Kronstein / bracket / кронштейн / Konsole	1
2. Kronstein / bracket / кронштейн / Konsole	1
3. Kronstein / bracket / кронштейн / Konsole	1
4. Kronstein / bracket / кронштейн / Konsole	1
5. T-polt / T-bolt / T-болт / T-bolzen	4
6. Kronstein / bracket / кронштейн / Konsole	1
7. Kronstein / bracket / кронштейн / Konsole	1
8. Kronstein / bracket / кронштейн / Konsole	1
9. Kronstein / bracket / кронштейн / Konsole	1
10. Klamber / clamp / зажим / Schelle	4
11. Polt / bolt / болт / Bolzen M8x25	20
12. Mutter / nut / гайка / Mutter M8	20
13. Mutter / nut / гайка / Mutter M10	4
14. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	8
15. Seib / flat washer / шайба / Scheibe 8,4x24x2	32
16. Seib / flat washer / шайба / Scheibe 10,5x30x2,5	4
17. Vedruseib / spring washer / пружинная шайба / Federnscheibe A10	4
18. Brace-it paigaldamise abivahend / Brace-it installation tool / Инструмент для установки Brace-it / Brace-it-Installationswerkzeug	2


M8 - 25 Nm
M10 - 50 Nm

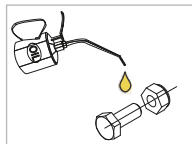

Kaal / Weight / Масса / Gewicht: 3,9 kg







Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 45 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



VW T5 L1&L2 2003-2015, T6 2016-


Küljetoode BRACE - IT montaažikomplekt | Sidebars BRACE - IT, mounting kit | Боковая труба BRACE – IT, монтажный комплект | Flankenschutz BRACE - IT, Montagesatz

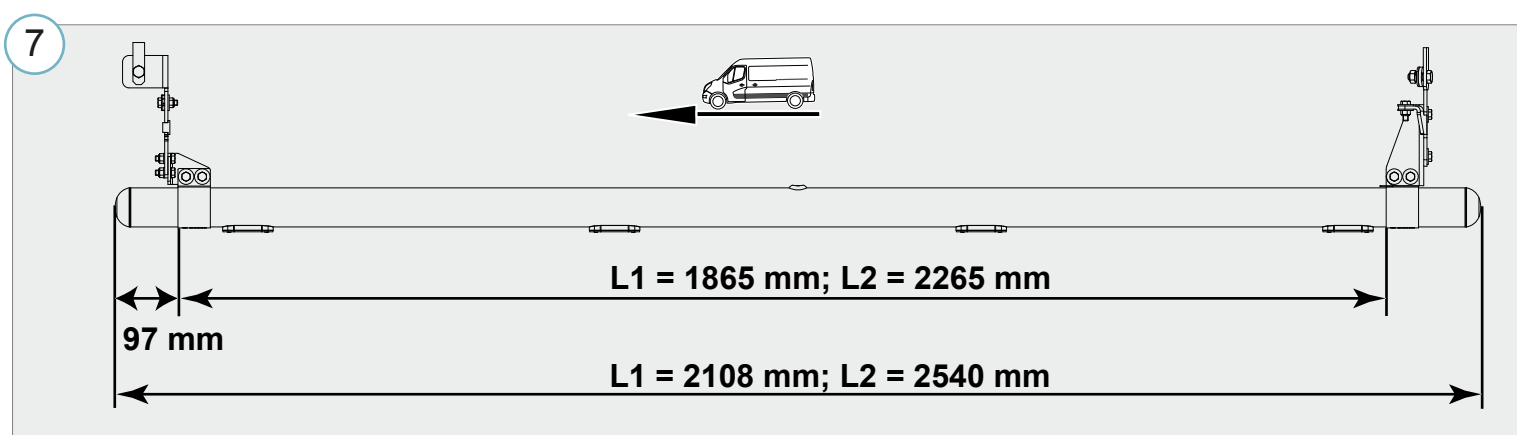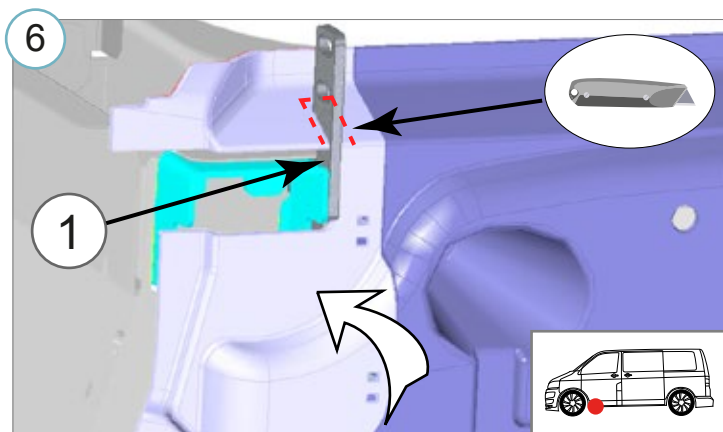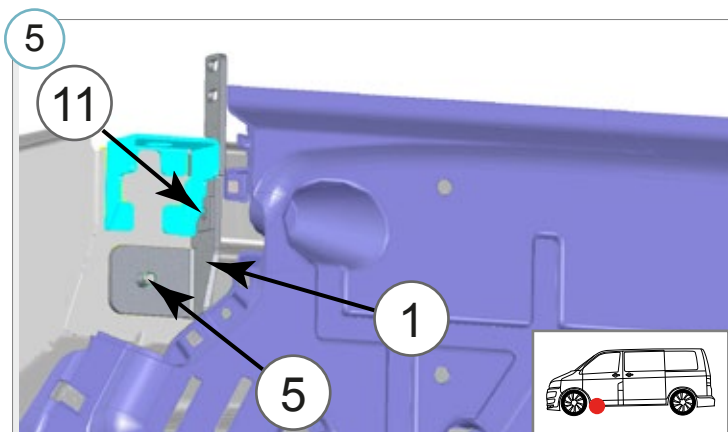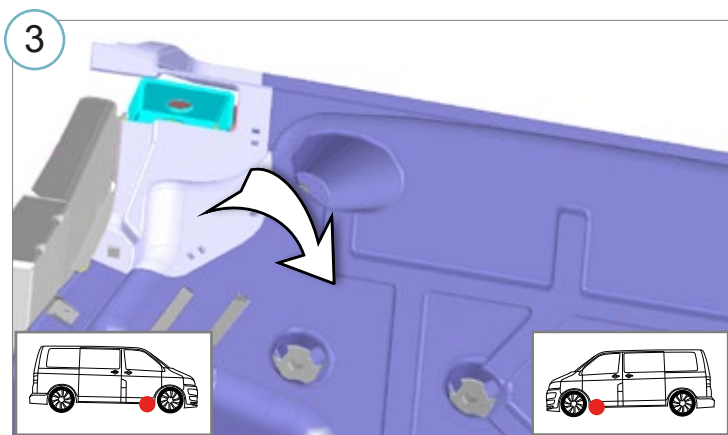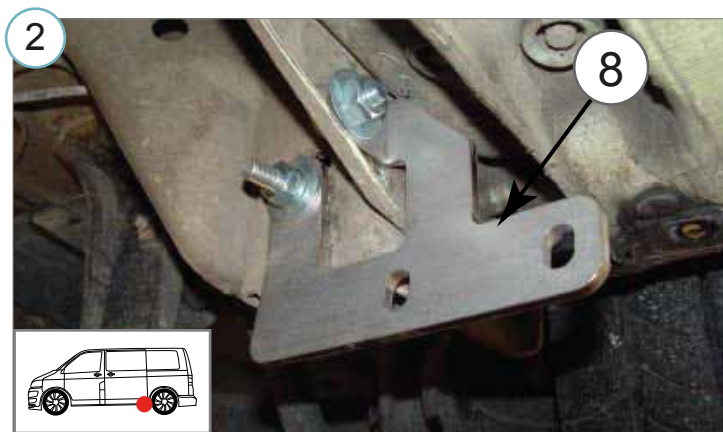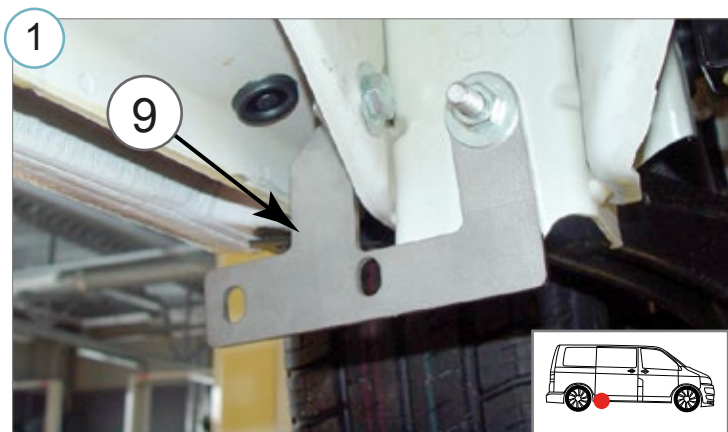


VW T5 L1&L2 2003-2015, T6 2016-

Küljetorude BRACE - IT montaažikomplekt | Sidebars BRACE - IT, mounting kit | Боковая труба BRACE – IT, монтажный комплект | Flankenschutz BRACE - IT, Montagesatz

8

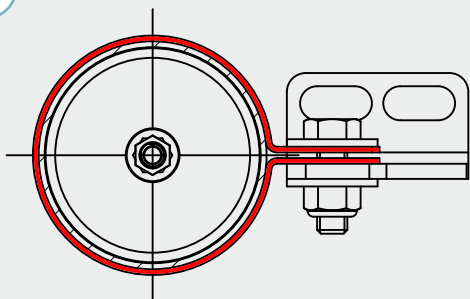

9

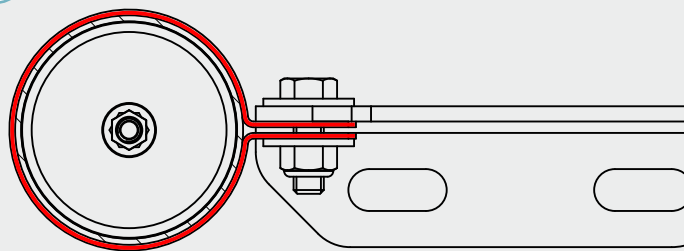

10


Klambrit paigaldades ära kriimusta toru!

Do not scratch the tube while putting on the clamps!

Не повредить поверхность при монтаже зажима!

Nicht die Oberfläche beschädigen während der Installation die Schellen!

11

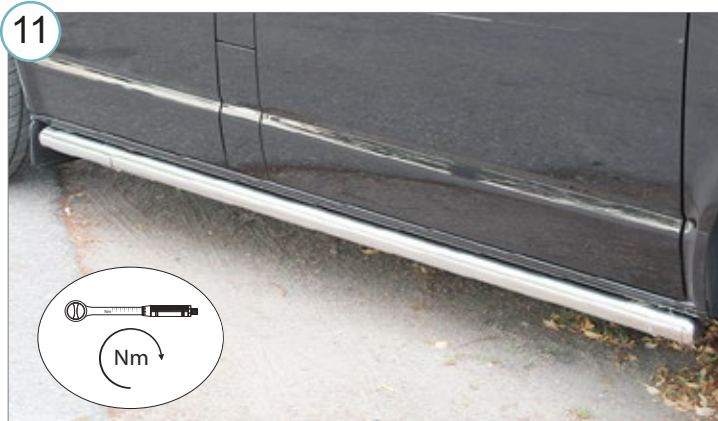

12


Elektriühendused teostada kvalifitseeritud autoelektriku poolt

Installation of the lights can be carried out by qualified electrician only


Монтаж огней может быть выполнено только квалифицированным электриком

Die Installation der Lichter können durchgeführt werden durch Elektrofachkraft

13

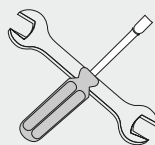

10 000 km

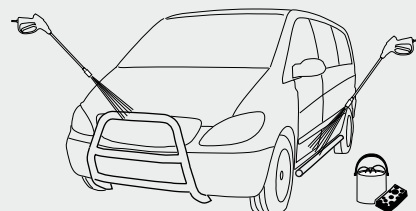

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

