



Mercedes-Benz V-Klasse & VITO 2014-2019; 2019-

Art. 818715

Laternakandur | Lamp holder | Носител фар | Scheinwerferbügel



1. Laternakandur / lamp holder / носител фар / Scheinwerferbügel	1
2. Kronstein / bracket / кронштейн / Konsole	1
3. Kronstein / bracket / кронштейн / Konsole	1
4. Puks / bushing / букса / Buchse	4
5. Puks / bushing / букса / Buchse	4
6. Seib / flat washer / шайба / Scheibe 8,4x24x2	5
7. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	6
8. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	4
9. Polt / bolt / болт / Bolzen M8x100	4
10. Mutter / nut / гайка / Mutter M8	4
11. Polt / bolt / болт / Bolzen M8x20	1
12. Polt / bolt / болт / Bolzen M8x40	4
13. Vinkel / angeled plate / угольник / winkel	1
14. Vinkel / angeled plate / угольник / winkel	1
15. Polt / bolt / болт / Bolzen M8x25	2
16. T-polt / T-bolt / T-болт / T-bolzen	2


**MM V-Klasse 2014-2019 &
VITO 2014-2019 &
VITO 2019- (except with engine OM654)**

2 - 3

**MM V-Klasse 2019- &
VITO 2019- (with engine OM654)**

4 - 5

M8 - 25 Nm

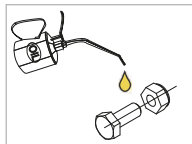

NB!

6

Kaal / Weight / Масса / Gewicht: 5,5 kg





Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 90 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge










Mercedes-Benz V-Klasse 2014-2019 & VITO 2014-2019; 2019- (except with engine OM654)

Laternakanduri paigaldamine | Installing the lamp holder | Установка носителя фар | Installieren Sie die Lampenfassu

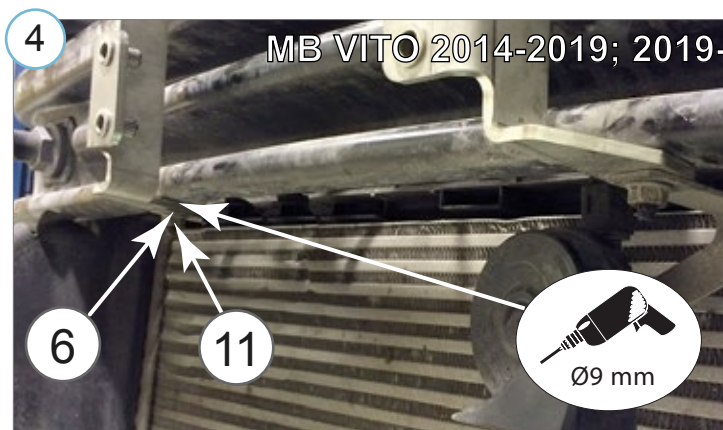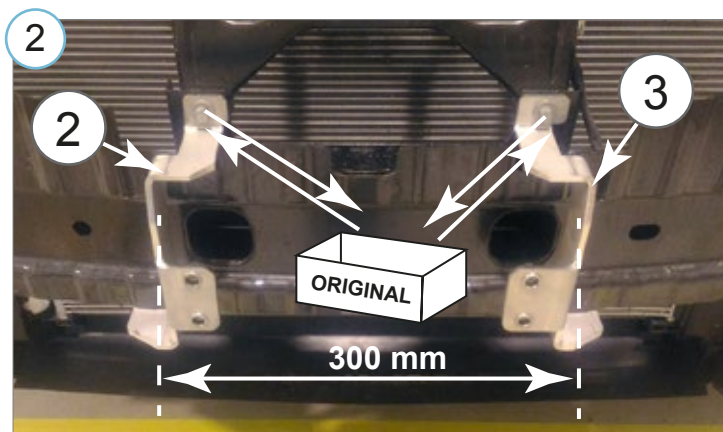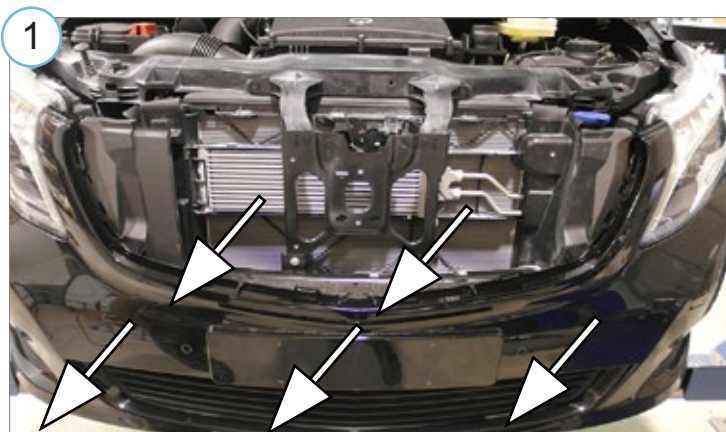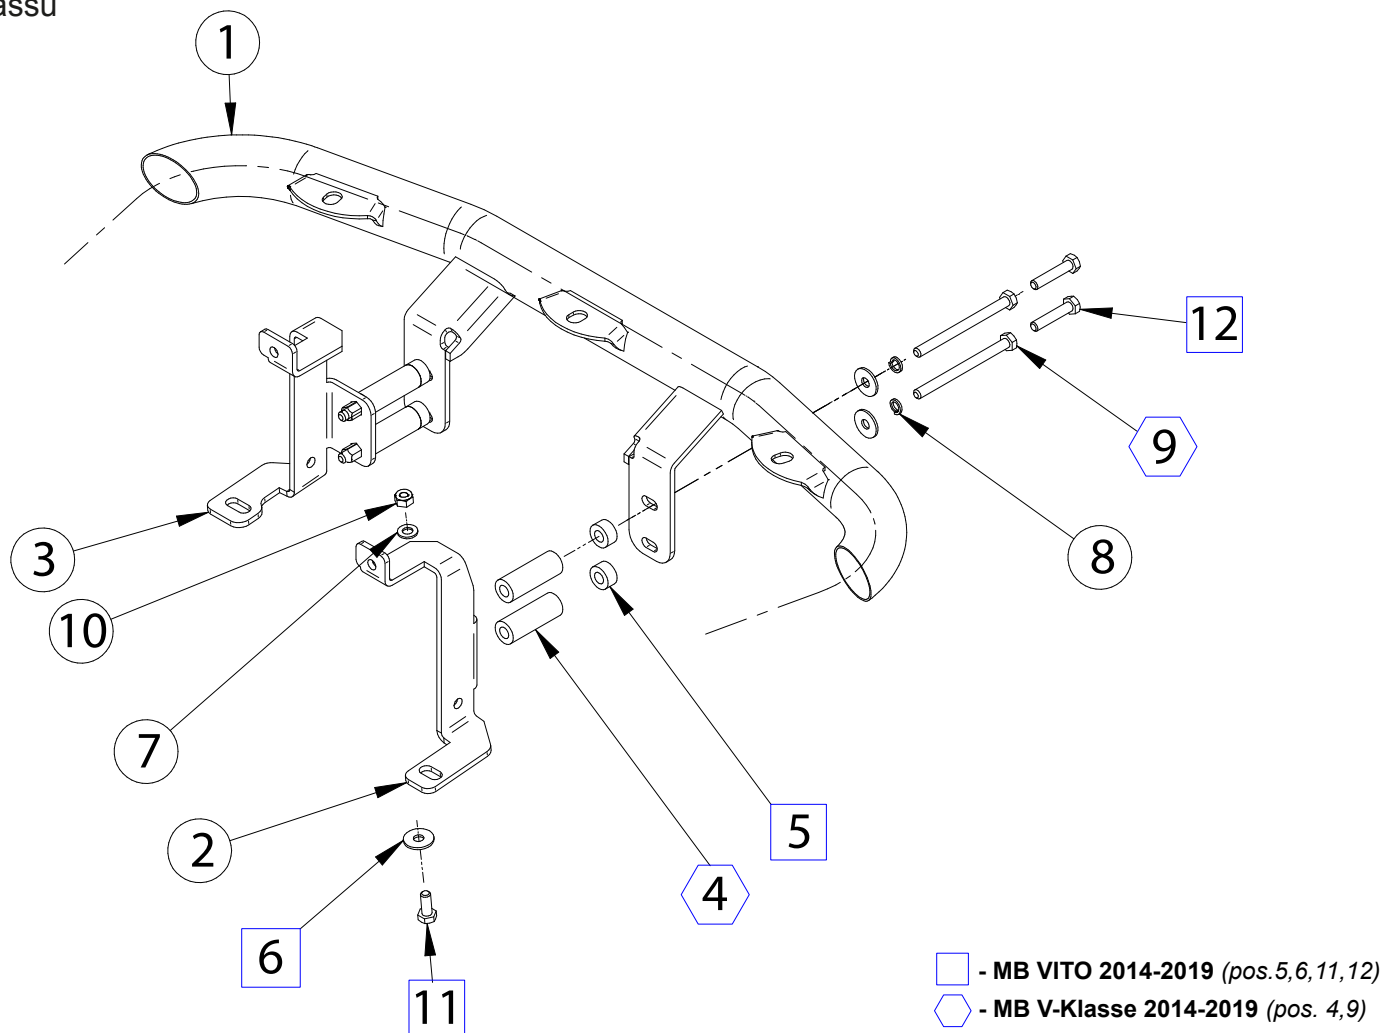






Mercedes-Benz V-Klasse 2014-2019 & VITO 2014-2019; 2019- (except with engine OM654)

Laternakanduri paigaldamine | Installing the lamp holder | Установка носителя фар | Installieren Sie die Lampenfassung

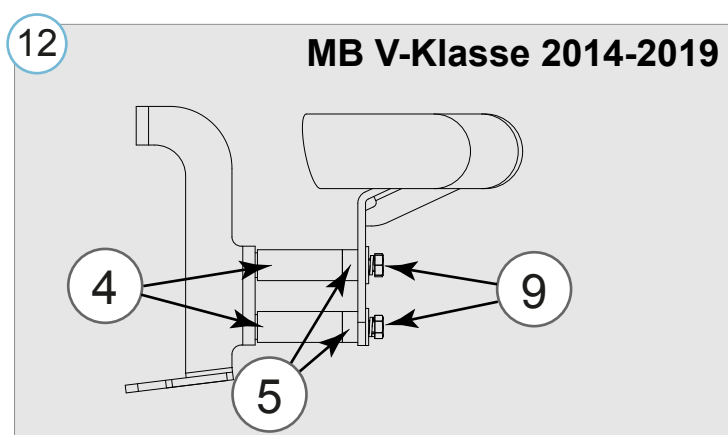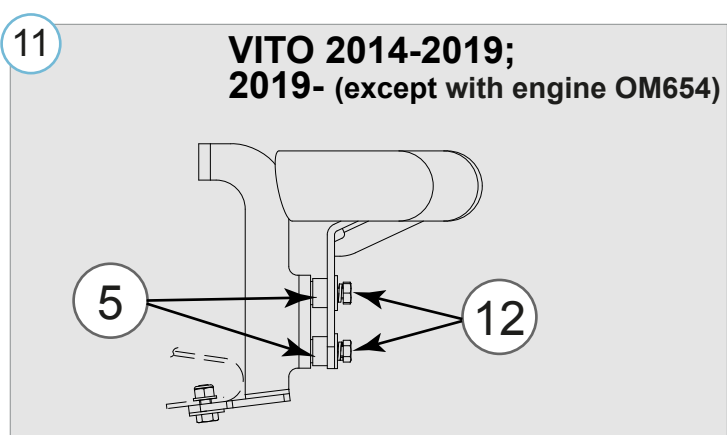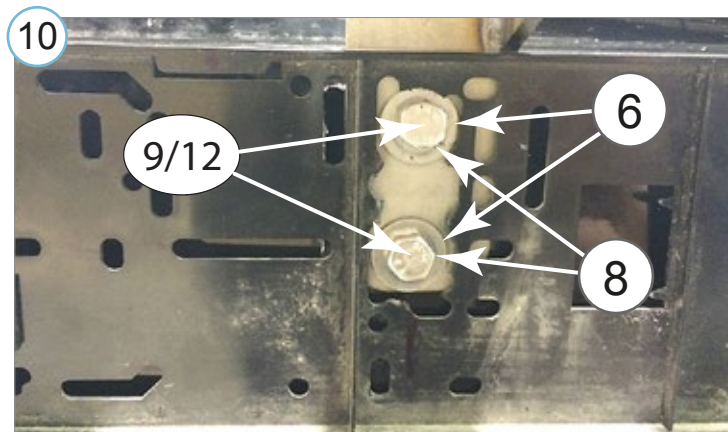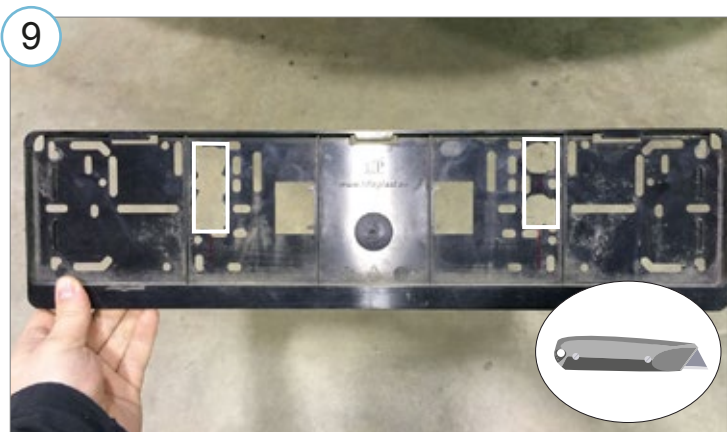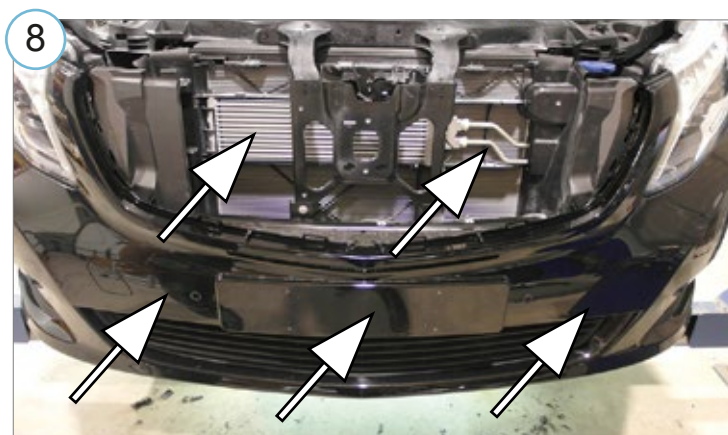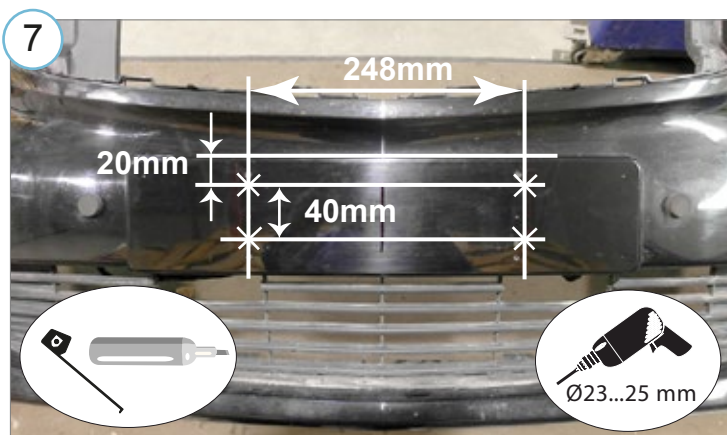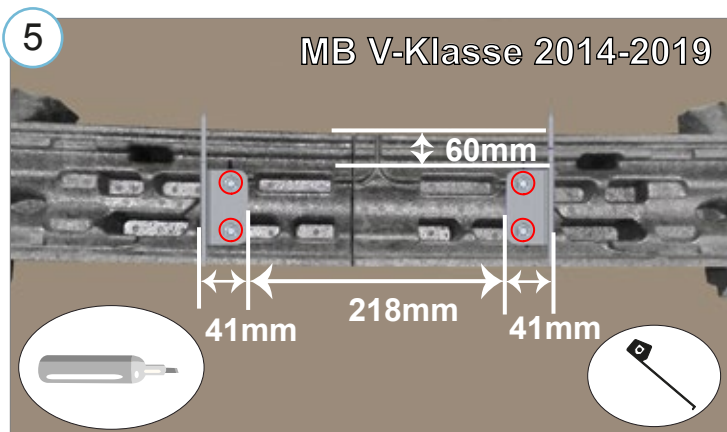








Mercedes-Benz V-Klasse & VITO (only with engine OM654) 2019-

Laternakanduri paigaldamine | Installing the lamp holder | Установка носителя фар | Installieren Sie die Lampenfassu

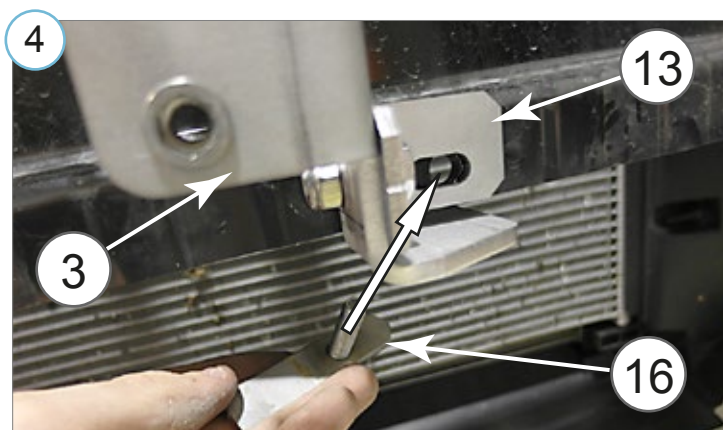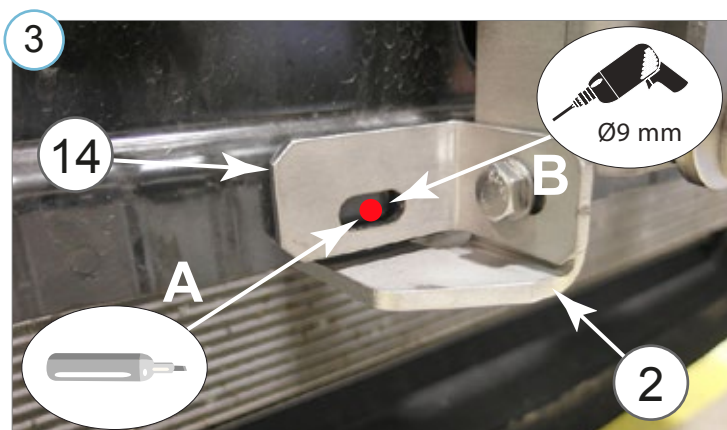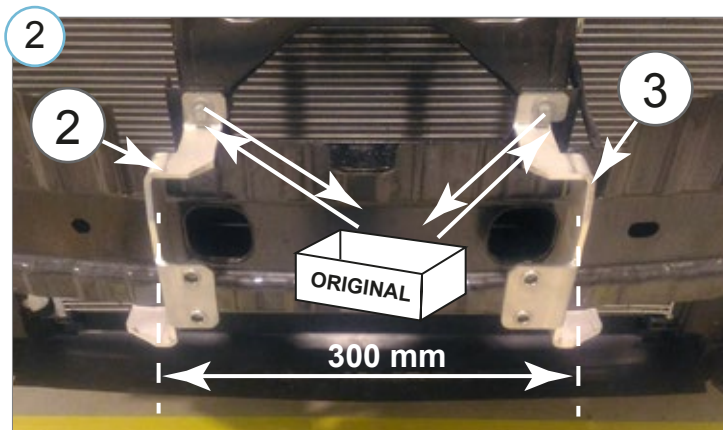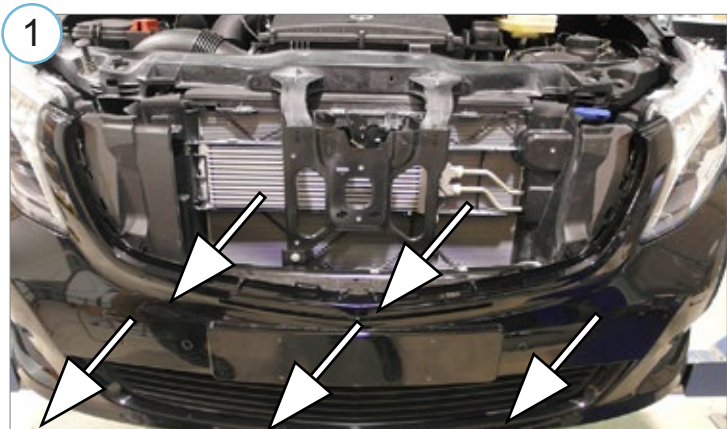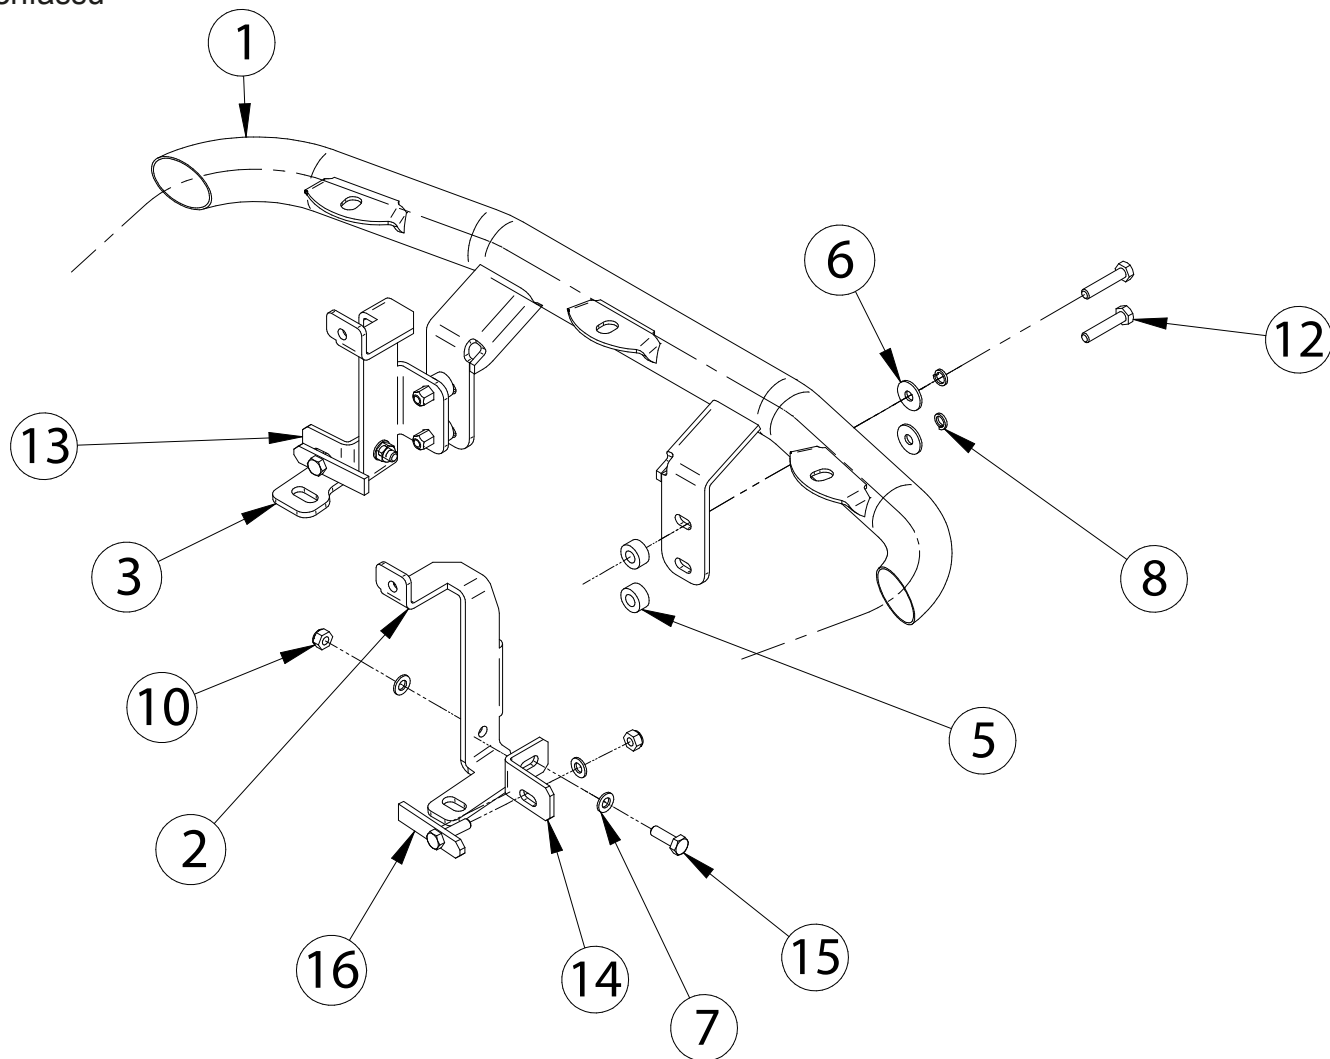

Mercedes-Benz V-Klasse & VITO (only with engine OM654) 2019-

Laternakanduri paigaldamine | Installing the lamp holder | Установка носителя фар | Installieren Sie die Lampenfassu

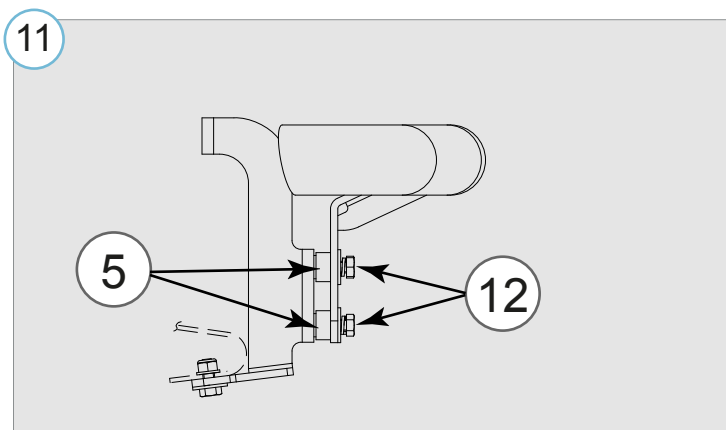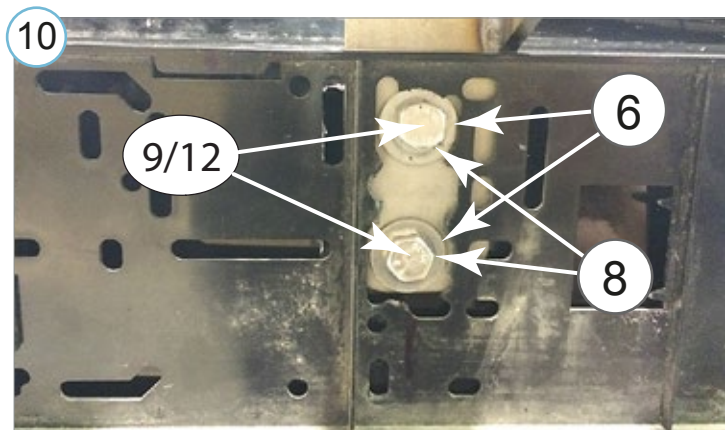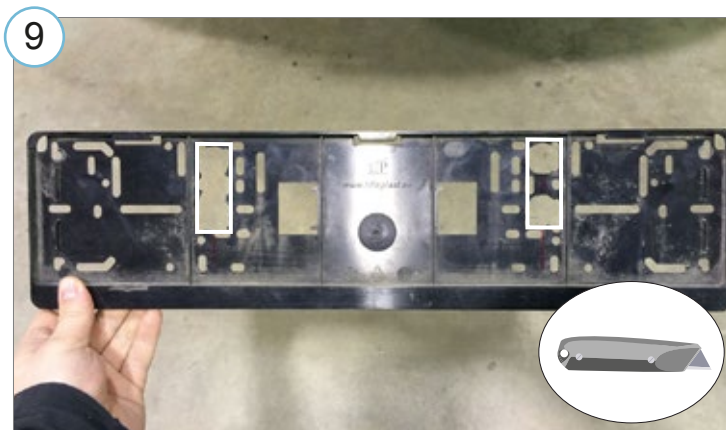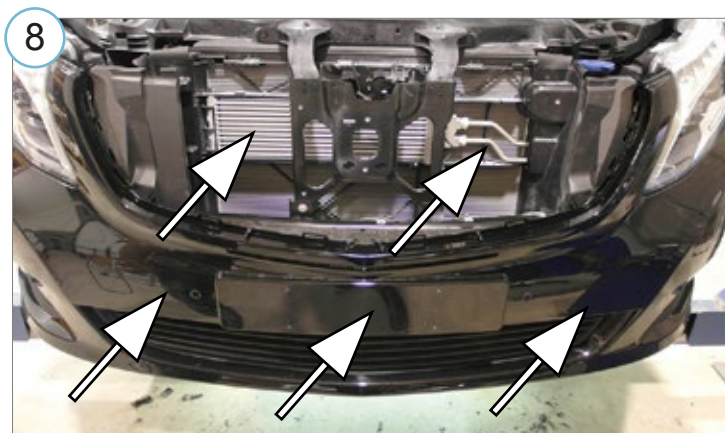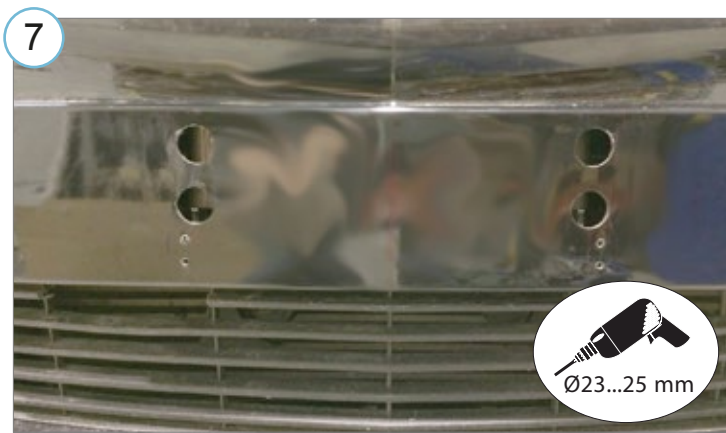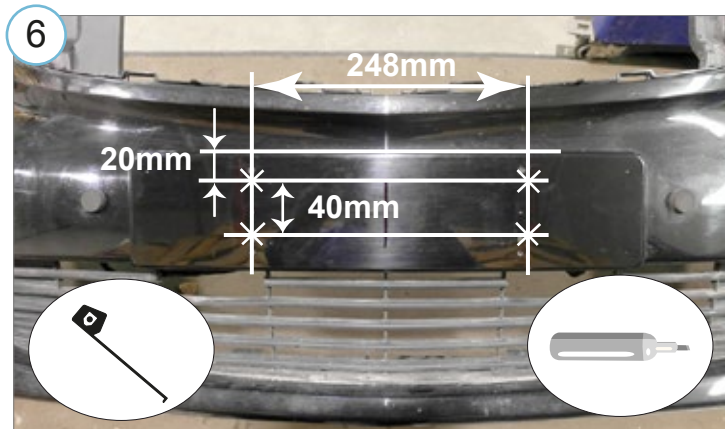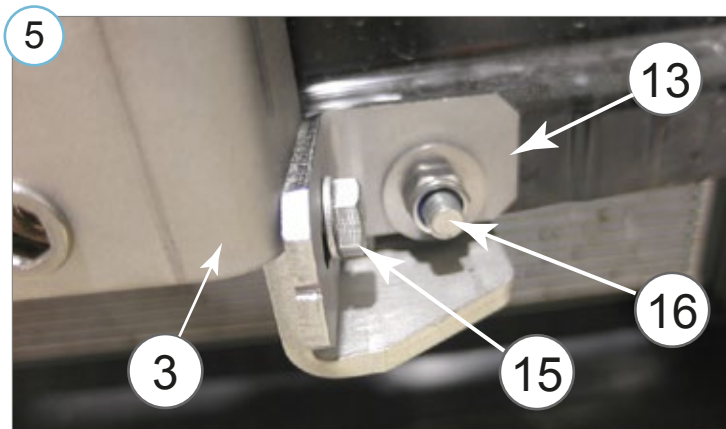

NB!

