



Montaažiskeem / Mounting Instructions / Монтажная схема

Ford Ranger 2012-2016, 2016-

Art. 806950


Stangeääris Ø 60

Spoilerbar Ø 60


Спойлербар Ø 60



- | | |
|--|----|
| 1. Stangeääris / spoilerbar / спойлербар | 1 |
| 2. Kronstein / bracket / кронштейн | 1 |
| 3. Kronstein / bracket / кронштейн | 1 |
| 4. T-polt / T-bolt / T-болт | 2 |
| 5. Polt / bolt / болт M8x25 mm | 4 |
| 6. Polt / bolt / болт M8x80 mm | 2 |
| 7. Mutter / nut / гайка M8 DIN 934 | 2 |
| 8. Mutter / nut / гайка M8 DIN 985 | 6 |
| 9. Seib / washer / шайба 8,4x24x2 mm | 14 |
| 10. Vedruseib / spring washer / пружинная шайба A8 | 2 |

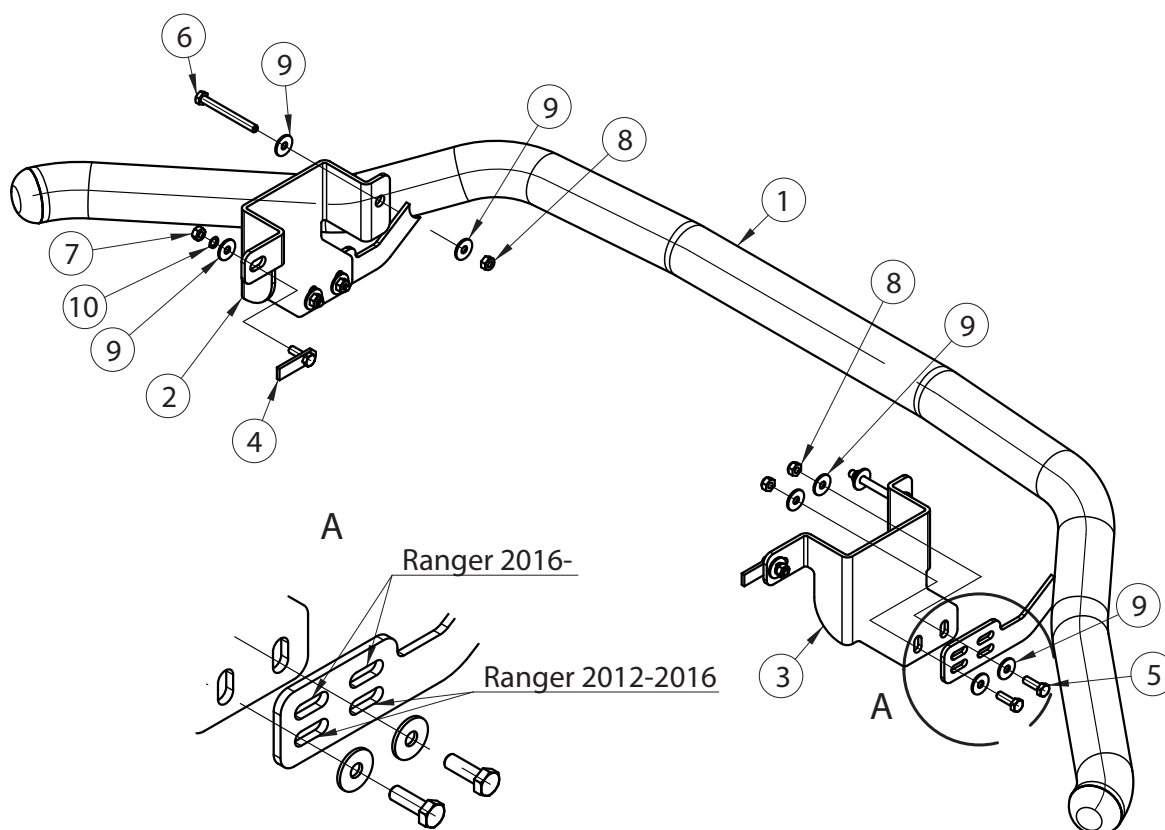

Vajalikud tööriistad / Required Tools / Необходимые инструменты

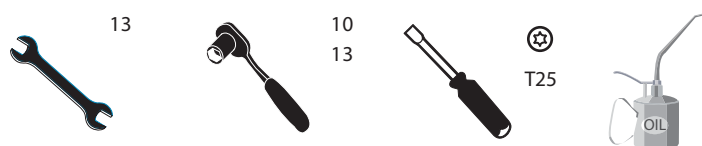

Montaažiskeem / Mounting Instructions / Монтажная схема

Ford Ranger 2012-2016, 2016-

Art. 806950

Stangeääris Ø 60

Spoilerbar Ø 60

Спойлербар Ø 60


Paigaldamine / Instructions / Инструкция установки



Pilt 1 / Pic. 1 / Рис. 1



Pilt 2 / Pic. 2 / Рис. 2

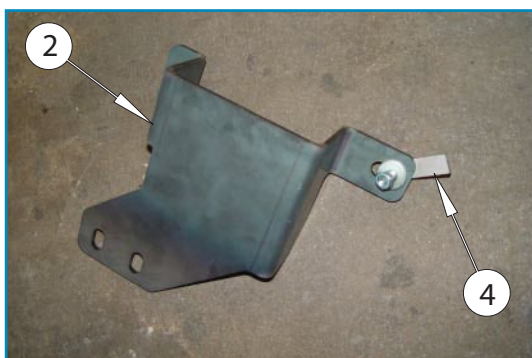


Pilt 3 / Pic. 3 / Рис. 3



Pilt 4 / Pic. 4 / Рис. 4



Pilt 5 / Pic. 5 / Рис. 5

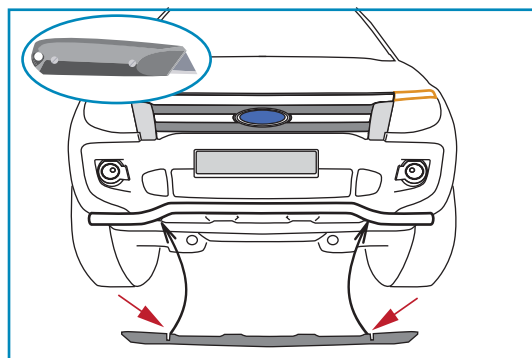


Pilt 6 / Pic. 6 / Рис. 6

Stangeääris Ø 60

Spoilerbar Ø 60

Спойлербар Ø 60

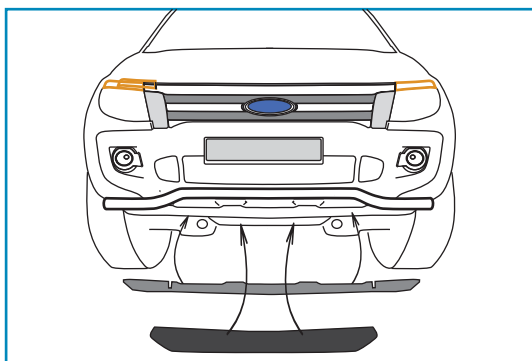



Pilt 7 / Pic. 7 / Рис. 7



Pilt 8 / Pic. 8 / Рис. 8

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 96x432x1667 mm.
- Kaal / Weight / Масса: 8,3 Kg.
- Paigaldusaeg / Time of mounting / Время установки: 45 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:

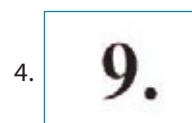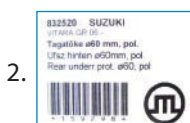

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества