



VW Caddy (L1=2755, L2=2970, C=1340) 2021-


Art. 840080, 840081, 8400809, 888681, 888686

Pakiraam katusele | Luggage rack on the roof | Багажник на крышу | Gepäckablage auf dem Dach



1. Esiosa komplekt / Front set / Передний комплект / Frontset C=1340	1
2. Tagaosa moodul / Rear module / Задний модуль / Heckmodul	2
3. Toru / pipe / труба / Rohr D=30 L=840	2
4. Toru / pipe / труба / Rohr D=40 L=840	2
5. Toru / pipe / труба / Rohr D=20	2
6. Toru / pipe / труба / Rohr 30x30 L=1275	3
7. Klamber / clamp / зажим / Schelle	12
8. Rull / roller / рулон / rollen	1
9. Liuglaager / sliding bearing / подшипник скольжения / Gleitlager	2
10. Kinnituskamber / mounting bracket / монтажный кронштейн / Montagehalterung	2
11. Polt / bolt / болт / Bolzen M5x10	4
12. Polt / bolt / болт / Bolzen M6x12	2
13. Polt / bolt / болт / Bolzen M6x40	12
14. Polt / bolt / болт / Bolzen M8x16	6
15. Polt / bolt / болт / Bolzen M8x80	2
16. Mutter / nut / гайка / Mutter M6	12
17. Mutter / nut / гайка / Mutter M8	6
18. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	6
19. Vedruseib / spring washer / пружинная шайба / Federnscheibe A6	2
20. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	8
21. Kronstein / bracket / кронштейн / Konsole	6
22. Kronstein / bracket / кронштейн / Konsole	4
23. Kronstein / bracket / кронштейн / Konsole	1
24. Kronstein / bracket / кронштейн / Konsole	1
25. Kompensaator / compensator / компенсатор / Kompensator	6
26. Polt / bolt / болт / Bolzen M8x16	6
27. Polt / bolt / болт / Bolzen M8x25	6
28. Mutter / nut / гайка / Mutter M8	6
29. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	12
30. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	6
31. Tuulesuunaja / wind deflector / дефлектор ветра / Windabweiser	1
32. Tõmbeneet / rivet / заклёпка / Niet 3,2x10	6


M5 - 8 Nm
M6 - 11 Nm
M8 - 25 Nm

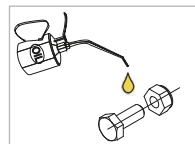



Kaal / Weight / Масса / Gewicht: 19,7+2,6 kg









Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 60 min








Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



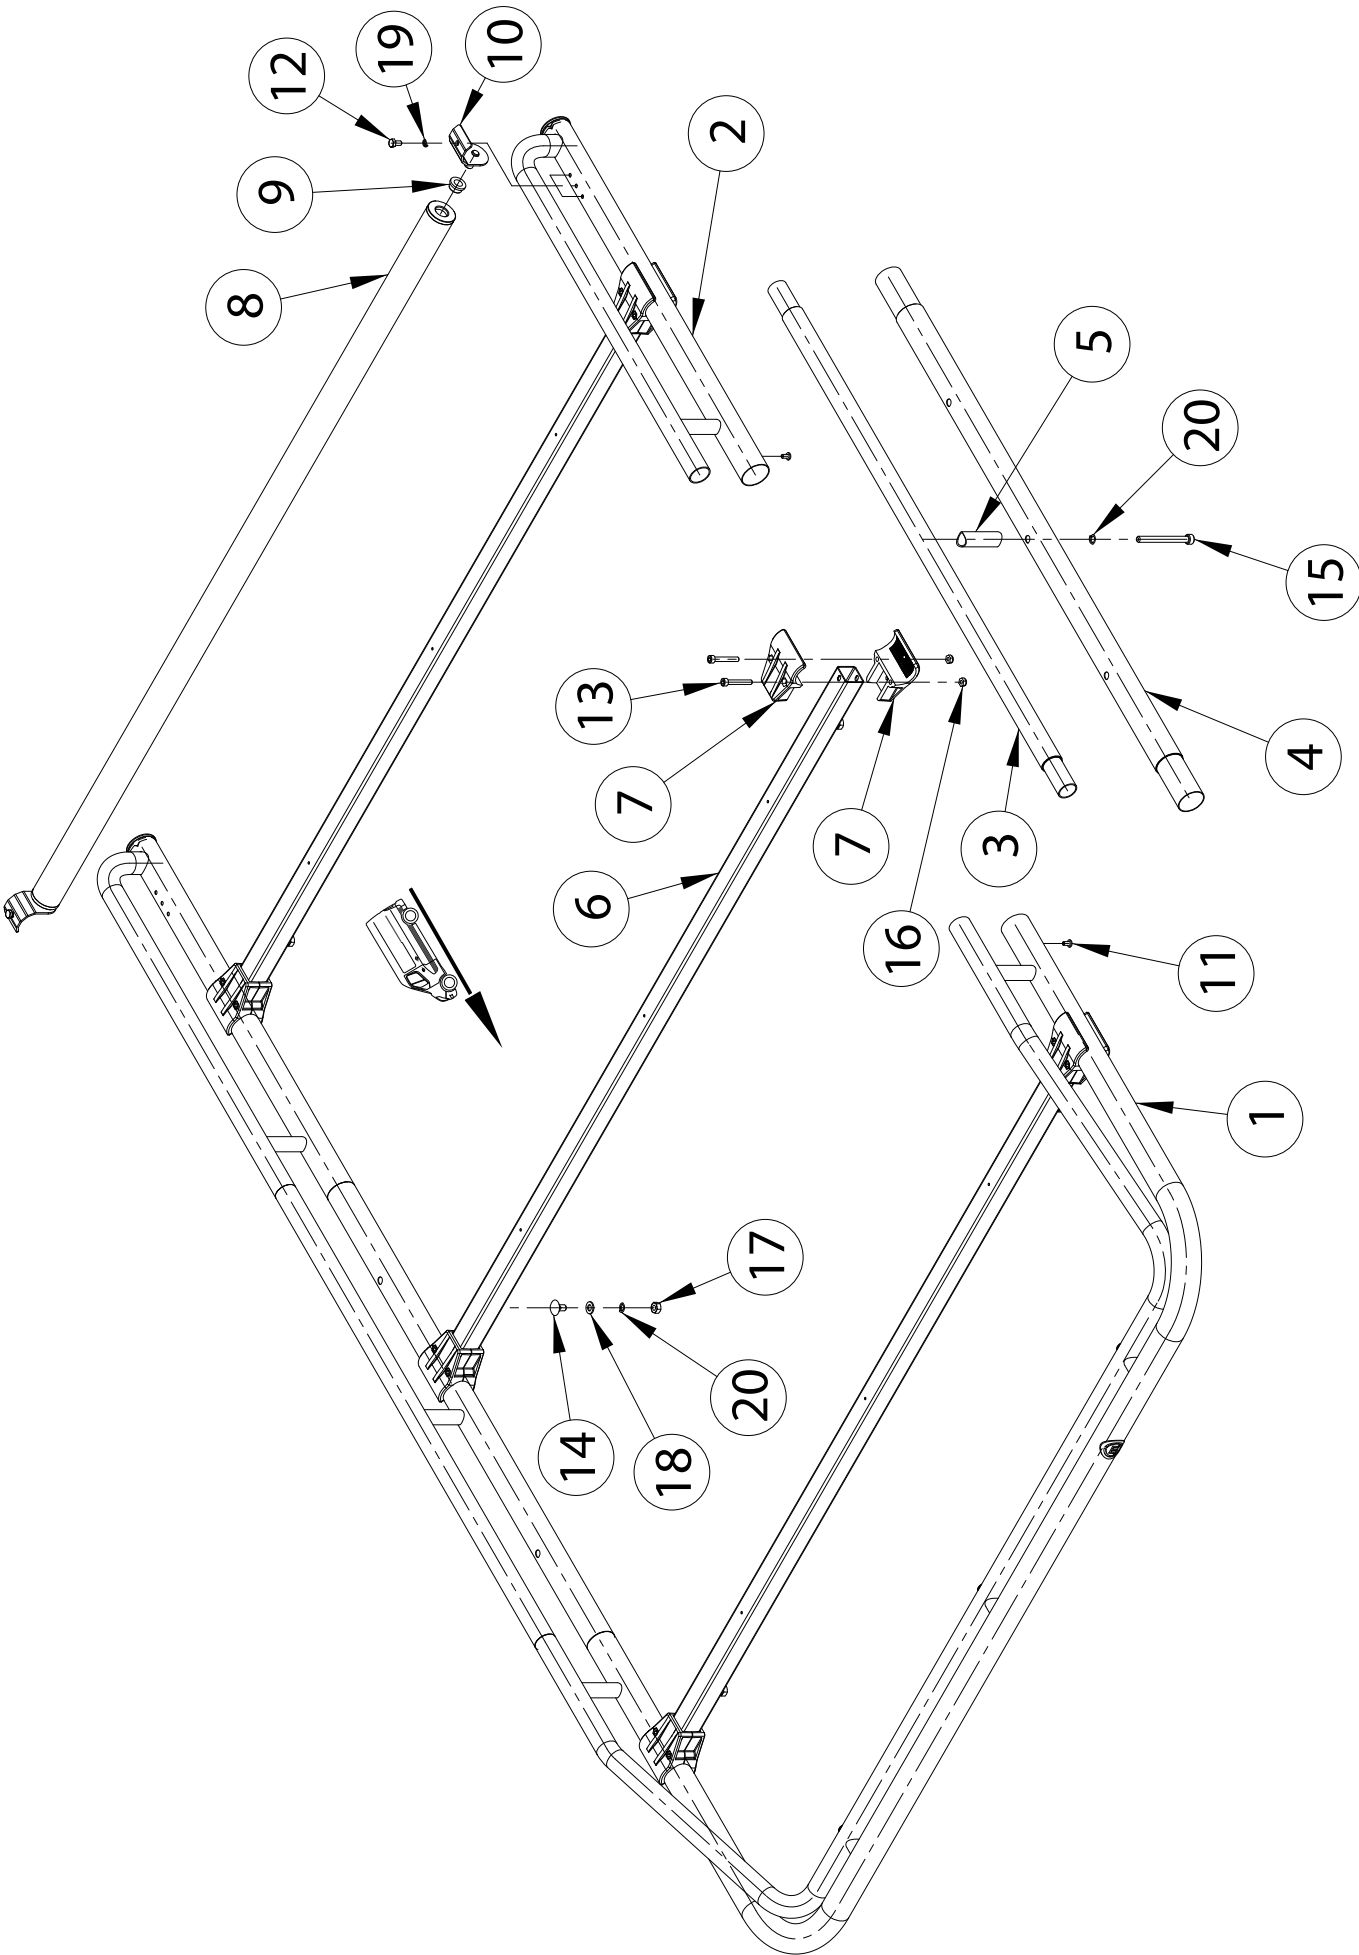


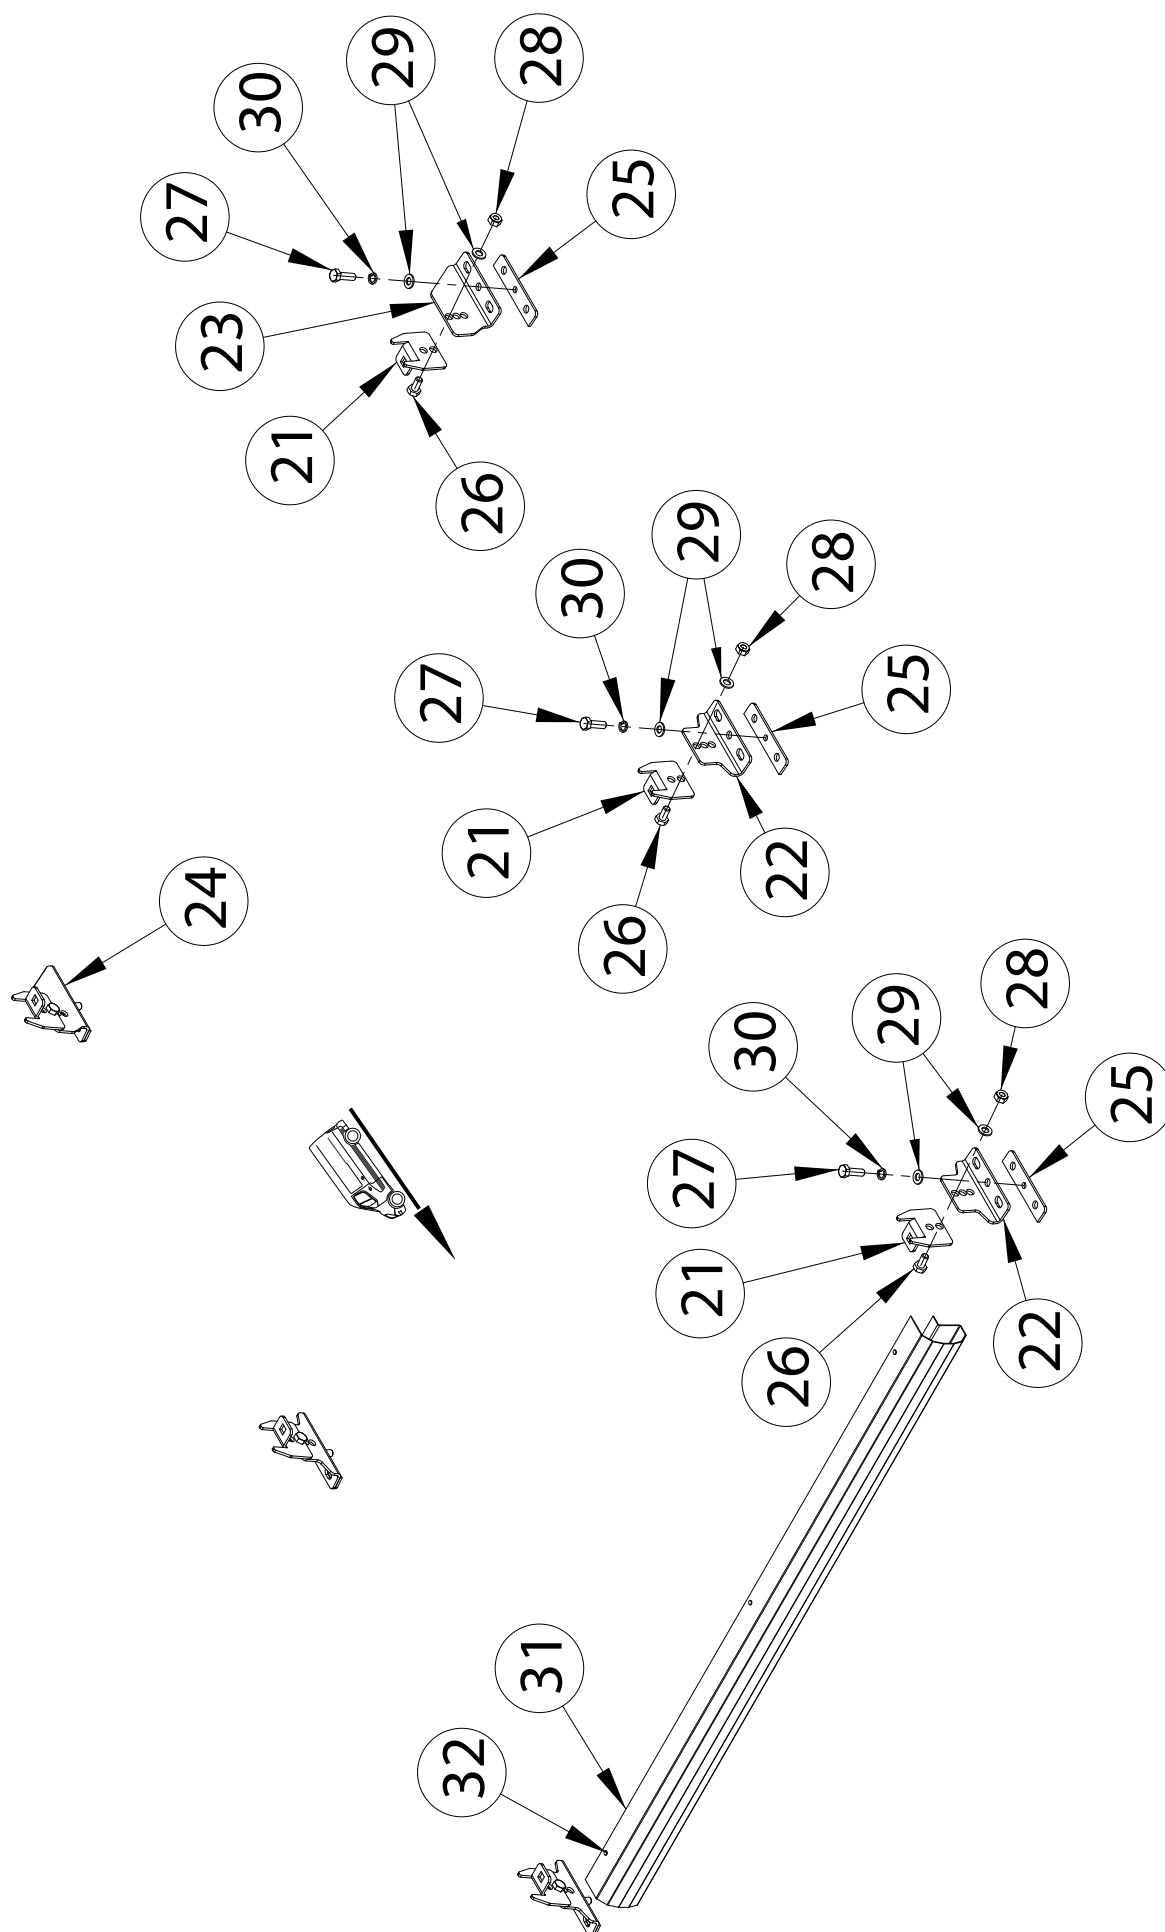

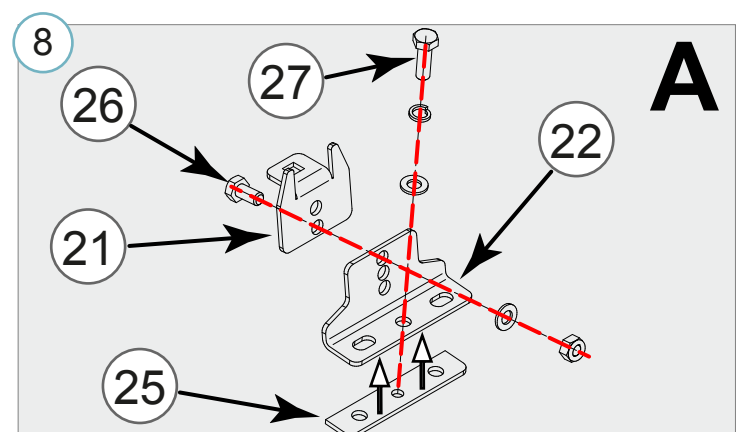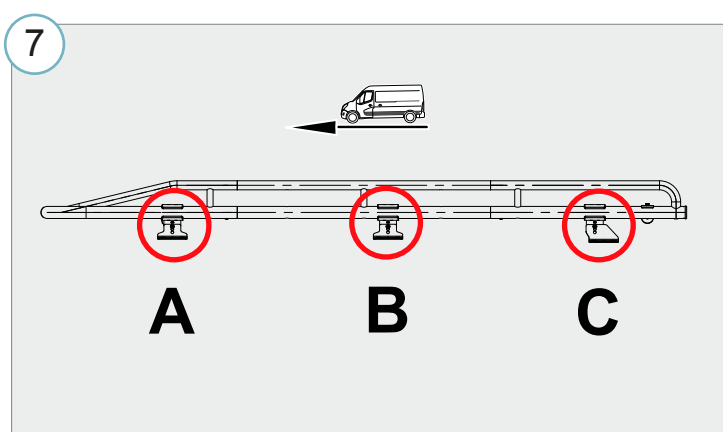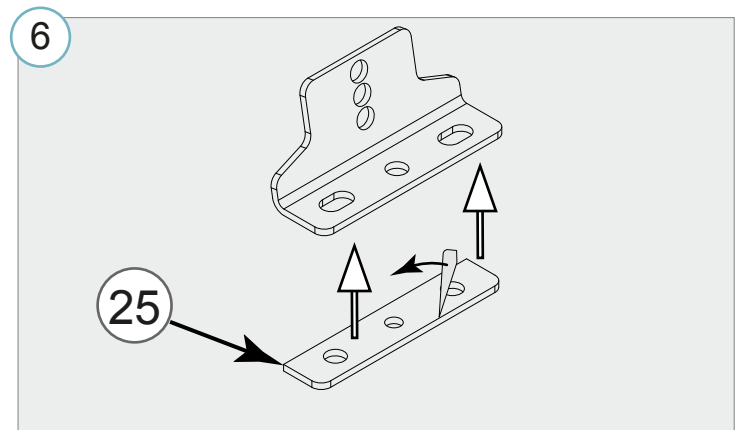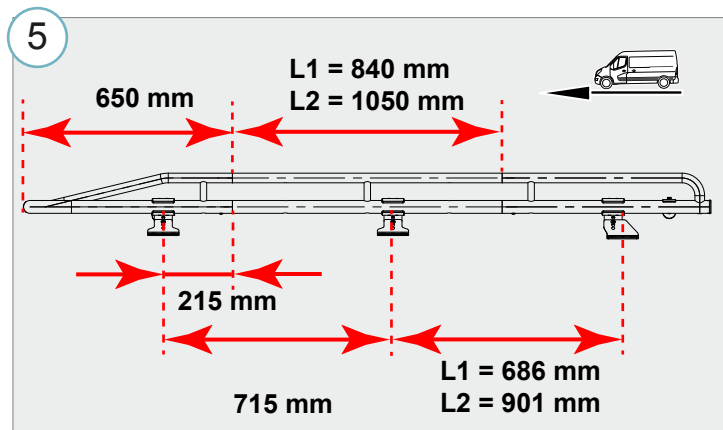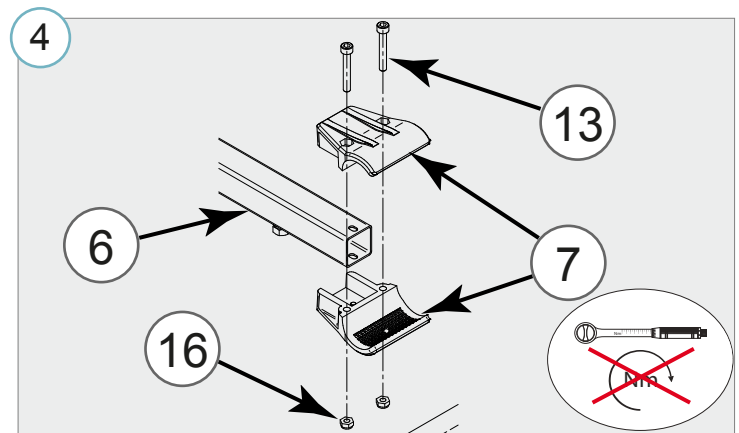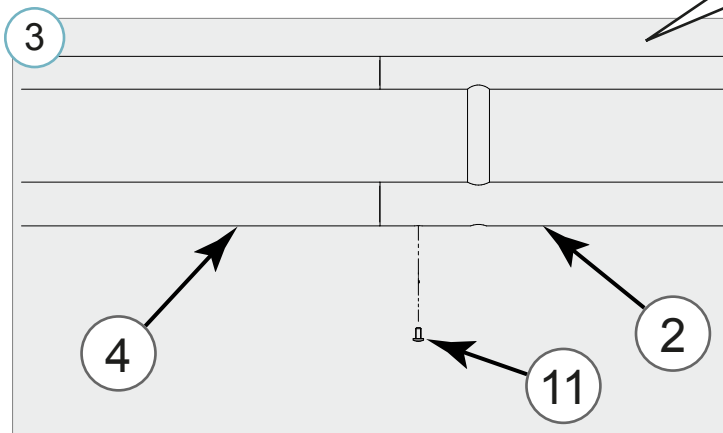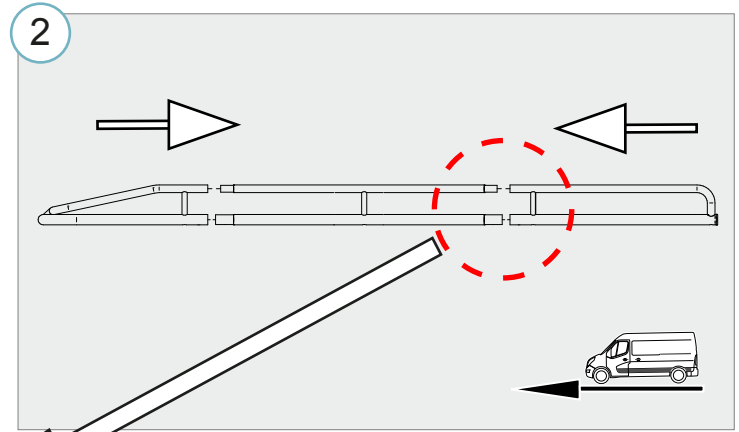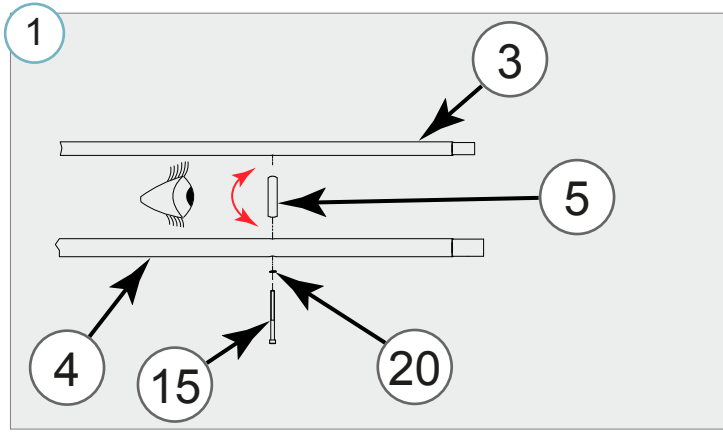

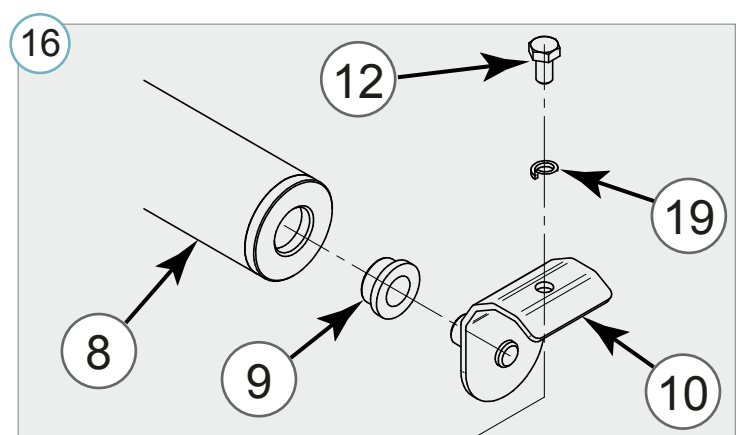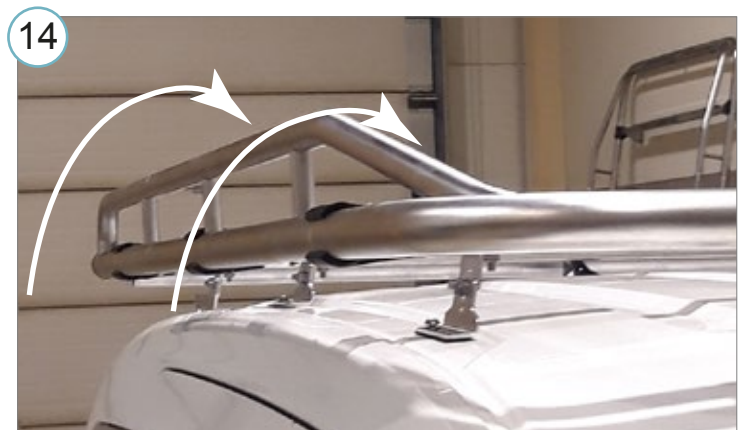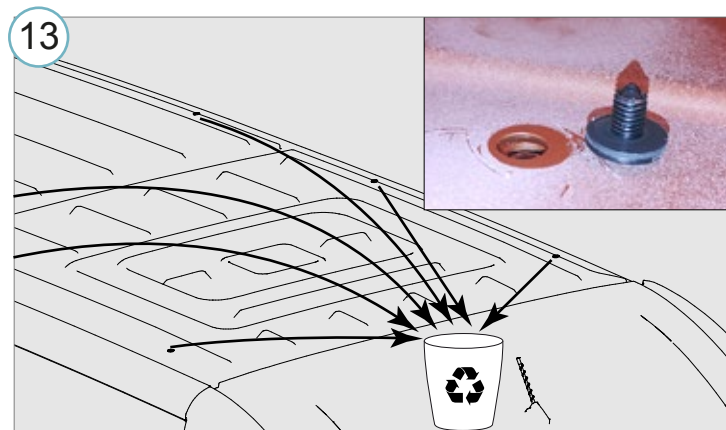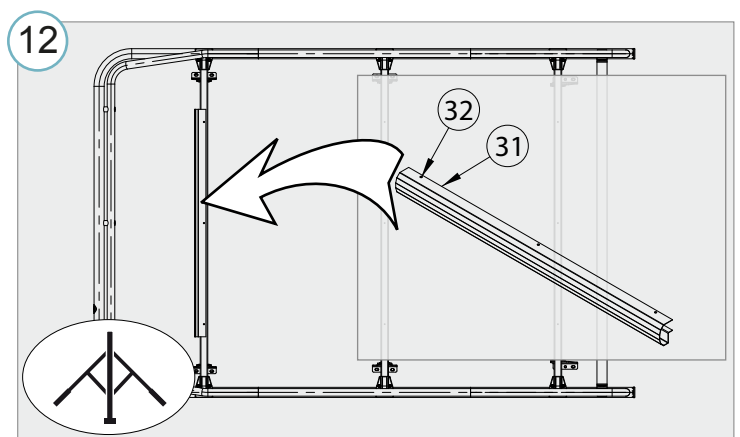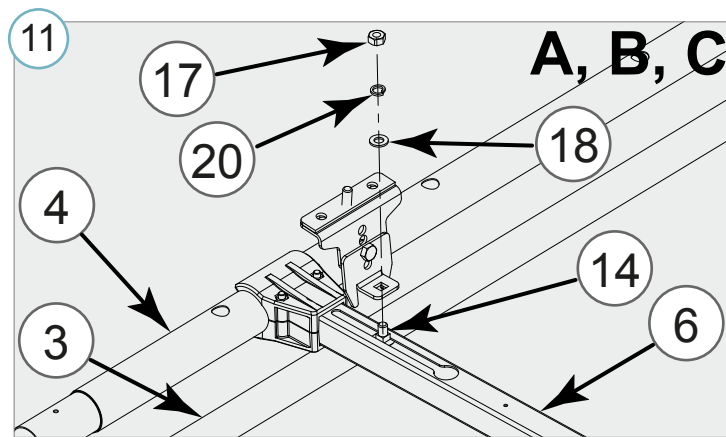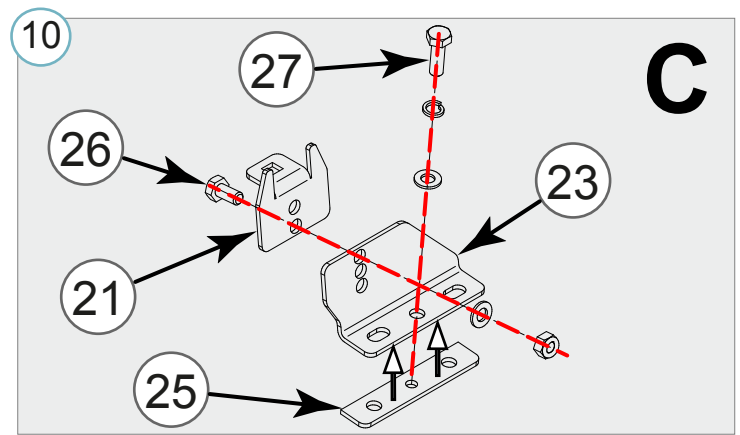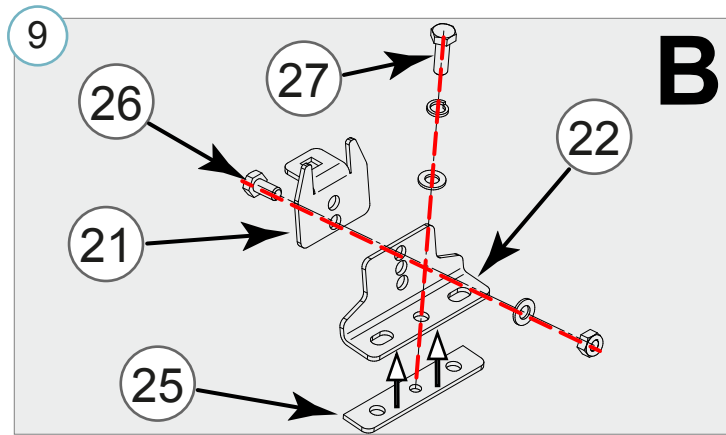


17

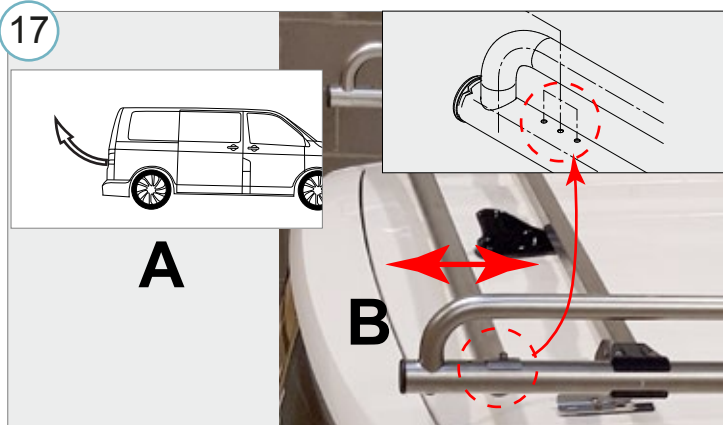


18



19

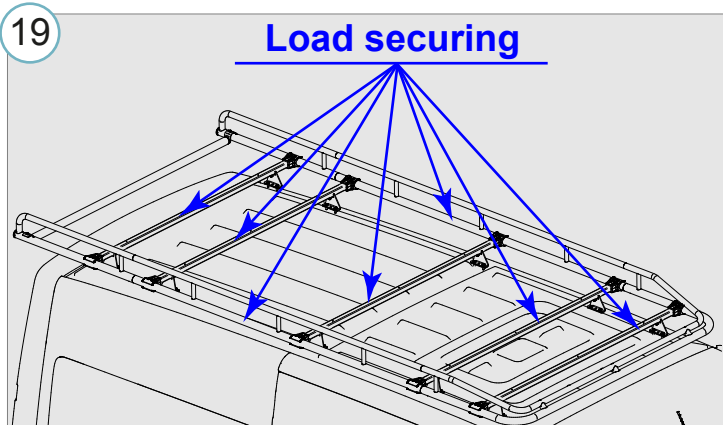

20

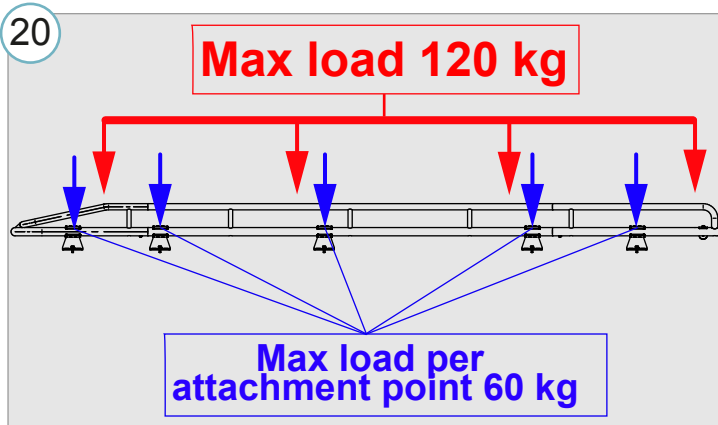

21

