



METEC
AUTOMOTIVE

Montaažiskeem / Mounting Instructions / Монтажная схема

Renault Master / Opel Movano 2010- Base 3682 mm (L2) | Art. 828410


Küljetorud Ø 60

Sidebars Ø 60

Боковая труба Ø 60



- | | |
|---|-----|
| 1. Küljetoru / sidebar / боковая труба | 1+1 |
| 2. Kronstein / bracket / кронштейн | 2 |
| 3. Kronstein / bracket / кронштейн | 2 |
| 4. Kronstein / bracket / кронштейн | 1+1 |
| 5. T-Polt / T-bolt / T-болт | 4 |
| 6. Polt / bolt / болт M10x30 mm | 16 |
| 7. Mutter / nut / гайка M10 DIN 985 | 16 |
| 8. Mutter / nut / гайка M12 DIN 934 | 4 |
| 9. Seib / washer / шайба 10,5x30x2,5 mm | 38 |
| 10. Seib / washer / шайба 13x24x2,5 mm | 4 |
| 11. Vedruseib / spring washer / пружинная шайба A12 | 4 |

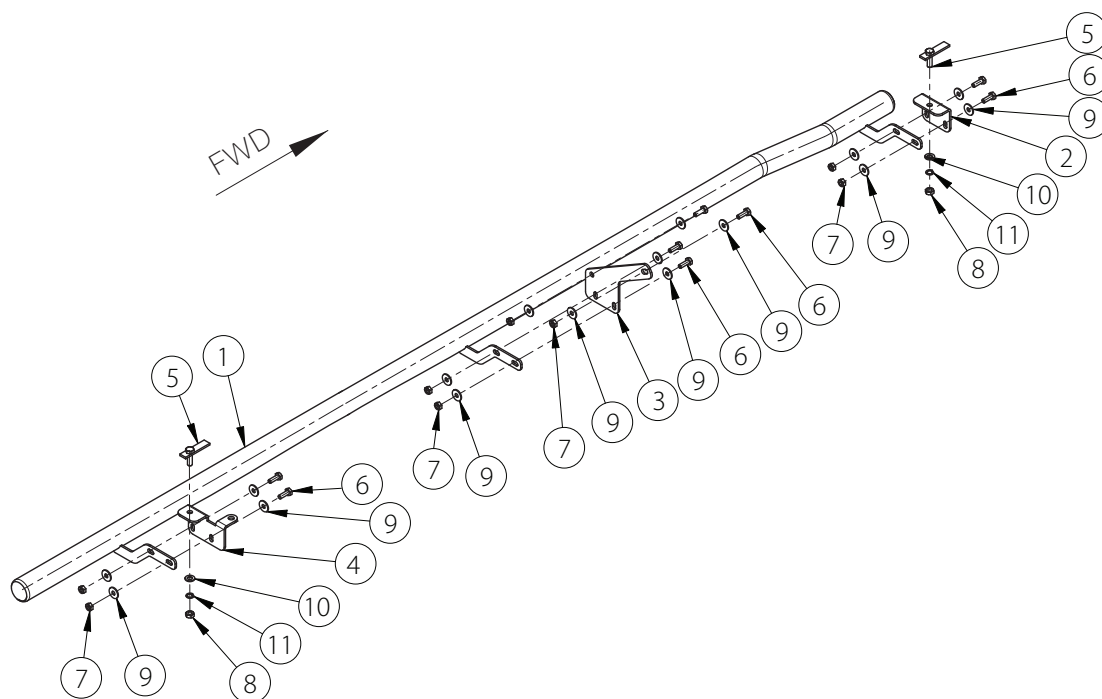

Vajalikud tööriistad / Required Tools / Необходимые инструменты



17
19



17
22

Montaažiskeem / Mounting Instructions / Монтажная схема

Renault Master / Opel Movano 2010- Base 3682 mm (L2) Art. 828410

Küljjetorud Ø 60

Sidebars Ø 60

Боковая труба Ø 60

Paigaldamine / Instructions / Инструкция установки



Pilt 1 / Pic. 1 / Рис. 1



Pilt 2 / Pic. 2 / Рис. 2

- EST • Kinnita kronstein nr. 2 (pildid 1 ja 2).
ENG • Mount bracket no. 2 (pic. 1 and 2).
RUS • Установить кронштейн н. 2 (рис. 1 и 2).



Pilt 3 / Pic. 3 / Рис. 3



Pilt 4 / Pic. 4 / Рис. 4

- EST • Kinnita kronstein nr. 3 (pildid 3, 4, 5 ja 6).
ENG • Mount bracket no. 3 (pic. 3, 4, 5 and 6).
RUS • Установить кронштейн н. 3 (рис. 3, 4, 5 и 6).



Pilt 5 / Pic. 5 / Рис. 5



Pilt 6 / Pic. 6 / Рис. 6

Montaažiskeem / Mounting Instructions / Монтажная схема

Renault Master / Opel Movano 2010- Base 3682 mm (L2) Art. 828410

Küljjetorud Ø 60

Sidebars Ø 60

Боковая труба Ø 60



Pilt 7 / Pic. 7 / Рис. 7



Pilt 8 / Pic. 8 / Рис. 8

- EST • Kinnita kronstein nr. 4 (pildid 7 ja 8).
ENG • Mount bracket no. 4 (pic. 7 and 8).
RUS • Установить кронштейн н. 4 (рис. 7 и 8).



Pilt 9 / Pic. 9 / Рис. 9





Pilt 10 / Pic. 10 / Рис. 10

- EST • Kinnita küljjetorud nr. 1 (pildid 9 ja 10).
ENG • Mount the sidebars no. 1 (pic. 9 and 10).
RUS • Установить боковые трубы н. 1 (рис. 9 и 10).

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 220x250x2835 mm.
- Kaal / Weight / Масса: 20 kg.
- Paigaldusaeg / Time of mounting / Время установки: 45 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:

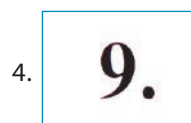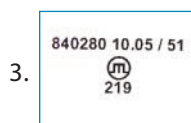

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества