



Ford Transit/Tourneo Custom 23- & VW Transporter 24-

Mounting instructions
Art. 80745470, 80745471
Spoilerbar

Scan the QR code
for translated
instructions or visit
metec.ee/instructions



Weight: 10,0 kg
Time of mounting: 45 min


Required tools:



A2 / A4	Zn
M8 - 17 Nm	M8 - 24 Nm
	M10 - 47 Nm

Ford Transit Custom/Tourneo Custom 23- / VW Transporter 24-

Art. 80745470, 80745471
Spoilerbar

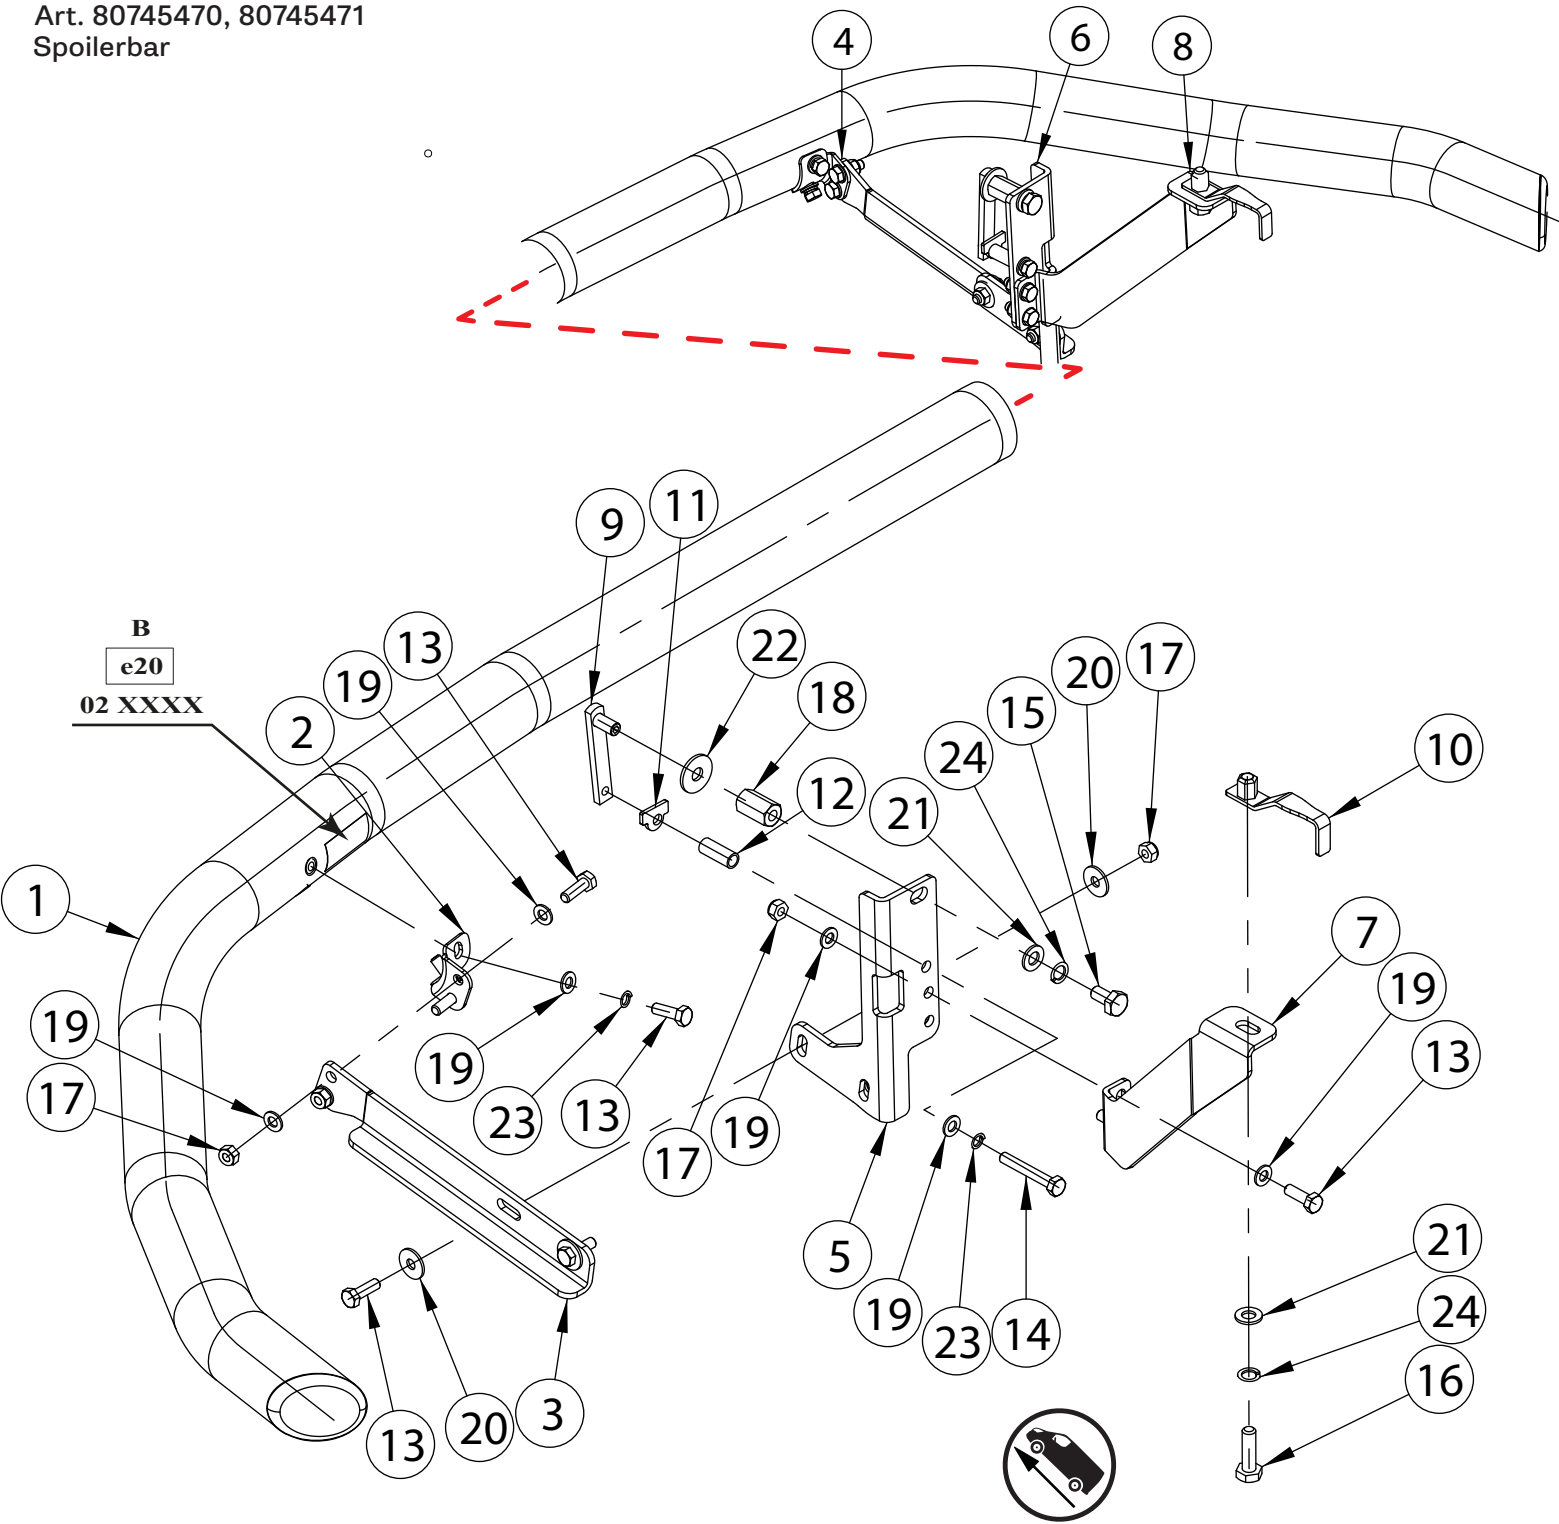

Pos	Description	QTY
1.	Tube	1
2.	Bolt bracket	2
3.	Bracket	1
4.	Bracket	1
5.	Bracket	1
6.	Bracket	1
7.	Bracket	1
8.	Bracket	1
9.	T-bolt M10	2
10.	Plate nut M10	2

Pos	Description	QTY
11.	Washer	2
12.	Bushing	2
13.	Bolt M8x25 DIN933-A2	16
14.	Bolt M8x55 DIN931-galZn	2
15.	Bolt M10x20 DIN933-galZn	2
16.	Bolt M10x35 DIN933-galZn	2
17.	Nut M8 DIN985-A2	12
18.	Nut M10x30 DIN6334-galZn	2
19.	Flat Washer 8,4x16x1,6	22
20.	Flat Washer 8,4x24x2	8

Pos	Description	QTY
21.	Flat Washer 10,5x20x2	4
22.	Flat Washer 10,5x30x2,5	2
23.	Spring washer A8	6
24.	Spring washer A10	4







NB!



To prevent cold welding, use cold weld grease or engine oil








Installation of the lights must be carried out by a qualified electrician only

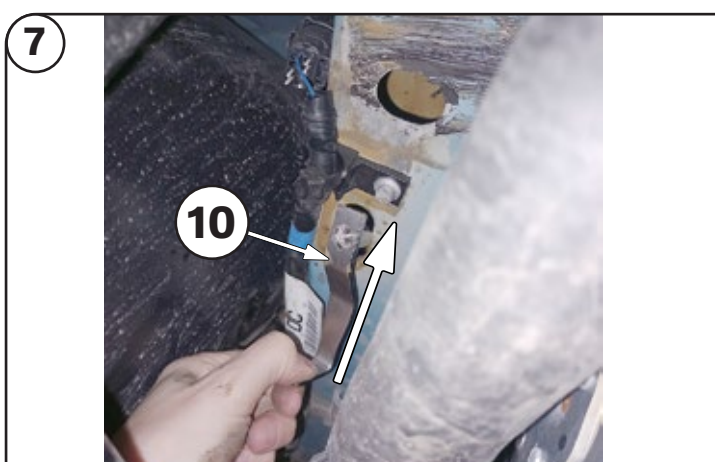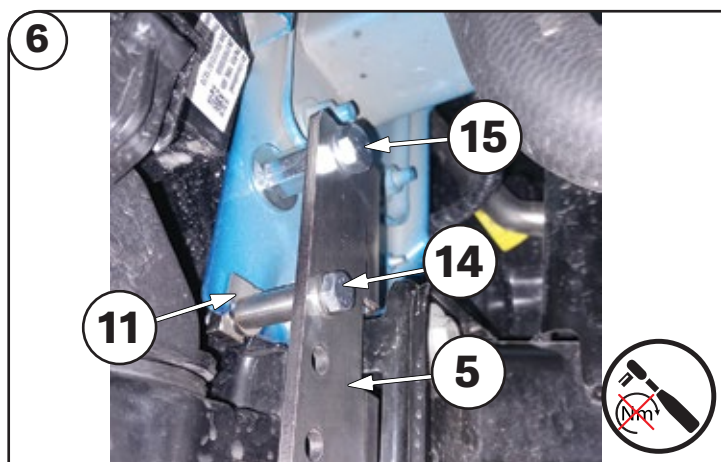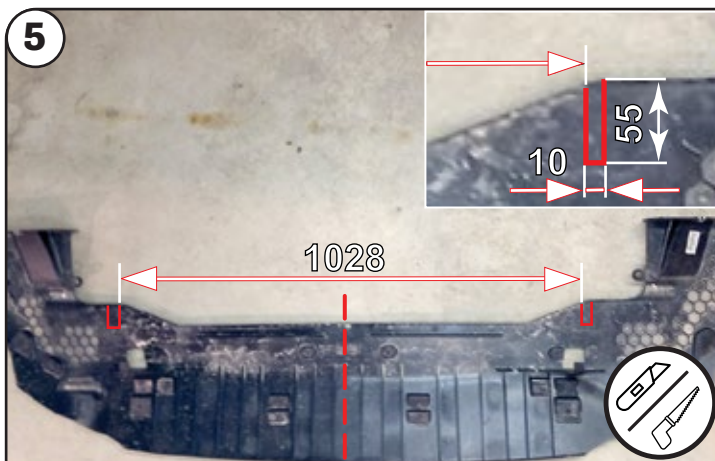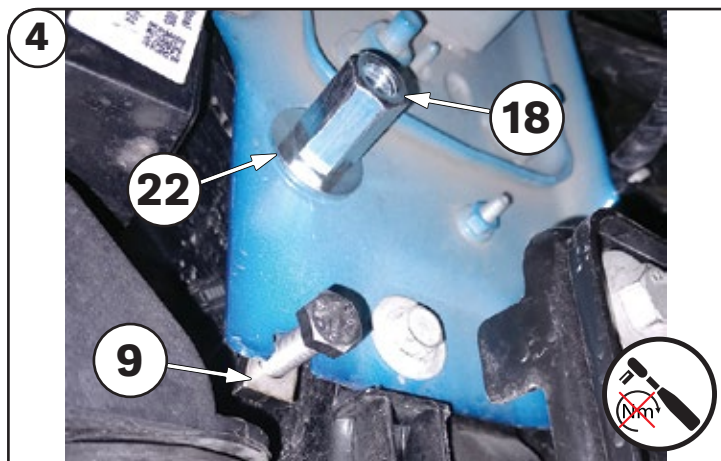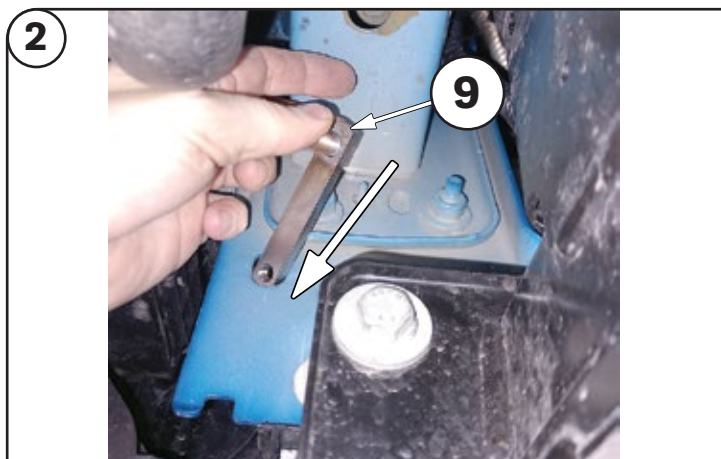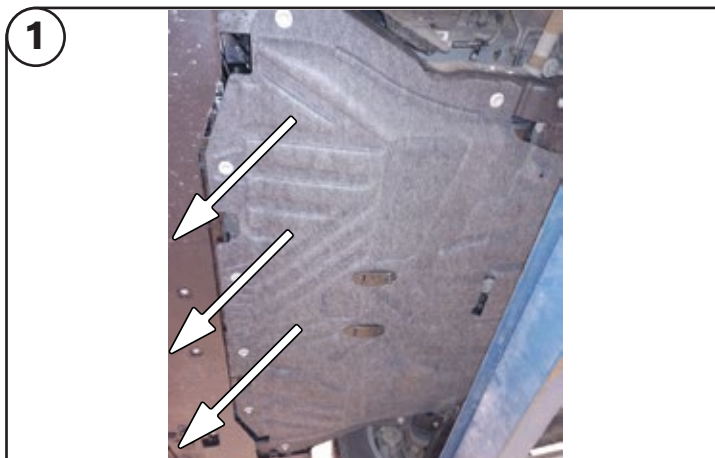

Ford Transit Custom/Tourneo Custom 23- / VW Transporter 24-

Art. 80745470, 80745471

Spoilerbar

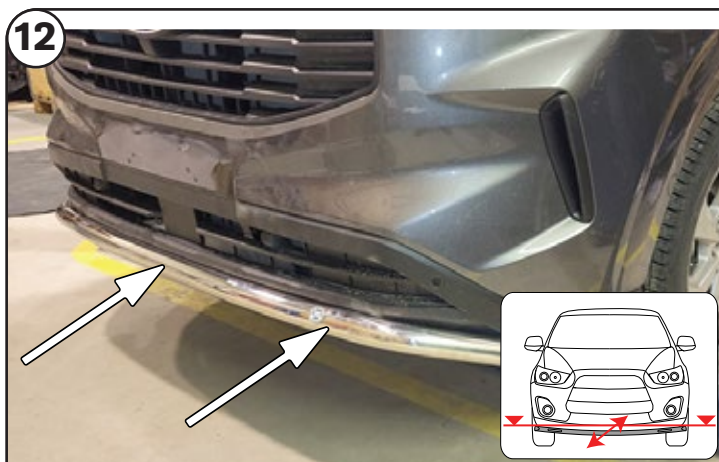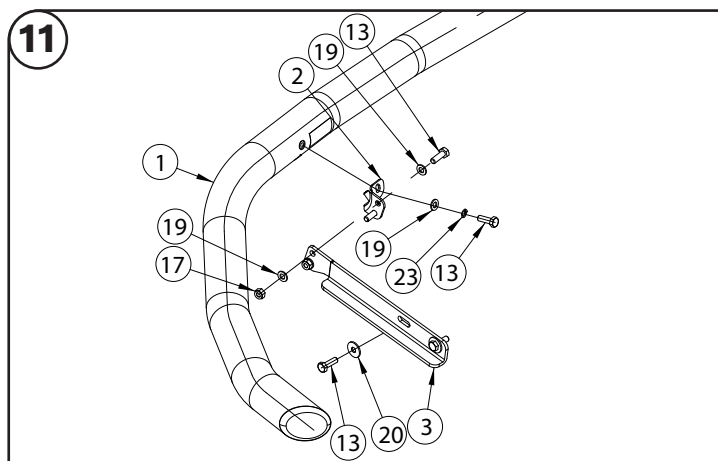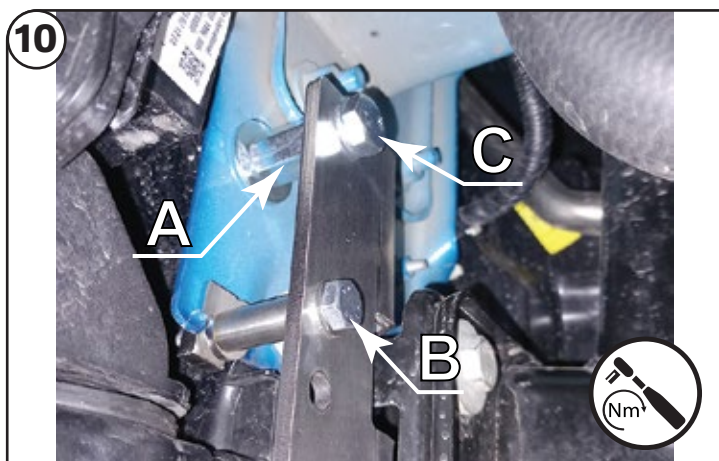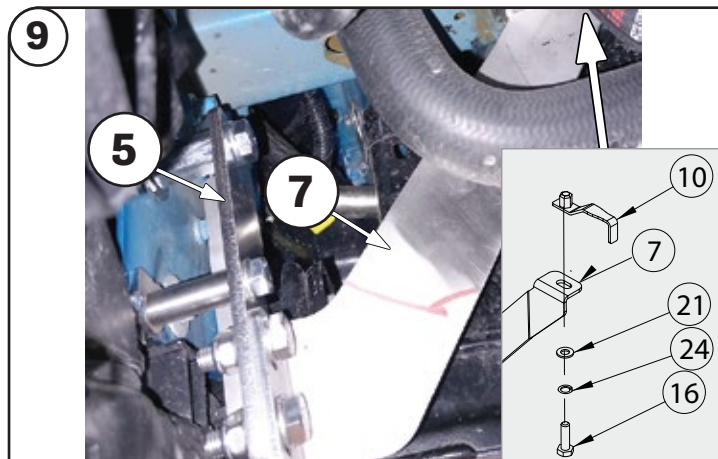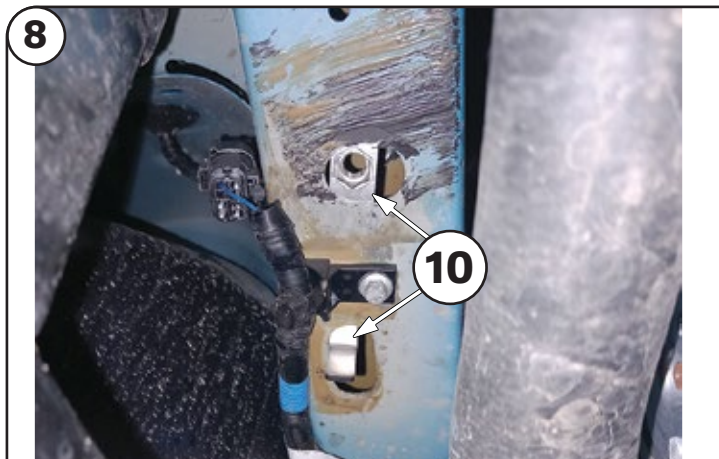

Check and retighten the fasteners after each 10 000km



Clean and wash the product twice a month to prevent corrosion

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resolution