



Peugeot Expert / Citroen Jumpy / Opel Vivaro / Toyota ProAce (L1 = 2925 mm) 2016-

Art. 826447

Pakiraam katusele | Luggage rack on the roof | Багажник на крышу | Geräcksablage auf dem Dach




| | |
|--|----|
| 1. Esiosa komplekt / Front set / Передний комплект / Frontset C=1340 | 1 |
| 2. Tagaosa moodul / Rear module / Задний модуль / Heckmodul | 2 |
| 3. Toru / pipe / труба / Rohr D=30 L=700 | 2 |
| 4. Toru / pipe / труба / Rohr D=40 L=700 | 2 |
| 5. Toru / pipe / труба / Rohr D=20 | 2 |
| 6. Toru / pipe / труба / Rohr 30x30 L=1275 | 3 |
| 7. Klamber / clamp / зажим / Schelle | 12 |
| 8. Rull / roller / рулон / rollen | 1 |
| 9. Liuglaager / sliding bearing / подшипник скольжения / Gleitlager | 2 |
| 10. Kinnituskamber / mounting bracket / монтажный кронштейн / Montagehalterung | 2 |
| 11. Polt / bolt / болт / Bolzen M5x10 | 4 |
| 12. Polt / bolt / болт / Bolzen M6x12 | 2 |
| 13. Polt / bolt / болт / Bolzen M6x40 | 12 |
| 14. Polt / bolt / болт / Bolzen M8x16 | 6 |
| 15. Polt / bolt / болт / Bolzen M8x80 | 2 |
| 16. Mutter / nut / гайка / Mutter M6 | 12 |
| 17. Mutter / nut / гайка / Mutter M8 | 6 |
| 18. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 6 |
| 19. Vedruseib / spring washer / пружинная шайба / Federnscheibe A6 | 2 |
| 20. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 8 |
| 21. Kronstein / bracket / кронштейн / Konsole | 6 |
| 22. Kronstein / bracket / кронштейн / Konsole | 6 |
| 23. Lülik / plate with nut / пластина с гайкой / Platte mit mutter | 6 |
| 24. Kompensaator / compensator / компенсатор / Kompensator | 6 |
| 25. Polt / bolt / болт / Bolzen M8x16 | 6 |
| 26. Polt / bolt / болт / Bolzen M8x20 | 6 |
| 27. Mutter / nut / гайка / Mutter M8 | 6 |
| 28. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 12 |
| 29. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 6 |

M5- 8 Nm

M6 - 11 Nm

M8 - 25 Nm

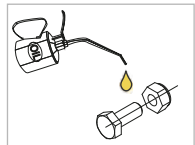

Kaal / Weight / Масса / Gewicht: 19,1+2,9 kg

Paigaldusaeg ilma elektritöödetä / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 60 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



