




Ford Transit 2019-

Art. 807234, 807235-LED


Esistangekaitse | Cityguard | Передняя дуга | Cityguard



- | | |
|--|---|
| 1. Esistangekaitse / Cityguard / Передняя защита / Cityguard | 1 |
| 2. Kronstein / bracket / кронштейн / Konsole | 1 |
| 3. Kronstein / bracket / кронштейн / Konsole | 1 |
| 4. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 8 |
| 5. Polt / bolt / болт / Bolzen M8x25 | 4 |
| 6. Mutter / nut / гайка / Mutter M8 | 4 |

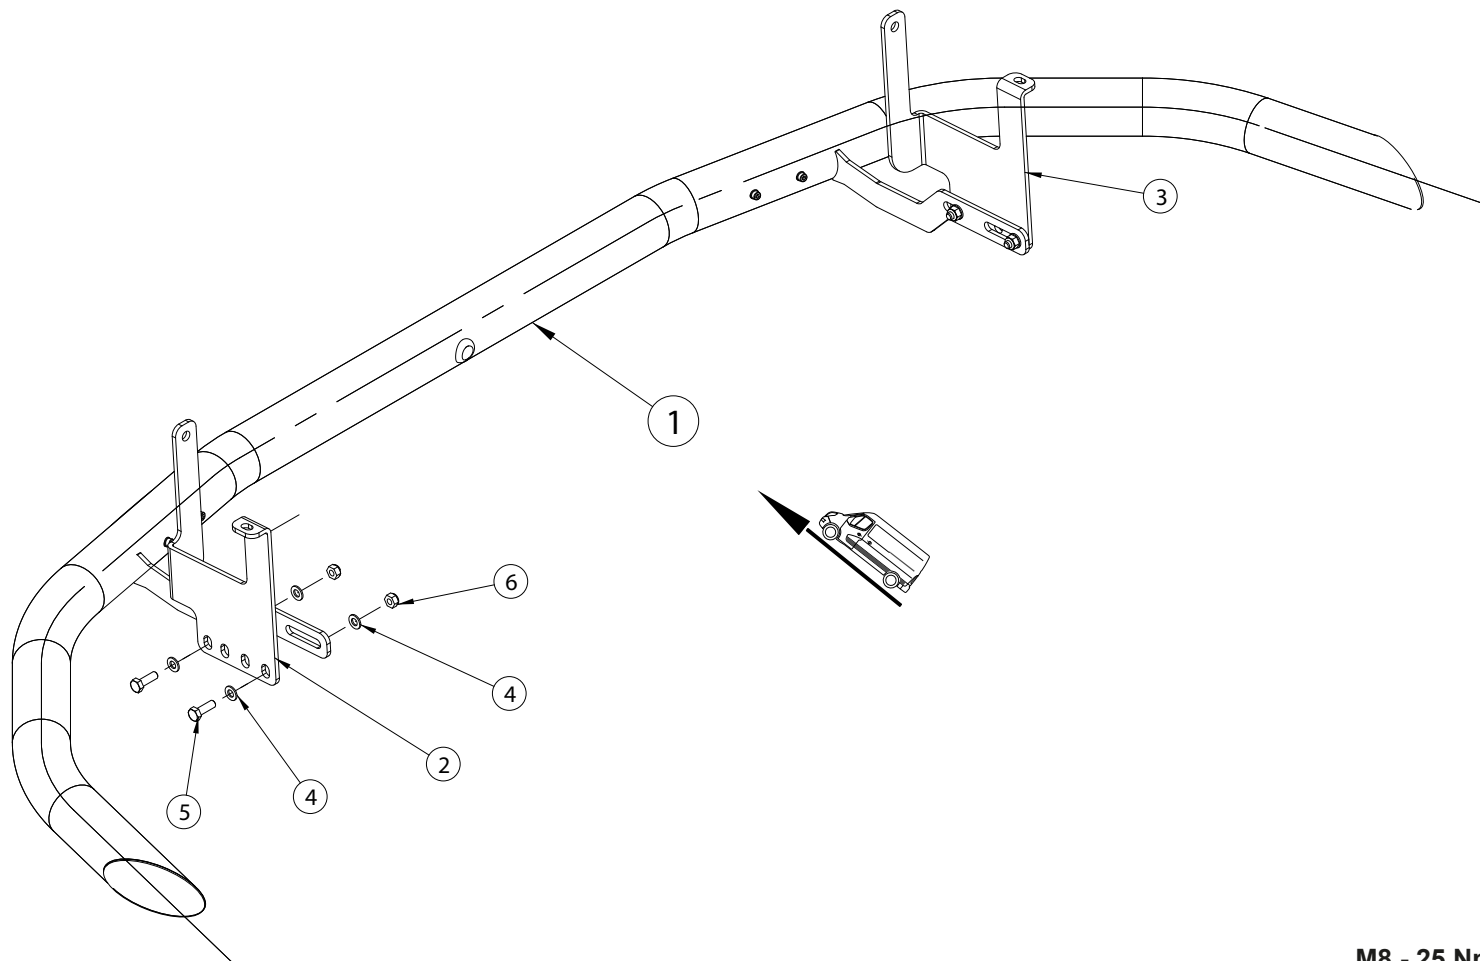


M8 - 25 Nm




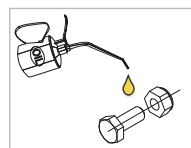


Kaal / Weight / Масса / Gewicht: 13 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 30 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



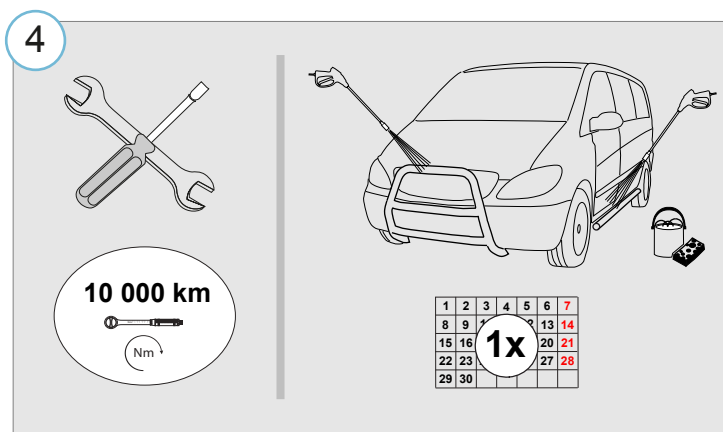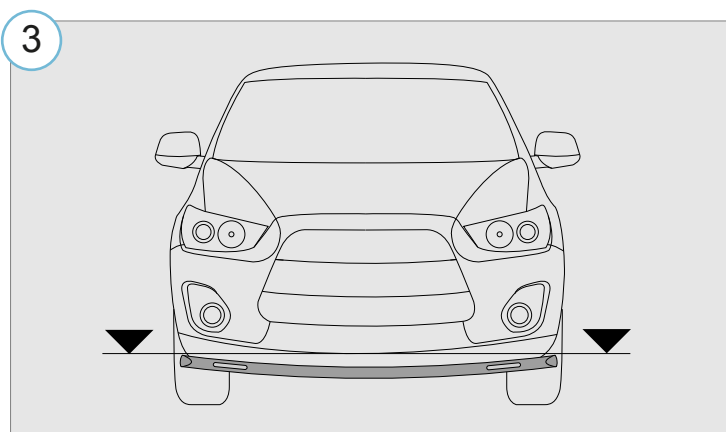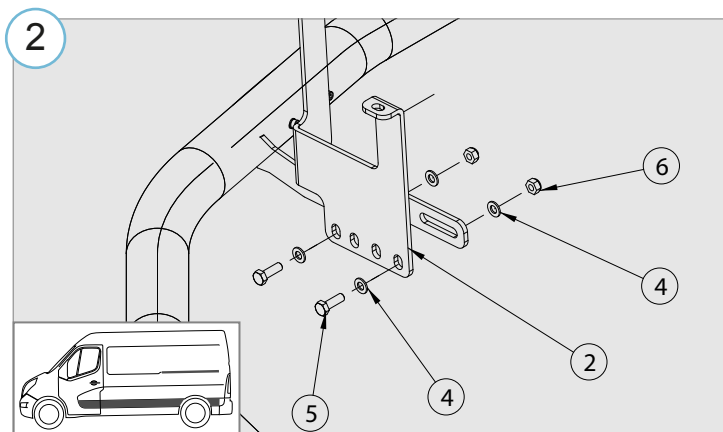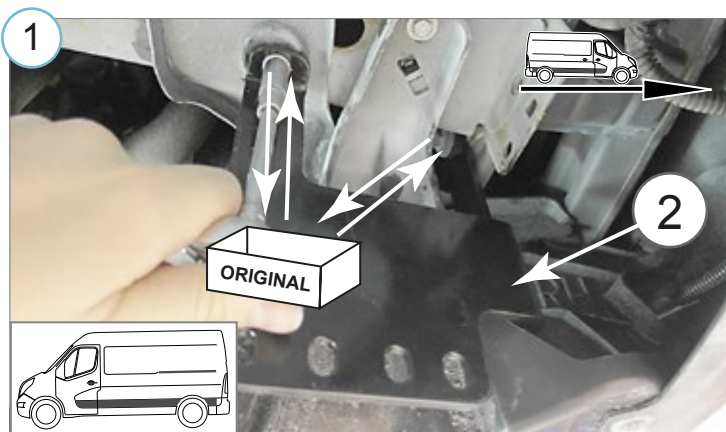

DLR päevasõidutulede elektriühendused teostada kvalifitseeritud autoelektriku poolt vastavalt Philipsi paigaldusjuhendile

Installation of the DRL lights can be carried out by qualified electrician only, in accordance with the Philips's instructions

Монтаж DRL огней может быть выполнено только квалифицированным электриком, в соответствии с инструкциями Philips

Die Installation der DRL Lichter können durchgeführt werden durch Elektrofachkraft in Übereinstimmung mit der Philips's Anweisungen