




Ford Transit Custom 23-/ VW T7 Transporter 24- 4x4

Mounting instructions

Art. 807459

Rear differential protection

Scan the QR code
for translated
instructions or visit
metec.ee/instructions

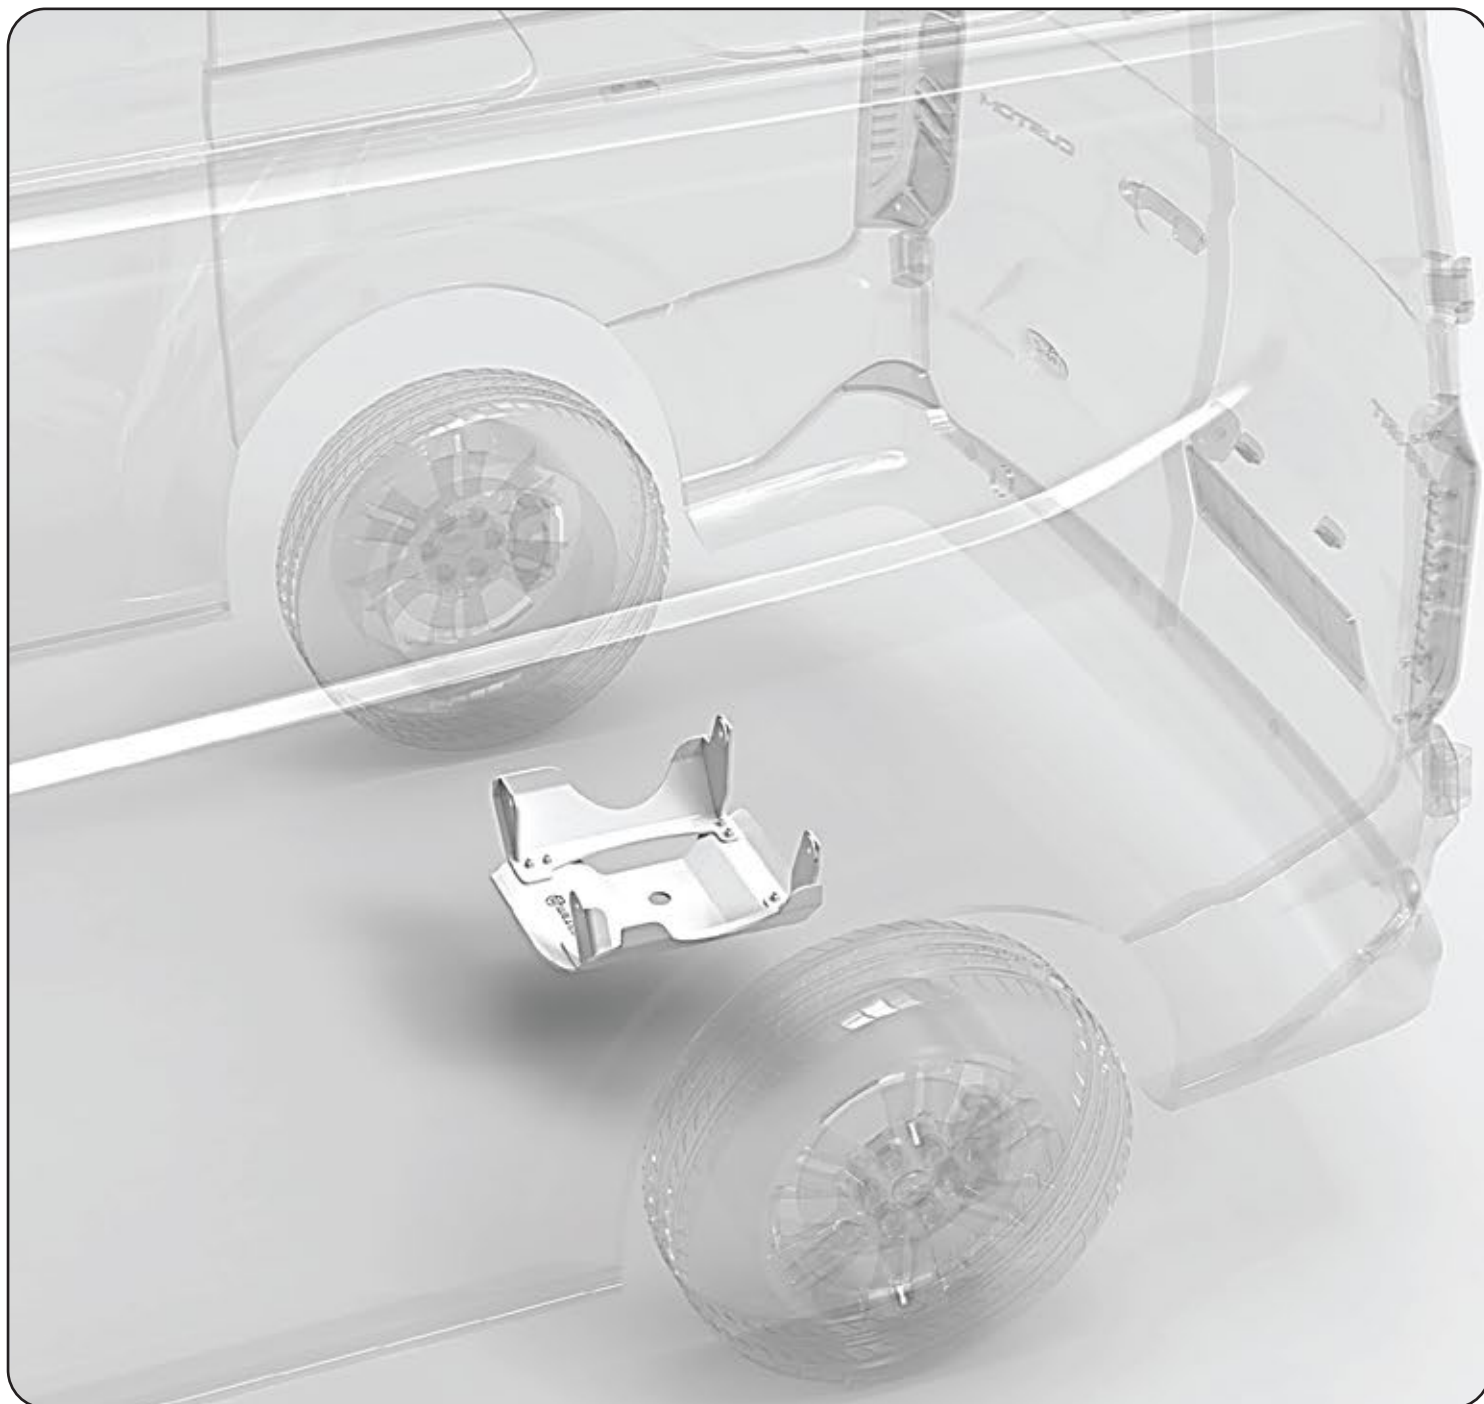

Weight: 3,4 kg

Time of mounting w/o wiring: 30 min

Required tools:




A2 / A4	Zn
M8 - 17 Nm	M8 - 24 Nm

Ford Transit Custom 23-/VW T7 Transporter 24- 4x4

Art. 807459

Rear differential protection



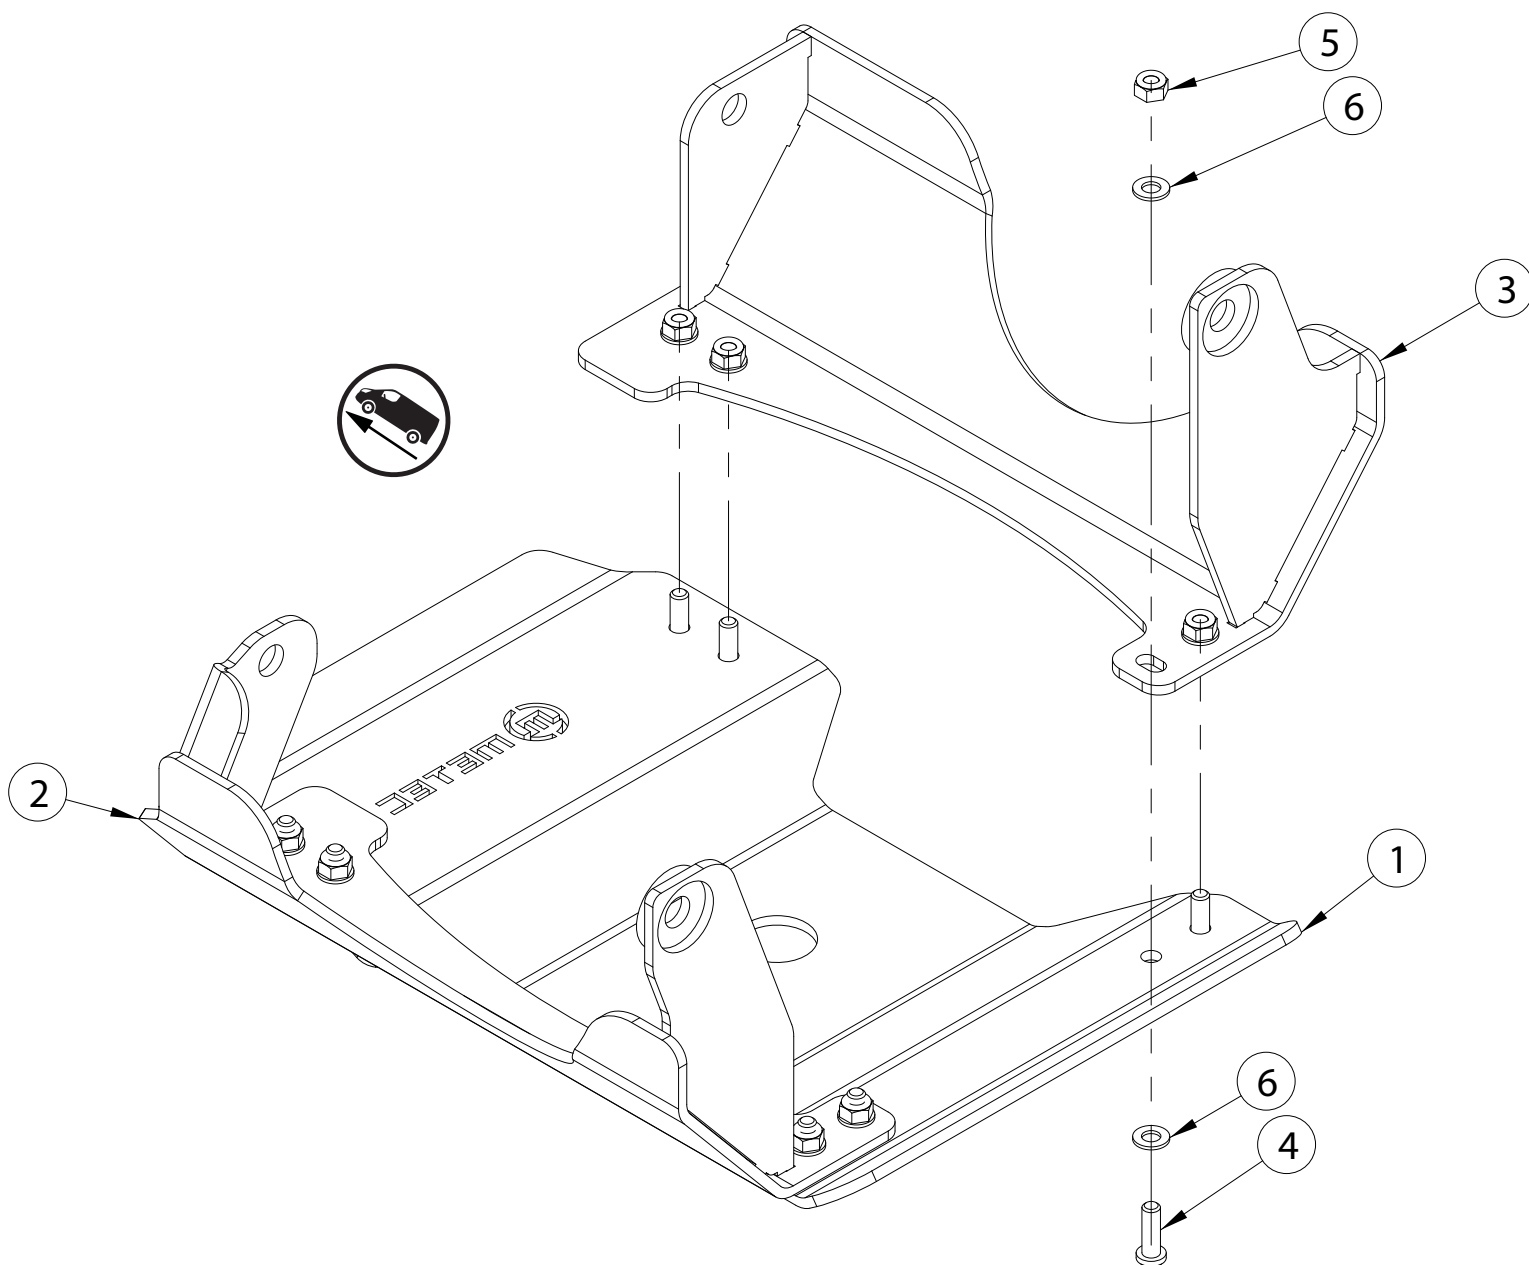


Pos	Description	QTY
1.	Protection plate	1
2.	Protection plate	1
3.	Protection plate	1
4.	Bolt M8x25 DIN7380-A2	8
5.	Nut M8 DIN985-galZn	8
6.	Flat Washer 8,4x16x1,6	16

NB!



To prevent cold welding, use cold weld grease or engine oil

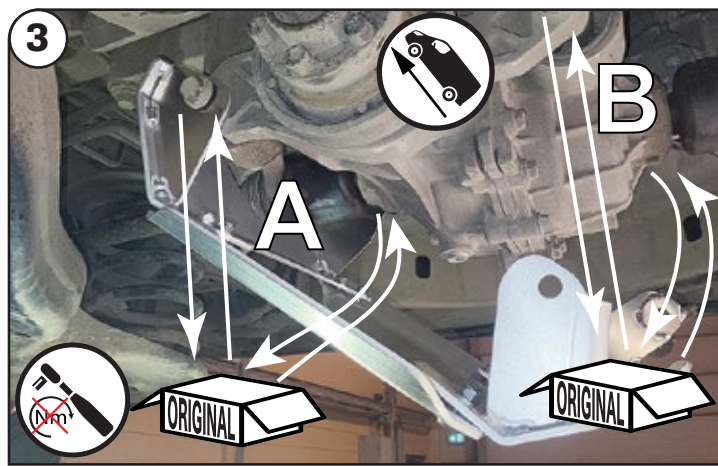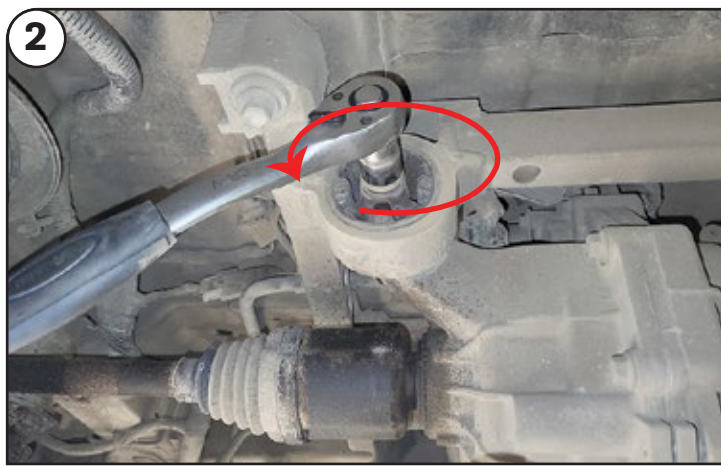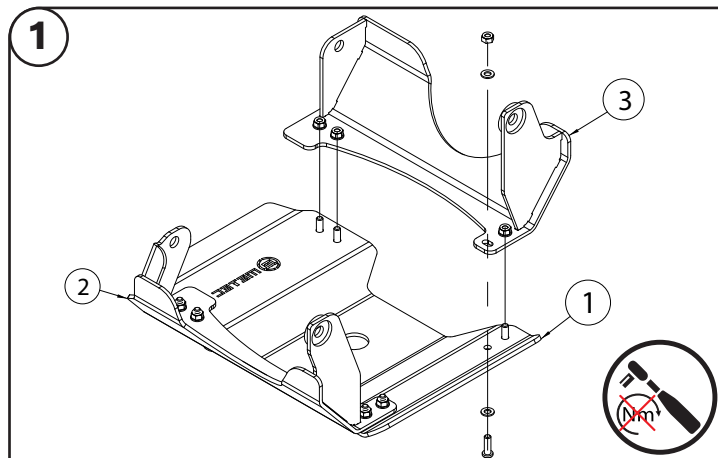

Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours



Clean the product twice a month to remove dirt, salt, and debris that may cause surface discoloration or rust spots