



VW T7 Multivan 2022-

Art. 840862, 84086271


Küljetorude BRACE - IT montaažikomplekt | Sidebars BRACE - IT, mounting kit | Боковая труба BRACE – IT, монтажный комплект | Flankenschutz BRACE - IT, Montagesatz



1. Kronstein / bracket / кронштейн / Konsole	1
2. Kronstein / bracket / кронштейн / Konsole	1
3. Kronstein / bracket / кронштейн / Konsole	1
4. Kronstein / bracket / кронштейн / Konsole	1
5. Latt / mounting bracket / монтажный кронштейн / Montagehalterung	2
6. Latt / mounting bracket / монтажный кронштейн / Montagehalterung	2
7. T-polt / T-bolt / T-болт / T-bolzen	2
8. Klamber / clamp / зажим / Schelle	4
9. Polt / bolt / болт / Bolzen M8x25	20
10. Mutter / nut / гайка / Mutter M8	16
11. Mutter / nut / гайка / Mutter M10	2
12. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	20
13. Seib / flat washer / шайба / Scheibe 8,4x24x2	16
14. Seib / flat washer / шайба / Scheibe 10,5x30x2,5	2
15. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	4
16. Vedruseib / spring washer / пружинная шайба / Federnscheibe A10	2
17. Brace-it paigaldamise abivahend / Brace-it installation tool / Инструмент для установки Brace-it / Brace-it-Installationswerkzeug	2

M8 - 25 Nm

M10 - 50 Nm





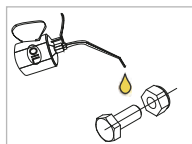










Kaal / Weight / Масса / Gewicht: 4,8 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 30 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



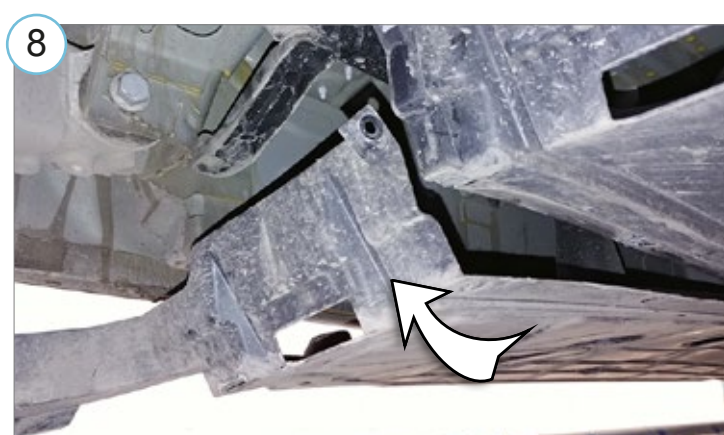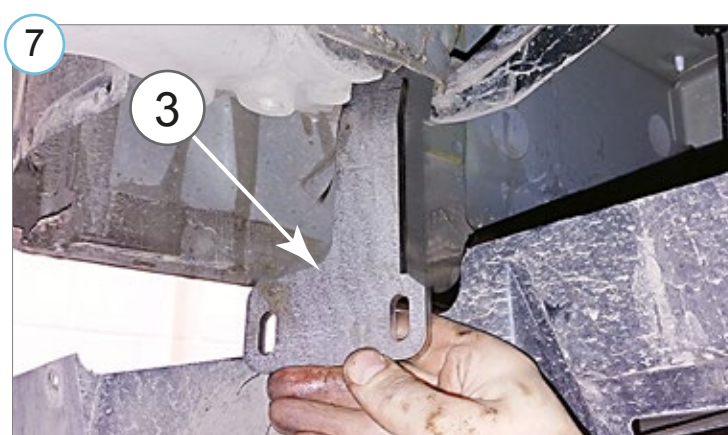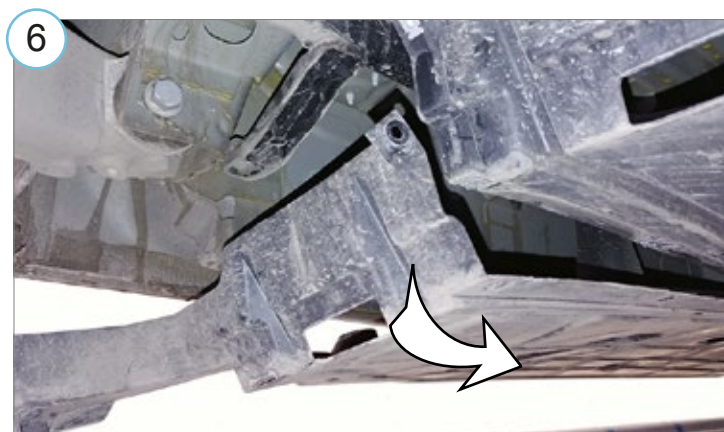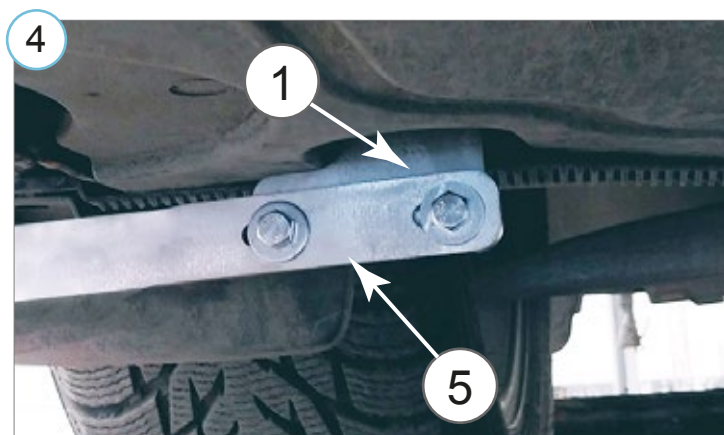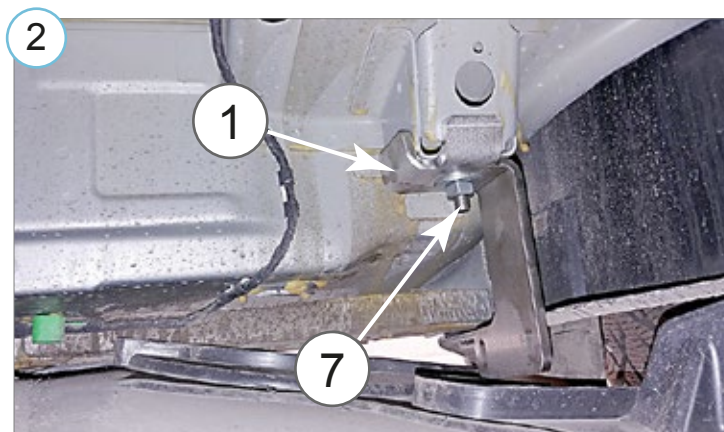

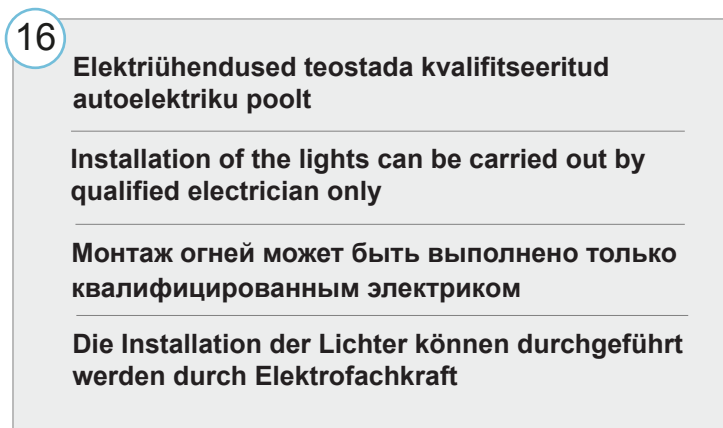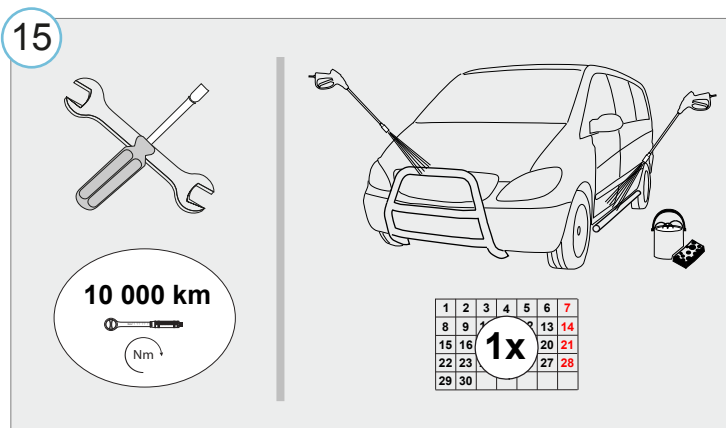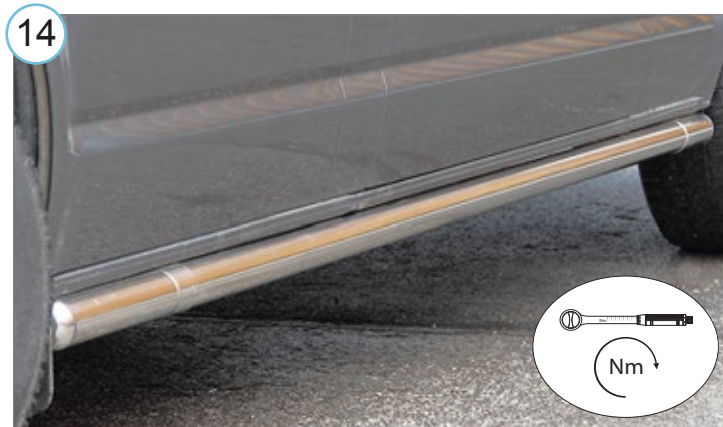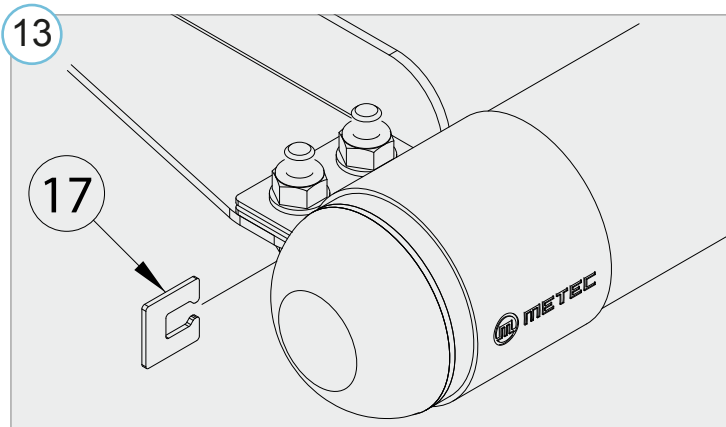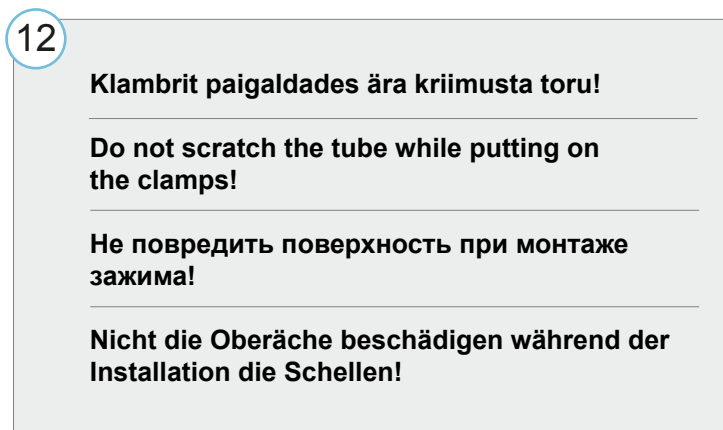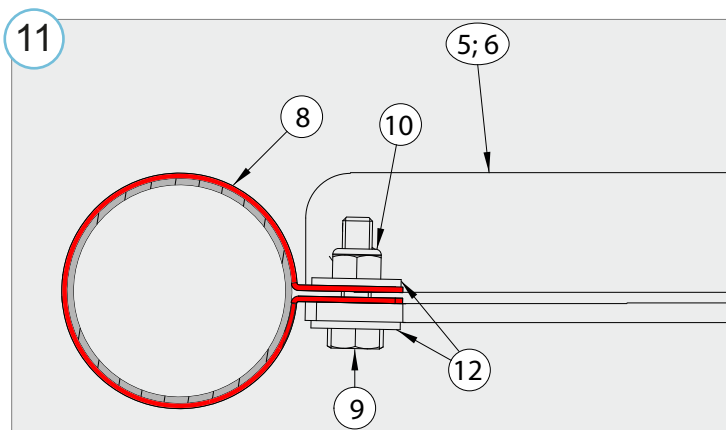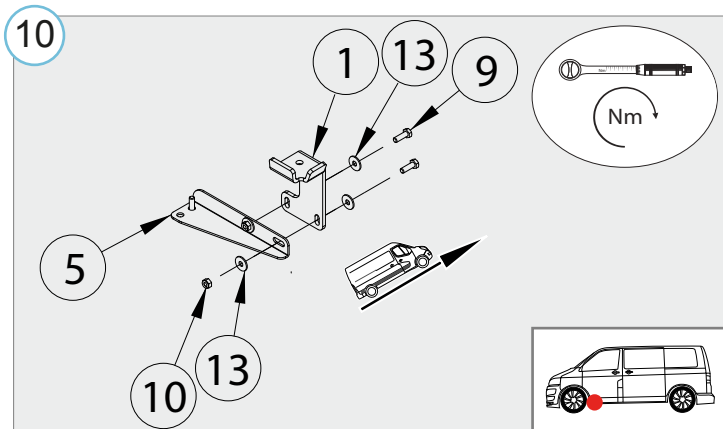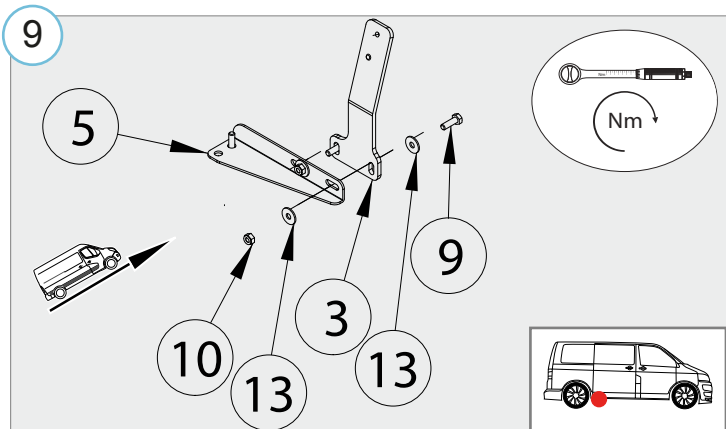

Lisa / extra / приложение / Extra

