

MB Actros 25-

Mounting instructions

Art. 85666370, 85666371

Sidebars

English



WWW.METEC.EE

Scan the QR code
for translated
instructions or visit
metec.ee/instructions




Weight: 3,8 kg

Time of mounting w/o wiring: 45 min

Required tools:



A2 / A4	Zn
M8 - 17 Nm	M10 - 47Nm
M10 - 33 Nm	

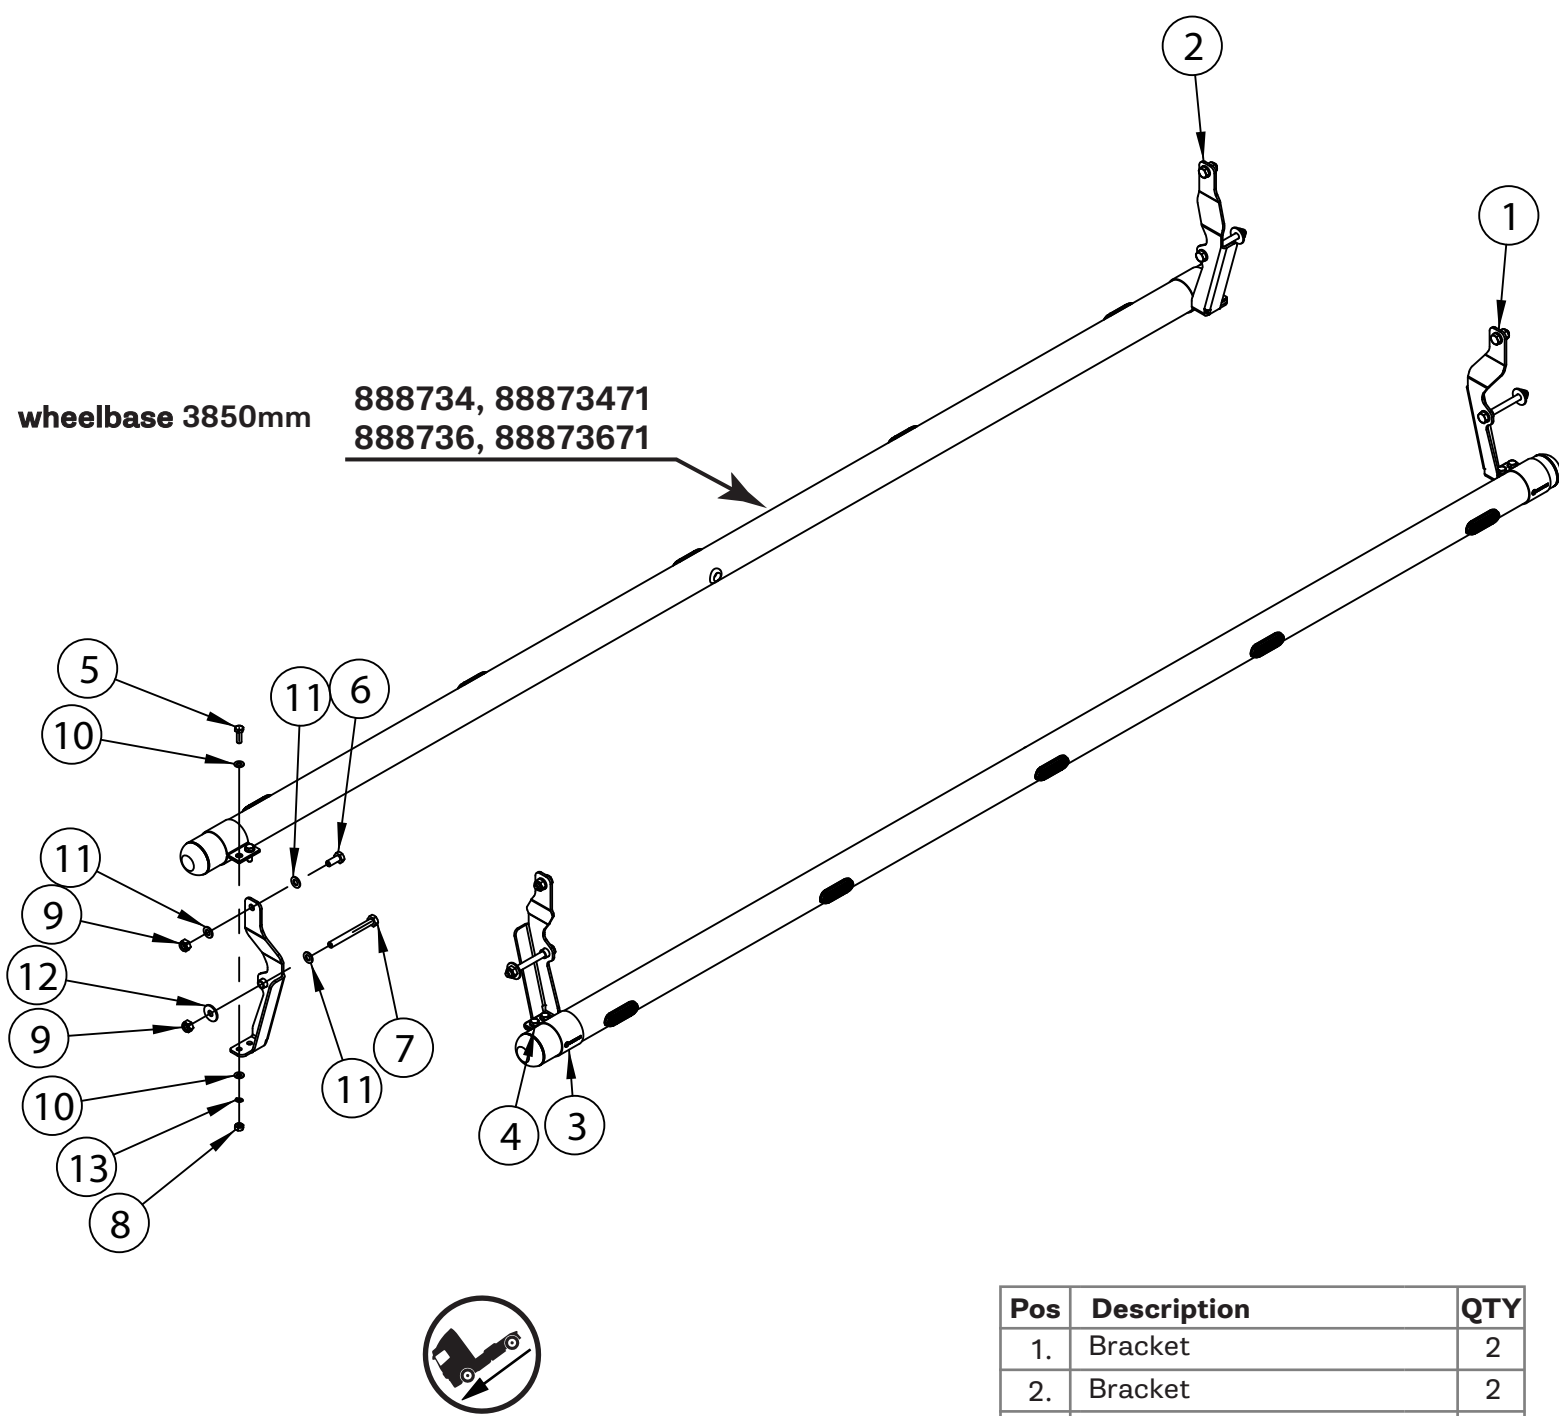

Pos	Description	QTY
1.	Bracket	2
2.	Bracket	2
3.	Clamp	4
4.	Brace-it tool	2
5.	Bolt M8x25 DIN933-A2	8
6.	Bolt M10x25 DIN933-A2	4
7.	Bolt M10x100 DIN933-galZn	4
8.	Nut M8 DIN934-A2	8
9.	Nut M10 DIN985-A2	8
10.	Flat Washer 8,4x16x1,6	16
11.	Flat Washer 8,4x16x1,6	12
12.	Flat Washer 8,4x16x1,6	4
13.	Spring washer A8	8

MB Actros 25-

Art. 85666370, 85666371

Sidebars




NB!



To prevent cold welding, use cold weld grease or engine oil



Installation of the lights must be carried out by a qualified electrician only

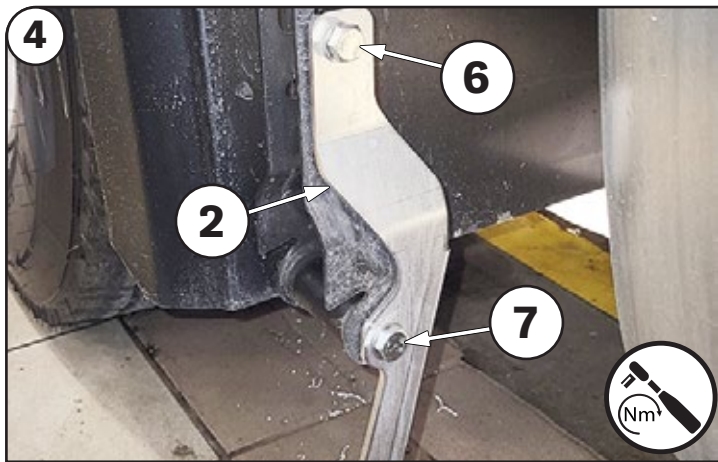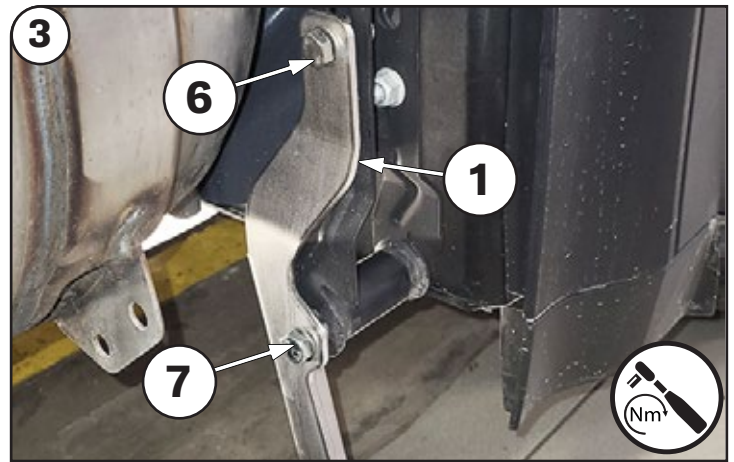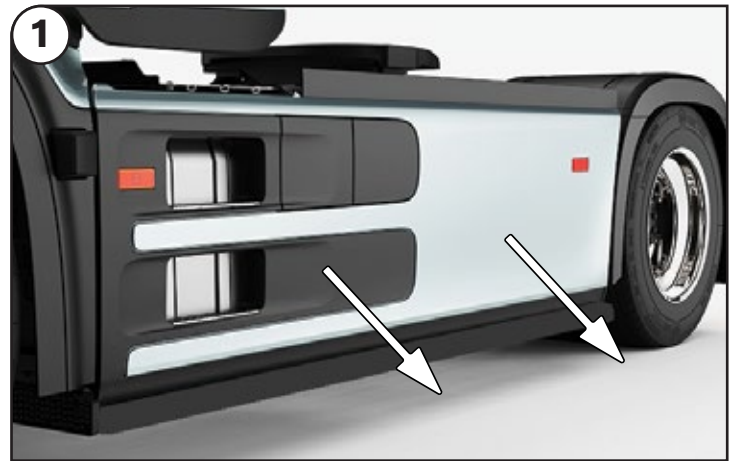

Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours



Clean the product twice a month to remove dirt, salt, and debris that may cause surface discoloration or rust spots

In case of any defects or damage to the METEC product upon delivery, contact the reseller or point of sale where you made your purchase for resolution