



DAF XG 2021-

Art. 850390

Reelingud S-RAIL, külgmised | Railings S-RAIL, side | Перила S-RAIL, боковые | Geländer S-RAIL, Seite




1. Look / arc / дуга / Bogen	1
2. Look / arc / дуга / Bogen	1
3. Polditav kronstein / bolt bracket / кронштейн / Bolzenhalterung	6
4. Kronstein / bracket / кронштейн / Konsole	1
5. Kronstein / bracket / кронштейн / Konsole	1
6. Kronstein / bracket / кронштейн / Konsole	1
7. Kronstein / bracket / кронштейн / Konsole	1
8. Kronstein / bracket / кронштейн / Konsole	1
9. Kronstein / bracket / кронштейн / Konsole	1
10. Polt / bolt / болт / Bolzen M8x20	24
11. Polt / bolt / болт / Bolzen M8x25	2
12. Seib / flat washer / шайба / Scheibe 8,4x16x1,6	36
13. Seib / flat washer / шайба / Scheibe 8,4x24x2	8
14. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	14
15. Mutter / nut / гайка / Mutter M8	12

Elektriühendused teostada kvalifitseeritud autoelektriku poolt

Installation of the lights can be carried out by qualified electrician only

Монтаж огней может быть выполнено только квалифицированным электриком

Die Installation der Lichter können durchgeführt werden durch Elektrofachkraft

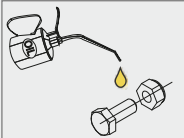

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.

Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.

Для предотвращения холодной сварки используйте смазку от холодной сварки или моторное масло.

Kaal / Weight / Масса / Gewicht: 11,46 kg







Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ /




Einbauzeit ohne elektrische arbeit: 60 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



M8 - 25 Nm

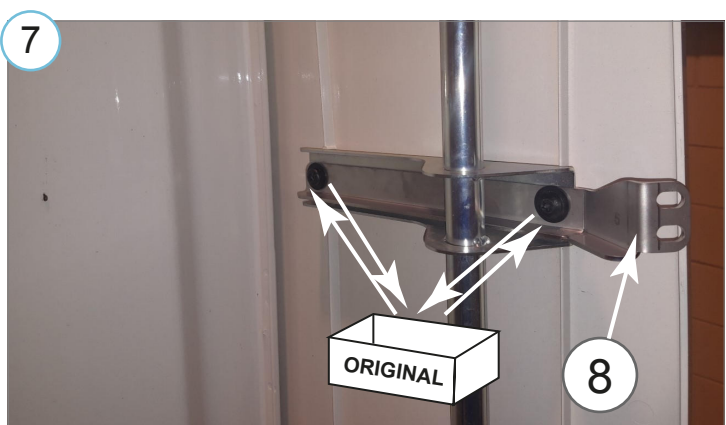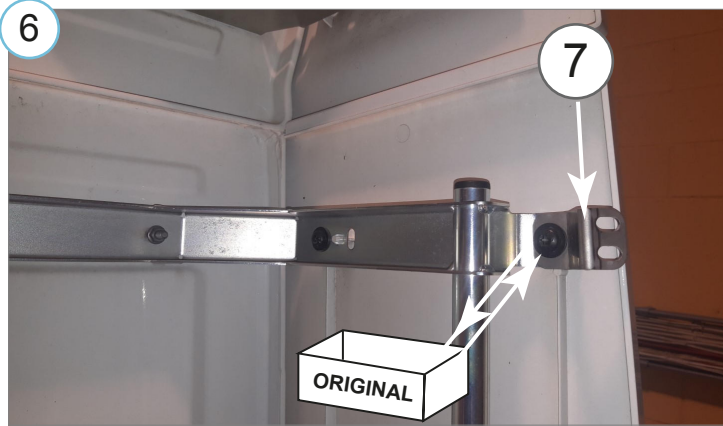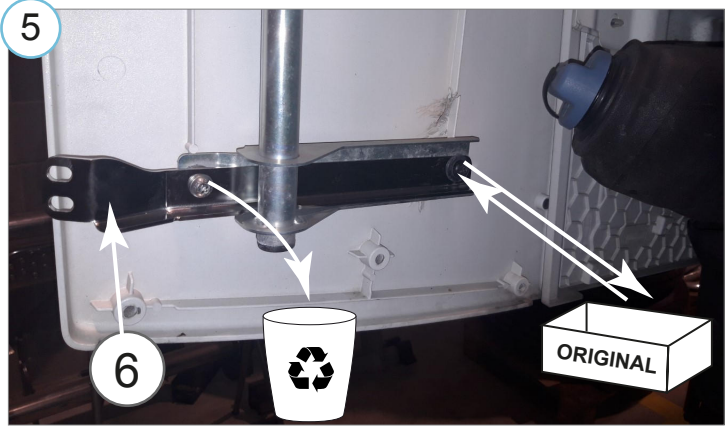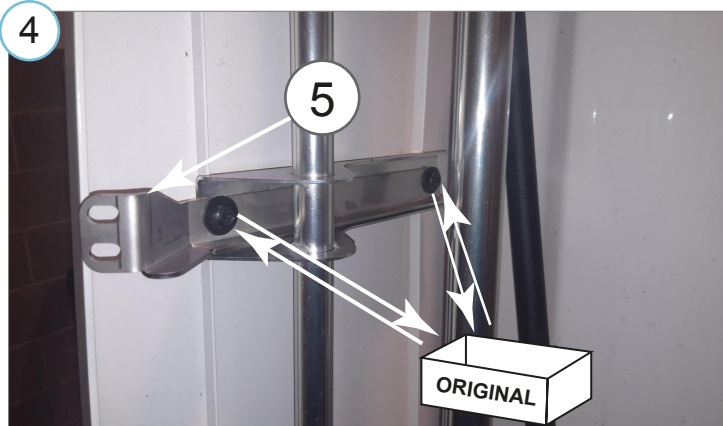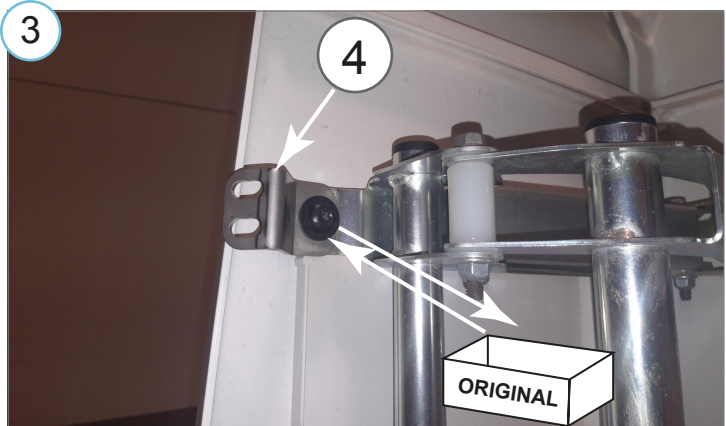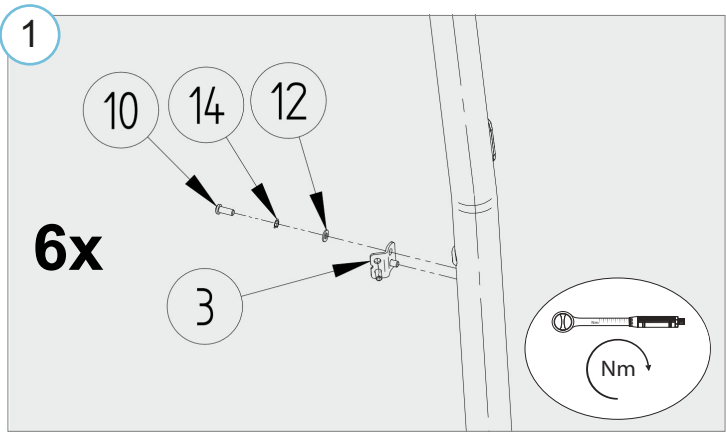

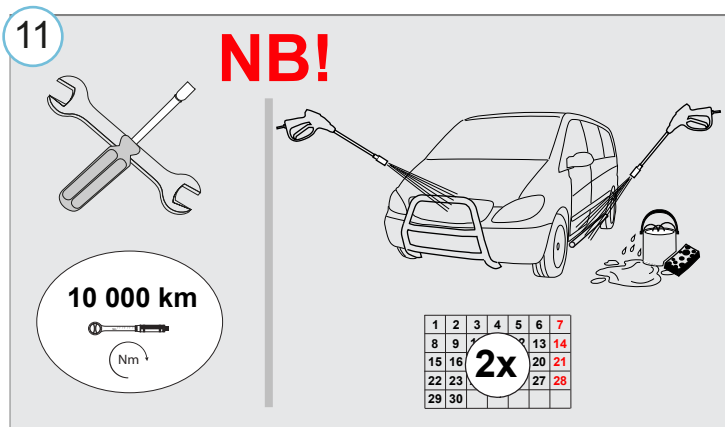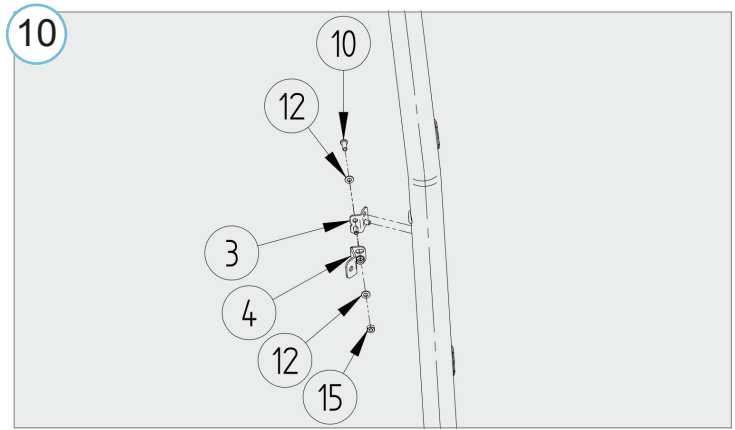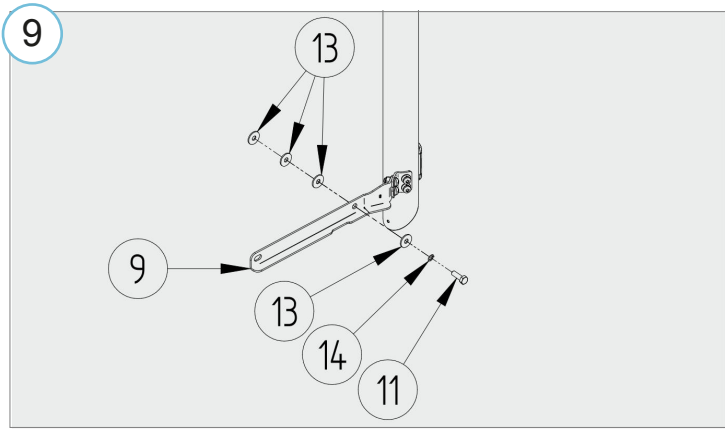

Lisa / extra / приложение / Extra

