



Scania S 2016- (high cabin)


Art. 864662, 86466271

Reelingud, külgmised | Railings, side | Перила, боковые | Geländer, Seite



- | | |
|---|----|
| 1. Look / arc / дуга / Bogen | 1 |
| 2. Look / arc / дуга / Bogen | 1 |
| 3. Look / arc / дуга / Bogen | 1 |
| 4. Look / arc / дуга / Bogen | 1 |
| 5. Polditav kronstein / bolt bracket / кронштейн / Bolzenhalterung | 8 |
| 6. Kronstein / bracket / кронштейн / Konsole | 1 |
| 7. Kronstein / bracket / кронштейн / Konsole | 1 |
| 8. Kronstein / bracket / кронштейн / Konsole | 1 |
| 9. Kronstein / bracket / кронштейн / Konsole | 1 |
| 10. Kronstein / bracket / кронштейн / Konsole | 1 |
| 11. Kronstein / bracket / кронштейн / Konsole | 1 |
| 12. Kronstein / bracket / кронштейн / Konsole | 1 |
| 13. Puks / bushing / букса / Buchse L=40 | 1 |
| 14. Puks / bushing / букса / Buchse L=32 | 1 |
| 15. Puks / bushing / букса / Buchse L=37 | 1 |
| 16. Polt / bolt / болт / Bolzen M6x35 | 3 |
| 17. Polt / bolt / болт / Bolzen M6x55 | 2 |
| 18. Polt / bolt / болт / Bolzen M8x20 | 31 |
| 19. Polt / bolt / болт / Bolzen M8x60 | 1 |
| 20. Mutter / nut / гайка / Mutter M8 | 16 |
| 21. Seib / flat washer / шайба / Scheibe 6,4x18x1,6 | 5 |
| 22. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 48 |
| 23. Vedruseib / spring washer / пружинная шайба / Federnscheibe A6 | 5 |
| 24. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 16 |
| 25. Juhtmesiduja / Cable tie / Стяжки для кабеля / Kabelbinder 98x25 mm | 10 |



NB!

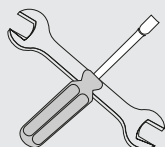

10 000 km



Nm

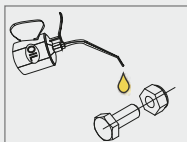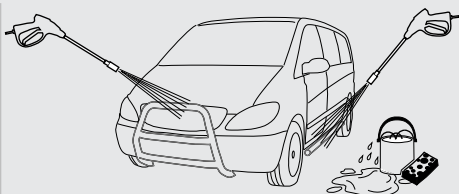

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.

Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.

Для предотвращения холодной сварки используйте смазку от холодной сварки или моторное масло.

Elektriühendused teostada kvalifitseeritud autoelektriku poolt / Electrical connections can be carried out by a qualified electrician only / Электрические работы должны быть сделаны только квалифицированным автоэлектриком /

Elektrische Anschlüsse müssen von einem qualifizierten Kfz-Elektriker vorgenommen werden

Kaal / Weight / Macca / Gewicht: 17,98 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ /









Einbauzeit ohne elektrische arbeit: 60 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge











M6 - A2 - 6,1 Nm
M8 - A2 - 15 Nm











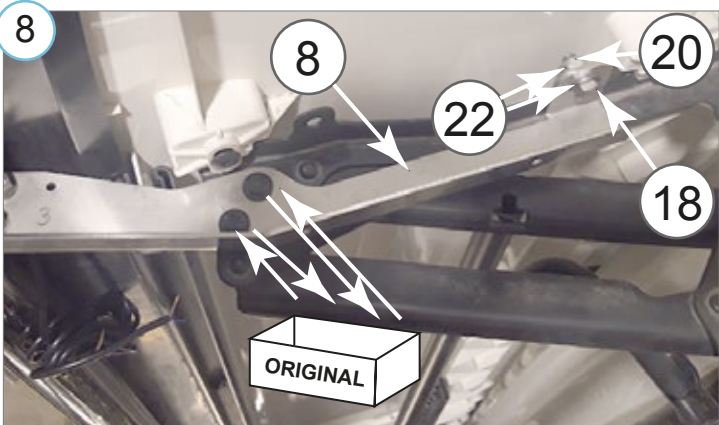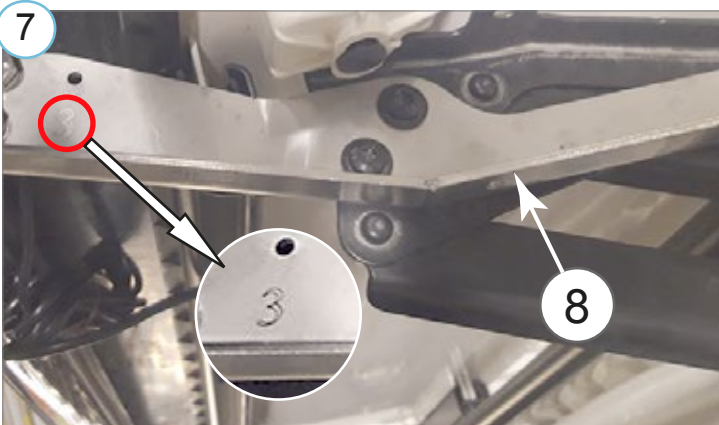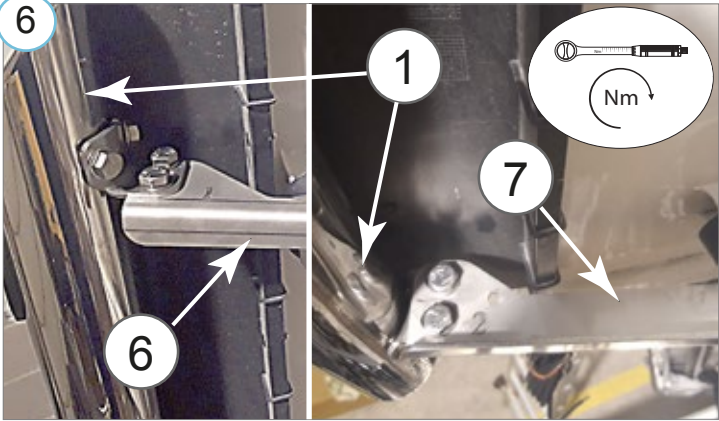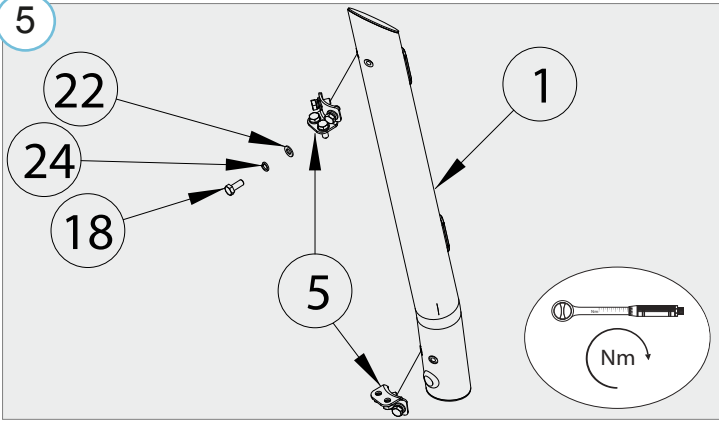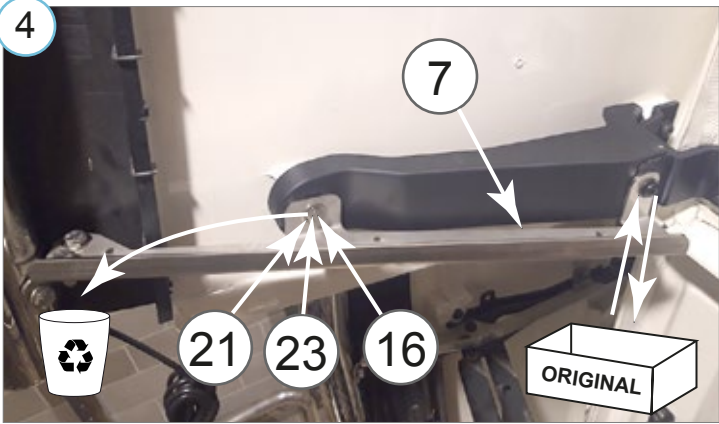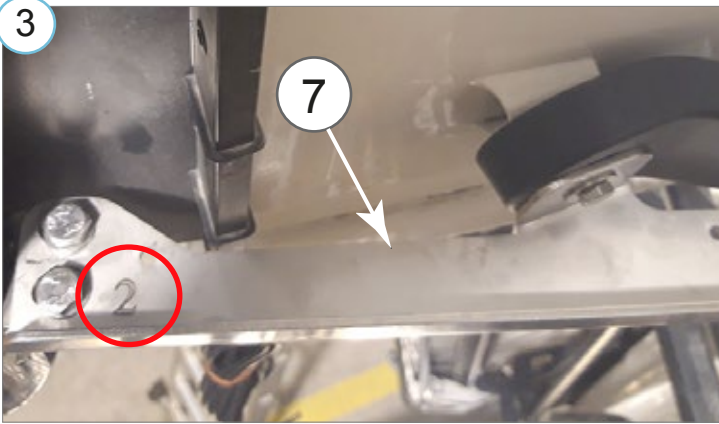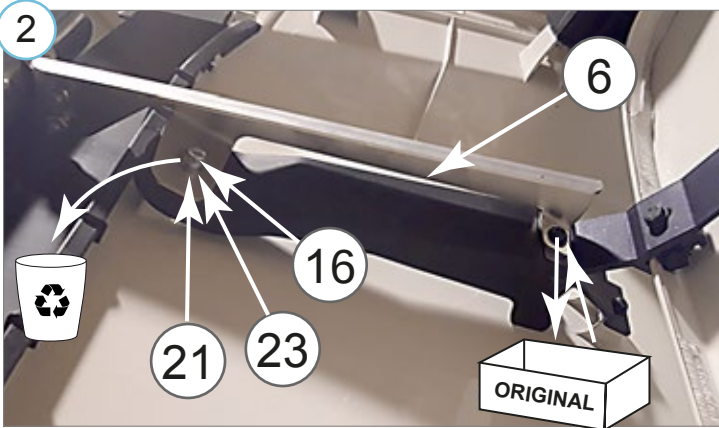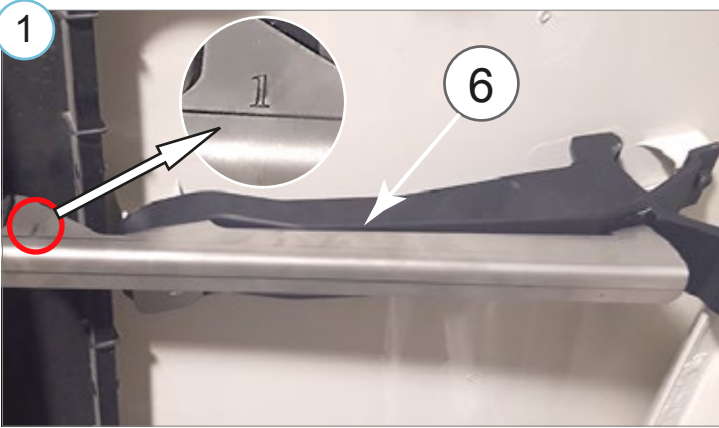

Scania S 2016- (high cabin)

Reelingud, külgmised | Railings, side | Перила, боковые | Geländer, Seite

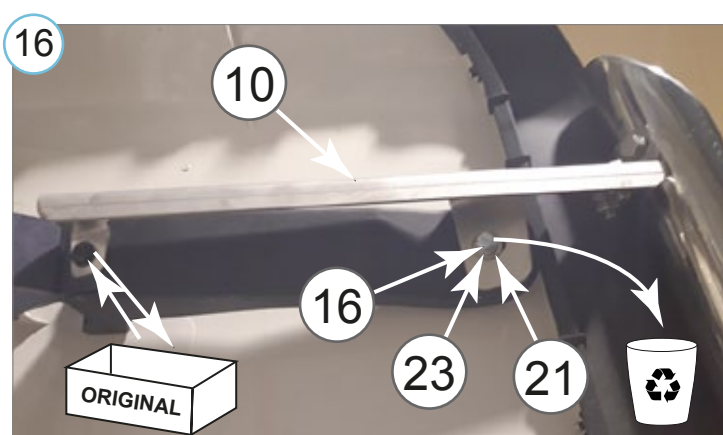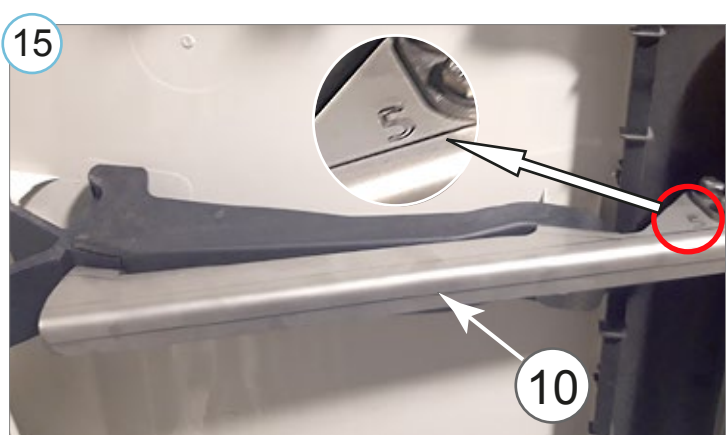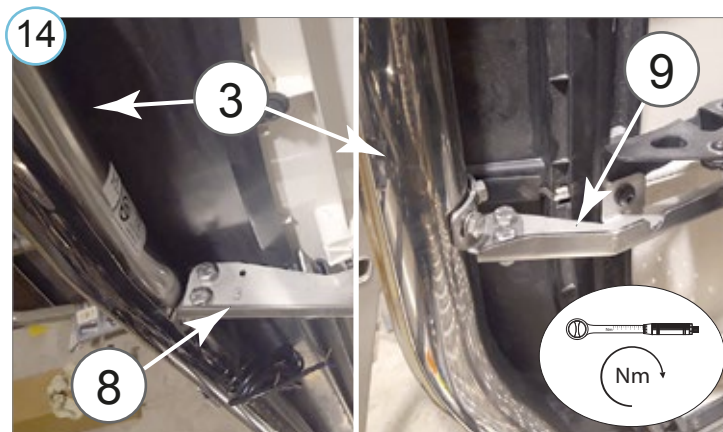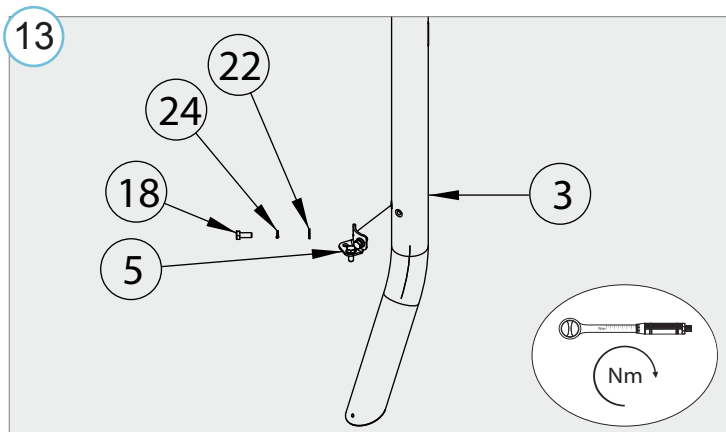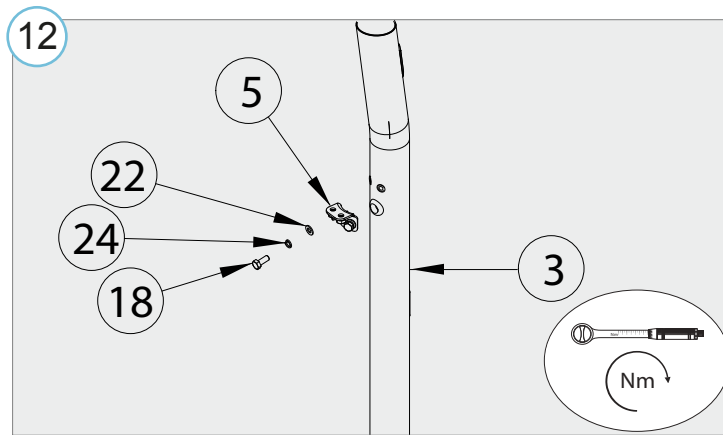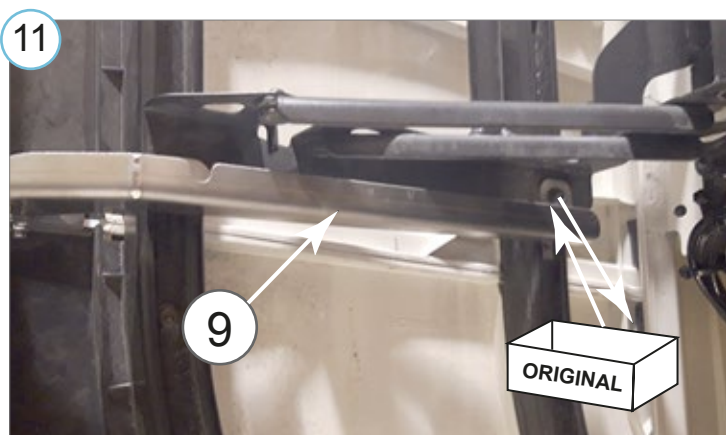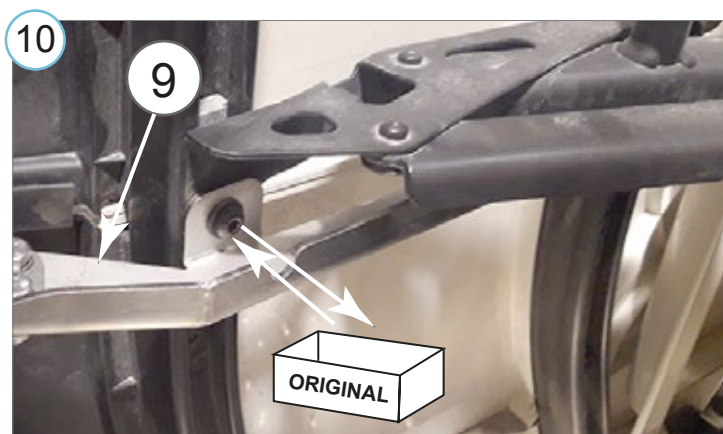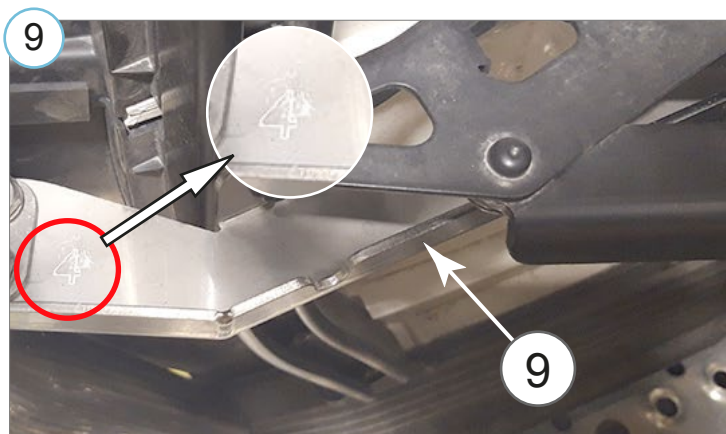

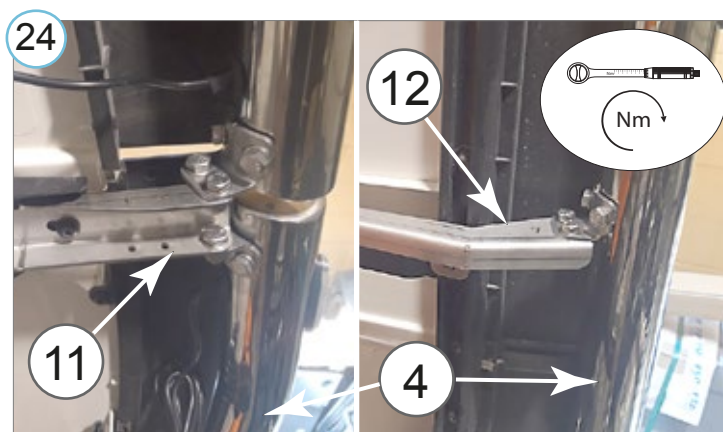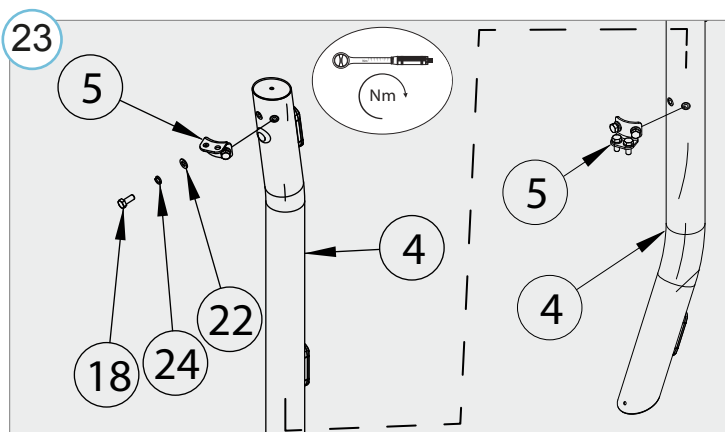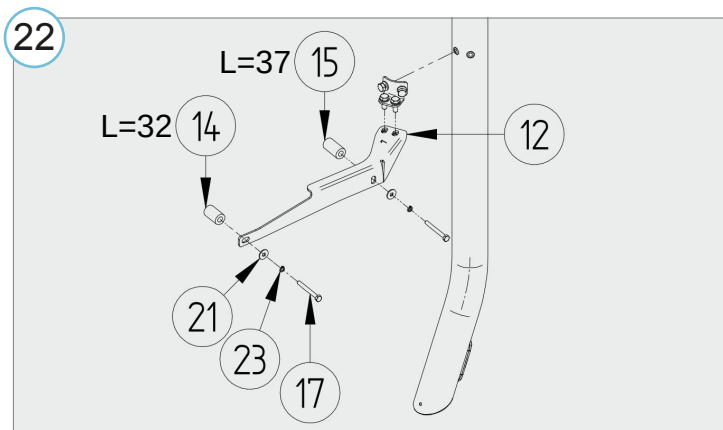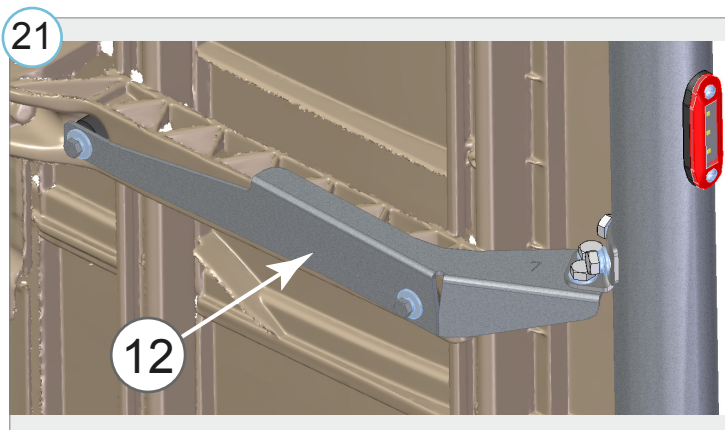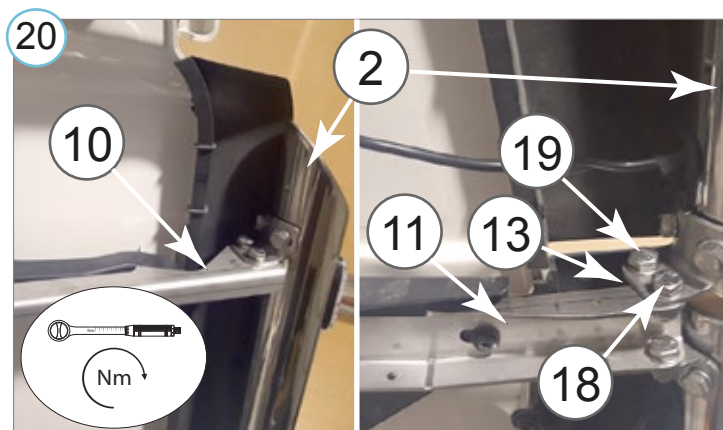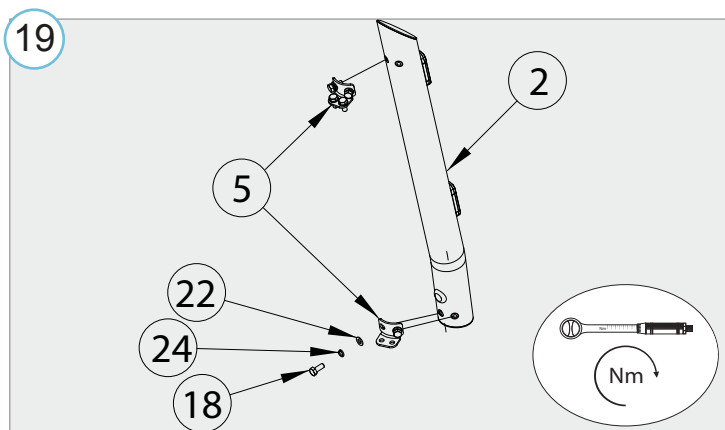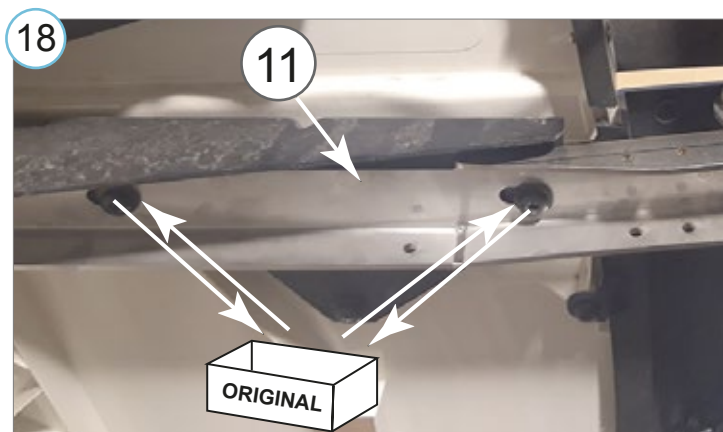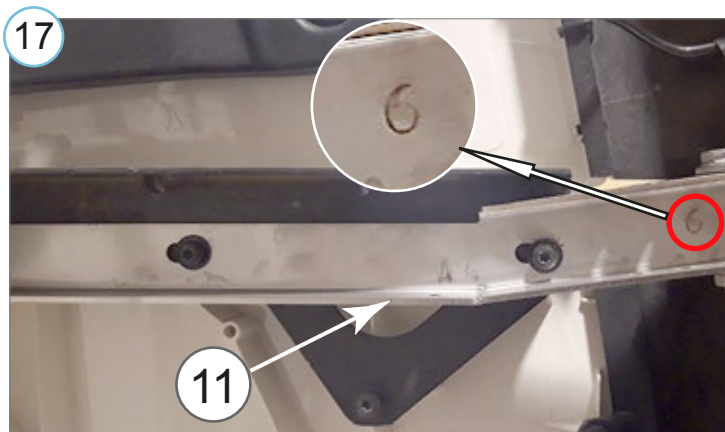

Lisa / Annex / приложение / Anhang

